


MINI AIR COMPRESSOR TC-501

PARTS LIST

CSA file No.202925
CE order No.199648136

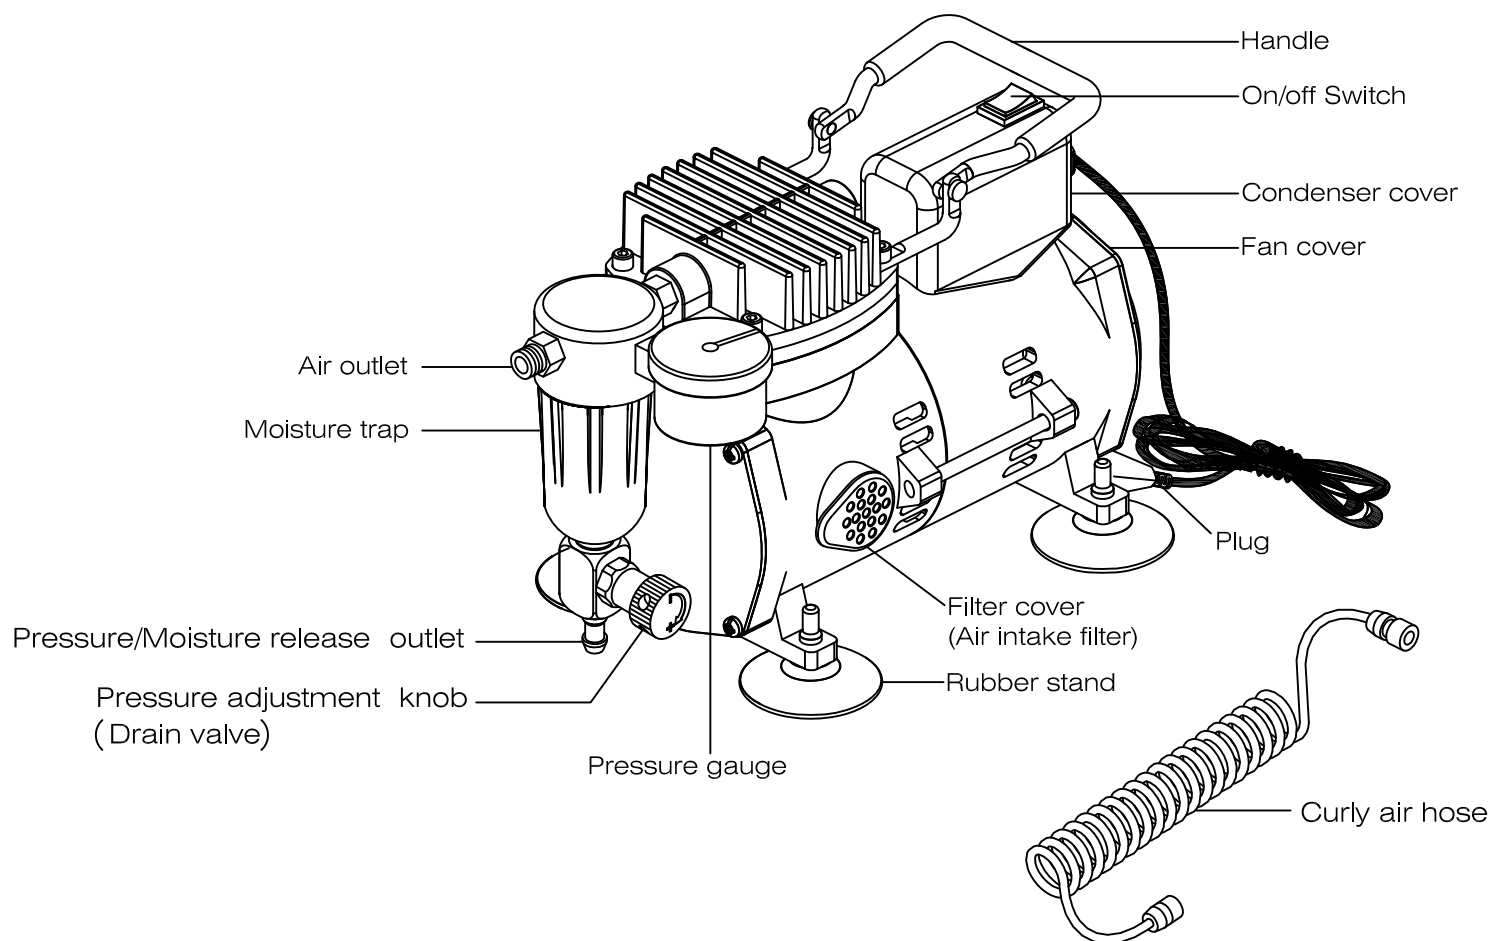

※Please Check the Spec. label on the machine

APPLICATION PRECAUTION

- 1) Carefully unpack the machine and check if any part is damaged during transportation. Any damage should be reported immediately to the service agent.
- 2) Plug the compressor into mains supply, making sure the voltage is correct. Screw one side of the air hose onto the compressor outlet and connect the other end to the airbrush. To make sure all connections are tightened, it is also recommended to use Plumbers Teflon Tape on all threaded connections. (Extra fittings may be required for various airbrush brands, models, please check with the distributors for supply.)
- 3) Turn on the machine and depress the airbrush trigger as this will release the compressed air inside the machine.
- 4) Work in a well ventilated, clean area and away from wet surfaces.
- 5) The compressor has a thermal switch that automatically shuts-off itself when it becomes overheated or lack of voltage.
- 6) Adjust the pressure by turning the *Pressure Adjustment Knob* clockwise for more pressure. Turn counter-clockwise for less pressure. Adjusting pressure only when the compressor is turned on and connected to the airbrush.
- 7) Do not touch the air compressor during or soon after use as it may become hot.
- 8) Do not use any lubricant, or spray flammable, toxic materials as they may damage the air compressor.
- 9) When restarting the compressor during operation, always release the compressed air from the airbrush first and then turn on again.
- 10) To maintain the best performance, it is suggested not to keep the machine running continuously over one hour and to allow machine to cool down.
- 11) After finishing with the compressor, turn the switch to off position and depress the airbrush trigger to fully release the remaining air from the compressor.
- 12) Improper operation and dismantling of the parts might damage the compressor. If any parts of the machine are damaged, it must be sent to the service agent for replacement or repair to avoid hazard. Do not attempt to fix the machine without consulting the service agent first.