

1) Select pencil point sharpness by moving selector lever to desired angle.

2) Squeeze top two levers together to open internal "jaws".


3) Whilst squeezing the levers together pull the Carriage containing the levers forward **THEN** insert your pencil as far as it will go.

4) Release the levers (the jaws should grab the pencil and the Carriage will remain extended). **NOW** rotate handle to sharpen pencil.

5) Whilst you turn the handle the Carriage will draw the pencil into the sharpener allowing it to be sharpened.


6) Once the pencil is sharp the handle will continue to rotate but the pencil will stop being sharpened.

7) Squeeze the top levers together to open the jaws then remove your sharpened pencil.

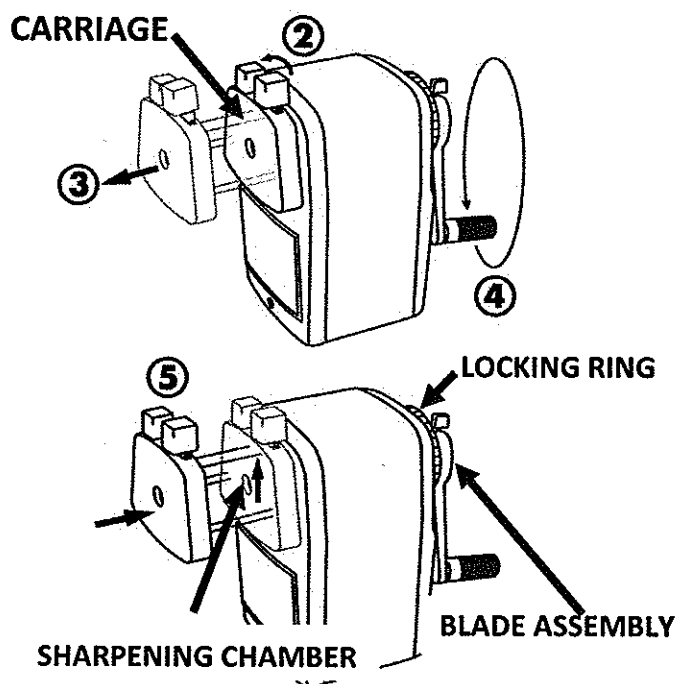

NOTE:

If the handle just rotates without sharpening the pencil, you may find the sharpening chamber is blocked with a broken piece of lead. This must be removed in order for the sharpener to work correctly.

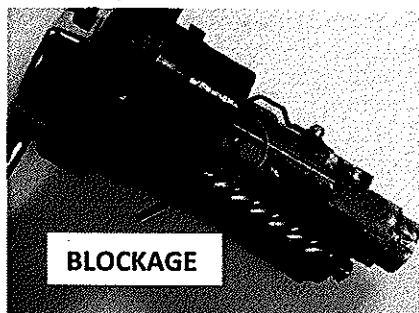

To Clear Broken Lead

- 1) Twist Locking Ring and Remove Blade Assembly.
- 2) Find blockage then remove with a piece of wire, (bent paper clip).
- 3) Carefully replace Blade Assembly, twist Locking Ring to lock into place.

****WARNING****

NEVER USE THIS SHARPENER TO SHARPEN WAX CRAYONS OR PASTEL PENCILS
THE WRITING MEDIUM IS TOO SOFT. IT WILL BREAK AND BLOCK THE SHARPENING CHAMBER