

NightSearcher PULSAR-PRO5 (R/B/Y/G) User manual



Battery	Li-ion 700mAh 3.7V
Product Dimensions	Dia 110 x H 34 mm
Product Weight	2.7kg including battery
NS Part No	NSPULSARPRO5-(R/Y/B/G)
Supplied with	Case, Mains and car charger

Running time per lighting mode

Rotate	9 h	Steady on high	5 h
Quad flash	9 h	Steady on low	35 h
Single blink	60 h	2 LED light	28 h
Alternating blink	9 h	4 LED light	18 h
SOS Rescue	14 h	White flood	8 h

ON/OFF
SWITCH

Charging
Connectors



Charging
connection light



Recharge via
100-240V or

Storage for
chargers



Mode operation - Product information - Warning

Operation

Press the switch, located near the front white LED, once. Press again to change and cycle through the 9 modes.

To turn off the warning light without cycling through the 9 light pattern, press and hold the ON/OFF button for 2 seconds. Two LEDs will flash five times and then turn off. When ready to operate again, press the ON/OFF button once and it will return to the last flash pattern that was selected before turning off. To switch on the six white LEDs press the switch twice in rapid succession. To switch off the six white LEDs press the switch twice in rapid succession again.

Battery charging

- 1) Place from 1 to 5 Pulsar into the pockets in the charging case with the NightSearcher logo facing up and lining the silver charging input guides over the outputs. When placed correctly the (+) and (-) terminal symbols will be aligned. The Pulsar are held inside of the pocket by the magnet.
- 2) Plug the male end of the appropriate 12V or 240-100V Charging Adaptor into the power input socket in the charging case.
- 3) Plug the 12V or 240-100V Charging Adaptor into either a 12V car cigar socket or 240-100V wall socket. Red Power Adaptor Indicator Light = will illuminate on either power adaptor when plugged into a power source. Green/Yellow Charging Indicator Light = charge in process. Light will go green to yellow during charging process. Red Charging Indicator Light = fully charged OR there is no Pulsar present to charge
- 4) To close completely the lid while charging the units make sure the cable sits within the slot provided.

Warning

Do not expose the battery to excessive heat, to do so may cause an explosion. Do not use metal objects to short circuit the positive and negative end of the battery. Do not dispose of the battery in the domestic waste, please use the correct method of disposal. Do not solder directly on to the battery. Do not let the battery become wet or immerse the battery in water. Keep the battery away from children. The operating temperature range of the warning light's battery: Charging: 0°C to 30°C / Discharging: -40°C to 60°C

General

There are no user serviceable parts in this unit. In case of any problems or questions please contact NightSearcher Limited or an authorised distributor. Do not shine the warning light directly into people's eyes, as it may damage their eyesight.