

How to Setup & Connect your PiJuice battery

[PiJuice Batteries](#)

We now stock a number of PiJuice batteries with various capacity to suit all of your PiJuice power needs. All the batteries in our store are Lithium Polymer and come with a 3-pin JST connector and a charging protection circuit built-in.

Note: Whilst every effort has been made to ensure the safety of these batteries it is important that you do not abuse them by bending, crushing, piercing or shorting. Any of these actions may cause serious harm and possible fire risk.

[Available PiJuice batteries](#)

The list below is fully comprehensive list of Lithium Polymer batteries that are compatible with the PiJuice:

- 12000mAh - [PIS-1129](#)
- 5000mAh - [PIS-1131](#)
- 1200mAh - [PIS-1135](#)
- 1200mAh - PIS-1189 (Pi Zero)
- 1000mAh - PIS-1190 (Pi Zero)
- 600mAh - PIS-1191
- 500mAh - PIS-1218






[Connecting your battery to the PiJuice HAT](#)

Step 1 - In order to connect the battery to the PiJuice HAT you will need to cut the connector off the battery lead and strip the end of the cable to expose the wires. First cut the connector off the end of the battery lead one by one:



Step 2 - Carefully cut off approximately 10mm of the outer plastic to expose the bare wires on each wire. Be careful not to cut through the wire. Once the wires are exposed, twist the strands together.

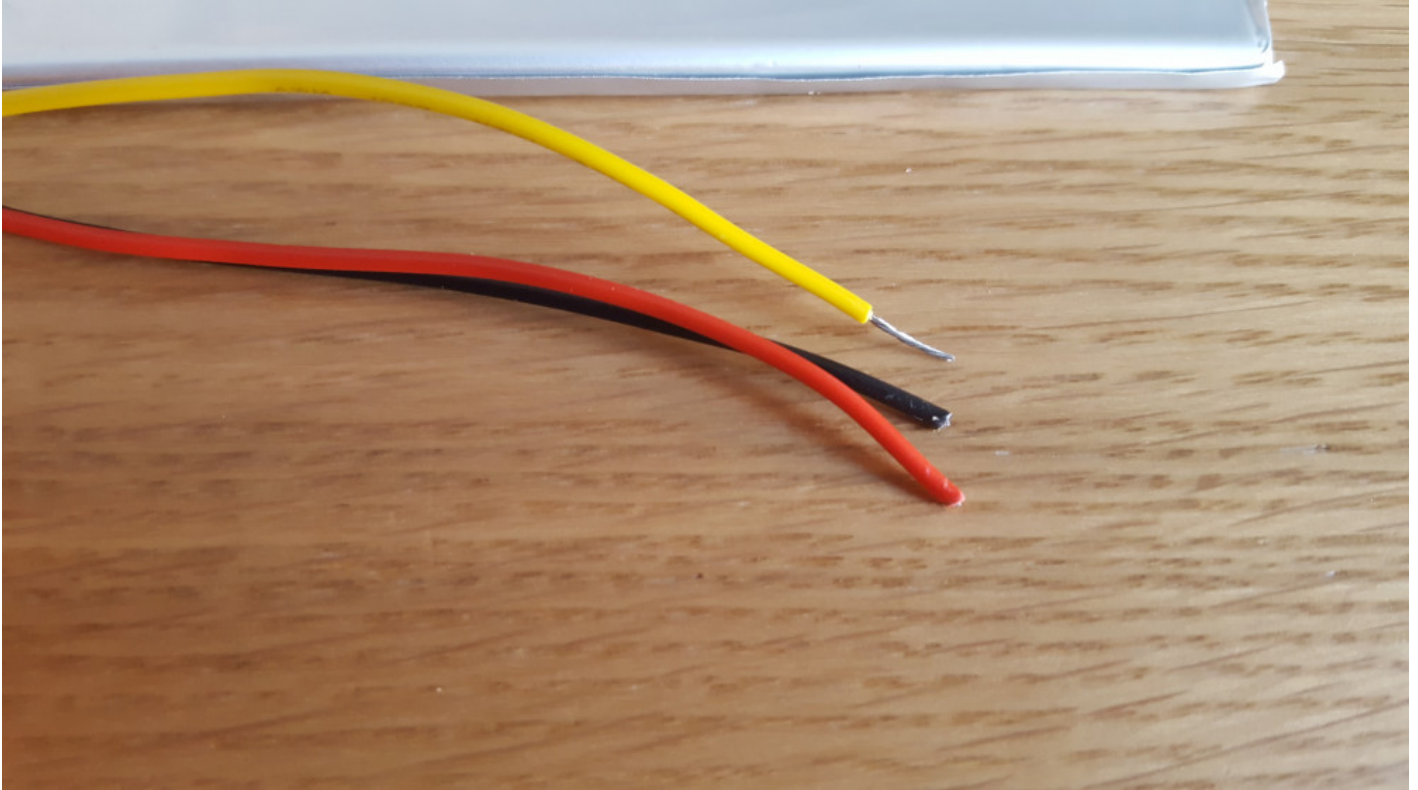

Note: Make sure that when the wires are exposed that they do not touch otherwise this could short the battery. If possible stick a small amount of tape on the red wire.


Step 3 - Make sure your PiJuice is shutdown and carefully remove the battery by flipping up the side which is labelled "Battery removal here".



Step 4 - Unscrew the battery terminals on the PiJuice and insert the wires into the following slots:

- GND - Black Wire
- NTC - Yellow Wire
- VBAT - Red Wire

Once inserted screw down until the wire is firmly in place. Tug on the wire with a little pressure to make sure.

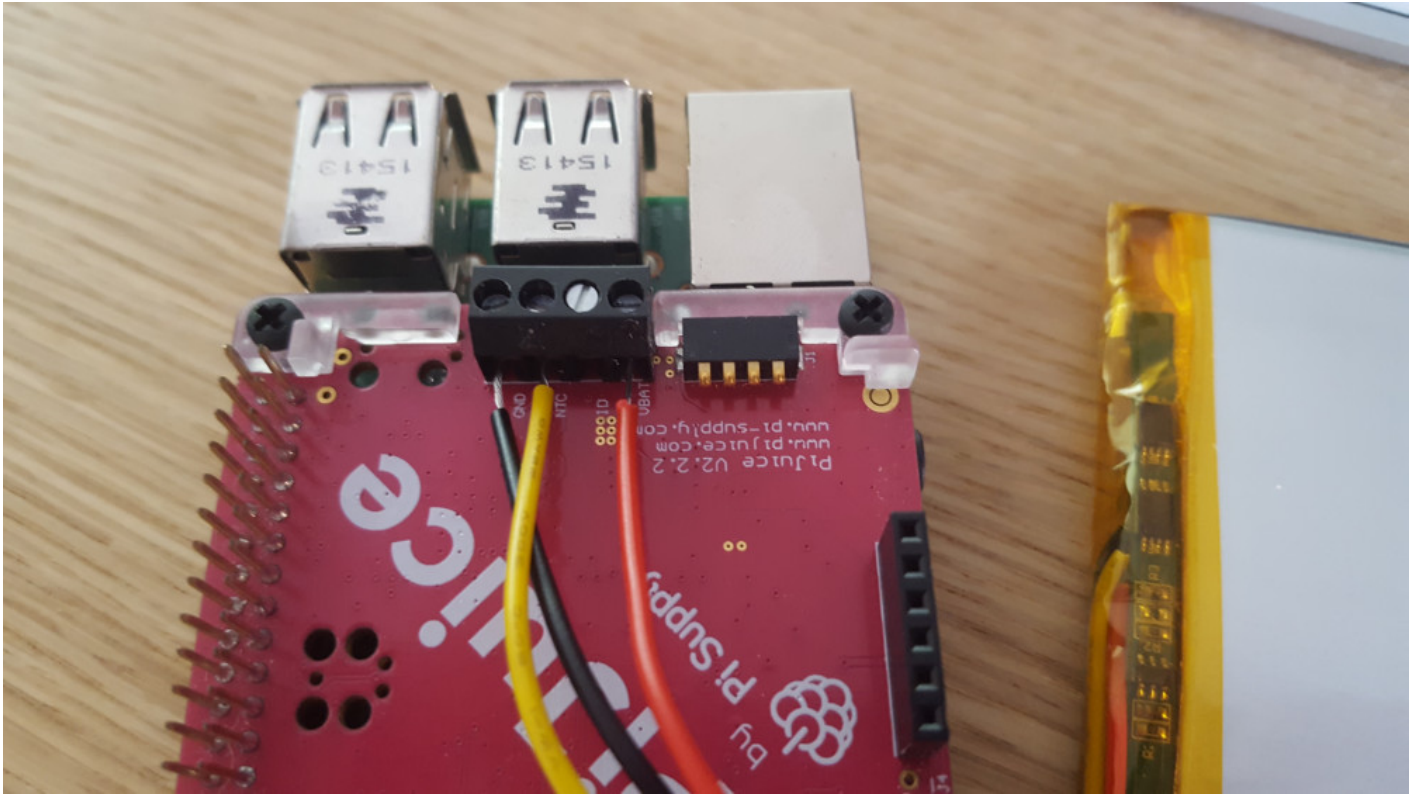

[Configuring your battery profile](#)

If you haven't done so already you will need to install the PiJuice software. You can do this by entering the following commands in the terminal window:

PiJuice GUI

```
sudo apt-get install pijuice-gui
```

PiJuice CLI

```
sudo apt-get install pijuice-base
```

Step 1 - Open up the PiJuice configuration menu and head over to the "Battery" configuration menu.

Step 2 - Check the "custom" checkbox and fill out the battery parameters according to your battery specification.

Note: The following example is the battery settings for the 5000mAh battery with built-in NTC and standard charge current.

	PIS-1129	PIS-1131	PIS-1135	PIS-1191
Charge Voltage	4.2V	4.2V	4.2V	4.2V
Nominal Voltage	3.7V	3.7V	3.7V	3.7V
Capacity	12000mAh	5000mAh	1200mAh	600mAh
Standard Charge Current	2400mAh (0.5C)	1000mAh (0.2C)	240mAh (0.2C)	120mAh (0.2C)
Termination Current	600mAh	250mAh	60mAh	30mAh
Operating Temperature	Charge:0~45 Discharge: -20~60	Charge:0~45 Discharge: -20~55	Charge:0~45 Discharge: -20~60	Charge:0~45 Discharge: -10~60