


Transmitter instructions

changing the code - returning to the default code

VM130T



The transmitter comes with a factory default code. However, for security reasons, it might be wise not to use the default code.

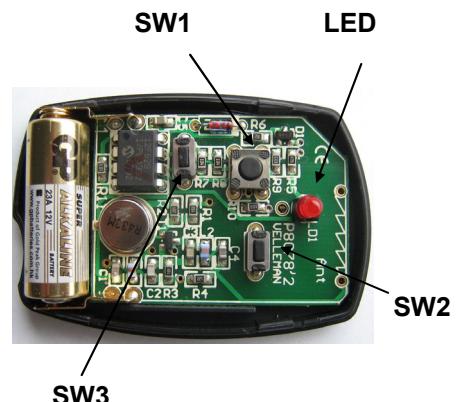

CHANGING THE CODE

1) Open the enclosure :

open



SW1= CHANNEL 1, SW2= CHANNEL

2) Changing the code :

1. Open the enclosure.
 2. Hold **SW1** (left button)
 3. Briefly press the 'program'-button (**SW3**) 3 times. The LED will flash 3 times.
 4. Release **SW1**.
 5. Your unique 32-bit code has been generated and stored.

RETURN TO THE DEFAULT CODE

1) Open the enclosure :

open



SW1= CHANNEL 1, SW2= CHANNEL 2

2) Return to the default code :

1. Open the enclosure.
 2. Hold **SW1** (left button).
 3. Hold the 'program'-button (**SW3**). After +/- 10s the led will flash **5** times.
 4. Release both buttons.
 5. Your code has been reset to the default code.