Streaming Cable Tutorial

Run your LattePanda as a 'virtual machine' on any computer but faster, easier and more stable to operate. The Streaming Cable is the first virtual network cable to **support RNDIS and 5G bandwidth**, much faster than a gigabyte NIC and compatible with any Remote control protocol like NX, RDP, and VNC. Please follow the instruction below to set up your first physical 'virtual machine'.

Hardware Requirement

You will need to prepare the following devices before use

- Server Computer: A LattePanda or other computer that needs to be connected and controlled, running Windows or MacOS
- 2. Client Computer: A computer, runs Windows, MacOS or Ubuntu, such as your MacBook
- 3. **streaming Cable:** Connect the Server Computer to the Client Computer(Both need USB3.0 interface)

Quick Start

Install driver and setup environment

Connect Streaming Cable, then refer to the different OS setup requirements below to configure server and client computer separately.

- 1. **Unlicensed Windows:** Click to download SetupEnv_NM.bat, Right-click and select Run as administrator, after running, it will close automatically
- 2. MacOS: Click to download RNDIS driver Driver and install
- 3. Linux: add a new "USB Ethernet" in Settings->Ethernet panel, set its IPV4 to Link-Local Only

Install NoMachine

1. Click to download NoMachine(Windows, MacOS and Ubuntu) and install it in the server and client computer separately.

How to use

- 1. Connect Streaming Cable, Run NoMachine on Server and Client Computer (Start automatically as OS boot up)
- 2. Wait for a few minutes, the Server Computer will appear in the Client Computer NoMachine Browse Connections page, double-click to run
- 3. You are in, enjoy! (Click to get detailed tutorials and the best display quality)

More software solutions and tutorials will be introduced in the following sections.

More recommended Software Solutions

These sections below will show you more recommended Software Solutions, please choose one for your Server Computer and Client Computer according to your needs. This tutorial contains installation guides for Microsoft Remote Desktop and NoMachine. You can setup other software solutions accordingly.

- Microsoft Remote Desktop (RDP): Support for Server Computers with Windows 10 Pro or above OS (such as LattePanda Alpha or Delta), you can use Microsoft's standard RDP protocol for quickly configuration, seamless copy and paste, and get a full virtual machine experience
- NoMachine: Supports all Windows, MacOS or Linux, NoMachine will unleash the
 performance potential of the streaming cable. You can code, watch videos or even play
 games in your Client Computer just like you would on a local device
- Steam: To get the best gaming experience on your Client Computer, we recommend using Steam In-Home Streaming, 1080P HD, low latency, allow offline mode, support for all Windows and Mac OS

Difference Between Solutions Above

```
RDP Solution
Server Computer - Windows Only
Client Computer - Windows / MacOS / Ubuntu

NoMachine
Server Computer - Windows / MacOS / Linux
Client Computer - Windows / MacOS / Linux

LattePanda Delta / Alpha
Works with RDP solution and NoMachine both

LattePanda 2G / 4G - first generation series
NoMachine is recommended
Or you need to install Windows Pro on it to enable RDP feature
```

Example

I have a LattePanda running Windows and Macbook Pro is my main desktop development computer. Then RDP solution will be recommended.

But if you installed MacOS on LattePanda Alpha and you use MacBook Pro, then NoMachine will the only option for you!

Configuration

If this is the first time for you to use LattePanda Streaming Cable, the complete process for configuration includes:

- 1. Choose one Software Solution
- 2. Setup software on Server Computer (Must be finished before Step 3)
- 3. Setup software on Client Computer
- 4. Enjoy seamless experience with dual devices

Let's start!

This section will show you how to install drivers and Apps in your Server Computer. Click on the OS to jump to the corresponding section.

So What's OS running on the Server Computer (LattePanda)?

- 1. Windows RDP
- 2. MacOS NoMachine: Refer to the Quick Start section