

## Assembly instructions for Anvil AV-STND10T Soldering Iron Stand, 85-5999



The stand is supplied partly disassembled.

To assemble, the fixing lug of the metal spring must be pressed into the slot in the top surface of the plastic base. Avoid using excessive force as the plastic base may be damaged if excessive pressure is applied.

If necessary, place a support under the slot moulding on the underside of the plastic stand base while pressure is applied.

