


POWERBANK 8.0 WIRELESS

MANUAL

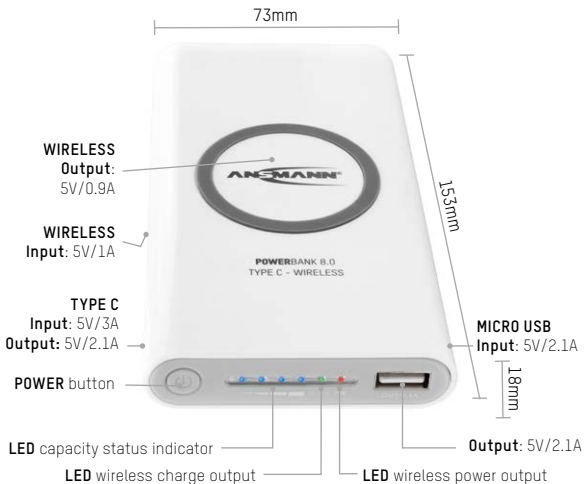

GB - FOREWORD

Dear Customer,

Many thanks for choosing an ANSMANN POWERBANK. The operating instructions will help you to get the best from the functions of your new external rechargeable battery pack. We hope you enjoy your new product. Your ANSMANN Team

SAFETY INSTRUCTIONS

- Read the operating instructions carefully before use and observe the safety instructions.
- Please disconnect your device from the ANSMANN POWERBANK if you are not using it.
- In order to prevent any risk of fire or electric shock, the ANSMANN POWERBANK must be protected from moisture and rain!
- The product can be damaged by impacts, shocks or being dropped, even from low heights. Handle the product carefully!
- Do not expose the device to intense heat or leave it in direct sunlight!
- Never open the product or attempt to carry out repairs yourself!
- Product safety is impaired by modifications or alterations to the product. There is a risk of injury!
- This product is not to be used by persons (including children) who have restricted physical, sensory or mental capabilities or who do not have adequate experience and knowledge in handling this product. Such persons must be instructed beforehand by a supervisory person who is responsible for their safety or must be supervised during the use of the device!
- Failure to observe the safety instructions can result in dangerous injuries to persons or damage to the POWERBANK or the connected devices!
- If you have questions, please contact your local dealer or our service department.

USE

> CAPACITY DISPLAY

Press the power button to check the energy remaining.

- 4 blue LEDs illuminate: 75% - 100%

- 3 blue LEDs illuminate: 50% - 75%
- 2 blue LEDs illuminate: 25% - 50%
- 1 blue LED illuminates: 1% - 25%
- No LED illuminates: The POWERBANK is completely discharged. Please charge the POWERBANK immediately. If the POWERBANK will be unused for an extended period of time, it is necessary to charge it before storage in order to avoid the rechargeable battery being damaged.

> CHARGING THE POWERBANK

MICRO USB

Insert the Micro-USB plug of the USB cable into the Micro-USB socket on the POWERBANK and the USB plug into the USB port on a computer or a USB charger.

TYP-C

Insert the type-C plug of the USB cable into the type-C socket on the POWERBANK and the USB plug into the USB port on a computer or a USB charger.

WIRELESS

Place the Powerbank on a Qi or Qi-compatible charger. Ensure that it is correctly positioned.

The charge process starts automatically. During the charge process, up to 4 blue LEDs indicate the charge progress. After the charge process is complete, all 4 blue LEDs illuminate steadily.

> CHARGING DEVICES

The Powerbank has various facilities for charging a device, e.g. a Smartphone.

USB / TYPE C

Use the USB cable supplied (provided that the Micro-USB plug fits your mobile device) or the original charge cable for your device. The Powerbank likewise has a type-C output. Please use a suitable type-C cable for this. Insert the USB plug of the cable into the POWERBANK and the other end into your device. The charge process starts automatically via the type-C connection. Please note that you must press the power button to start the charge process via the USB port.

WIRELESS

Wireless charge output is activated by pressing the power button. This is indicated via the red power LED. Place your Qi-capable device on the Powerbank. The charge LED illuminates in green as soon as the device is charged. The red power LED extinguishes during the energy transfer.

While the Powerbank is being wirelessly charged, all outputs are automatically deactivated until all charge connections for charging the Powerbank have been removed.

When charging the Powerbank via USB / type C, simultaneous charging of your end-device is possible with restrictions. Please note that the power of the outputs will be reduced here.

Simultaneous charging of multiple end-devices is possible with restrictions. This depends on the total charge current required.

Please disconnect your device from the POWERBANK once the charge process is complete. The POWERBANK switches off automatically if it is not charging a device.

The POWERBANK may heat up a little depending on the charge/discharge current.

TECHNICAL DATA

1. Cell type:	Li-Po rechargeable battery pack
2. Capacity:	8000mAh 29.6Wh
3. Input:	Micro-USB: 5V 2100mA
Type C:	5V 3000mA
Wireless:	5V 900mA
4. Output:	USB: 5V max. 2100mA Type C: 5V max. 2100mA Wireless: 5V max. 1000mA
5. Accessories:	Charge cable (USB to Micro-USB)
6. Operating temperature:	0°C to +25°C
7. Charge time:	Micro-USB: ca. 4h Type C: ca. 3h Wireless: ca. 8h
8. Protective functions:	Over-charging protection, deep discharge protection, overload protection
9. Display:	LED display

ENVIRONMENTAL INFORMATION

The device should not be discarded in the normal household waste under any circumstances. Dispose of the device via an authorised disposal centre or your municipal waste disposal facility. Observe the current applicable regulations. Contact your waste disposal facility in the event of any doubt. Dispose of all packaging materials via an environmentally friendly disposal facility.

LIMITATION OF LIABILITY

The information contained within these operating instructions can be changed without prior notification. ANSMANN accepts no liability for direct, indirect, incidental or other damage or consequential damage arising through improper handling or through disregard of the information contained within these operating instructions.

GUARANTEE INFORMATION

The device has a three-year guarantee. The guarantee does not apply to damage to the device arising through a failure to comply with the operating instructions.

Subject to technical changes. We assume no liability for printing errors. 10/2017
