


GALAXY-1000 - User manual

 NightSearcher    



Light Source	LED COB chip	
Light Output	1000 lumens	500 lumens
Running Time	1h40	3h20
Battery	Li-ion battery (18650) 1800 mAh 7.4V	
Charge time	4hrs	
Product Dimensions	L193.5 x W230.4 x D63.6 mm	
Product Weight	539g including battery	
NS Part No	NSGALAXY1000	
Supplied with	Ac and DC charger	

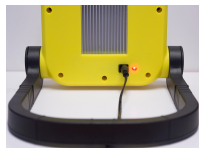

Mode operation - Battery information - Warning

Operation

- The GALAXY-1000 has two modes of operation: High power (100%), low power (50%)
- Press once on the black switch situated above the reflector for the low power. Press again to activate the high power. Press a third time to switch off the light.

⚠ NOTE; THE PRODUCT MUST NOT BE USED WHILE IT IS ON CHARGE. TO BE USED ONLY FROM BATTERY.

Battery charging

- Slide the charging socket cover. This will reveal the INPUT socket.
- Connect the charger lead into the socket and connect the charger into a power supply (AC or DC)
- The charging indicator LED located near the input socket will glow red while charging. The LED will turn green when charging is complete.

Warning

- Do not expose the battery to excessive heat, to do so may cause an explosion. - Do not use metal objects to short circuit the positive and negative end of the battery. - Do not dispose of the battery in the domestic waste, please use the correct method of disposal. - Do not solder directly on to the battery. - Do not let the battery become wet or immerse the battery in water. -
- Keep the battery away from children. - The operating temperature range of the light's battery: Charging: 0°C to 30°C / Discharging: 0°C to 30°C

General

- Do not use any chargers other than those recommended in this Instruction manual. Failure to do so could cause fire, electrical shock or personal injury. - Never use a damaged charger or charger with damaged lead. Should the charger or its lead become damaged, replace the charger immediately. - Do not shine the light directly into people's eyes, as it may damage their eyesight. Do not cover the product while in use.
- When the charger is not in use, please disconnect it from the AC power supply. Do not leave the battery on charge for more than one week as this will shorten the battery life. Battery leakage may occur if the battery is over charged. - Always make sure the light system is disconnected from any power sources and turned off when performing any routine cleaning or maintenance.
- Do not try to repair the unit or charger yourself. In case of any problems or questions please contact NightSearcher Limited or an authorised distributor.