

User Manual

Digital BBQ-Tongs

Modell ET492
Item nummer 5-4003

Dear Customer,

Thank you for the purchase of this high quality Sunartis © Digital BBQ-tongs.

Before using this product please read this instruction manual and especially the safety instructions carefully. Please keep this instruction manual for later reference and pass it on to another user in case of transfer of ownership.

Technical data

Measuring Range:	(0-200)°C/(32-392)°F
Battery:	2 x AAA
Material:	
Tongs	SS430 and SS301
Probe	SS304
Handle	ABS
Display box cover and battery cover	ABS
Waterproof:	IPX6 (Tongs, not including the detachable LCD display module)

Features

- Includes turner, meat thermometer and tongs.
- Built-in temperature choices for different kinds of meats.
- User-defined target temperature
- Temperature alarm
- Backlit LCD
- Detachable LCD display module
- Auto power off after 7 minutes
- °C/°F temperature units

Operation

1. Turn on and turn off

I. Turn on

Press the **ON/OFF** button to turn on the unit. The food type, corresponding recommended cooking temperature and current detected temperature will be displayed on the LCD (Please refer to Fig. 1).



Fig. 1

II. Turn off

Turn off manually: Press and hold the **ON/OFF** button for about 3 seconds.
Auto power off: When the detected temperature is lower than 50°C/122°F without any obvious temperature change and there is no operation within 7 minutes, the unit will turn off automatically.

III. Built-in meat types

Press the "-" or "+" button to shift the meat type choices (Please refer to Table 1 for the list)
Default meat type: BEEF

Table 1

Sequen- -ce	Item	English (EN)	German (DE)	French (FR)	Italian (IT)	Spanish (ES)	Swedish (SW)	Dutch (DU)
Med rare 63°C 145°F	Fresh Beef	BEEF	RIND	BOEUF	MANZO	VACA	NOETK	RUNDV
Med 71°C 160°F								
Well Done 77°C 170°F								
Med rare 63°C 145°F	Fresh Veal	VEAL	KALB	VEAU	VITEL	TERNR	KALVK	KALF
Med 71°C 160°F								
Well Done 77°C 170°F								
Med rare 63°C 145°F	Fresh Lamb	LAMB	LAMB	AGNEA	AGNEL	CORDR	LAMB	LAM
Med 71°C 160°F								
Well Done 77°C 170°F								
77°C/ 170°F	Pork	PORK	SCHWN	PORC	MAIAL	CERDO	GRISK	VARKE
74°C/ 165°F	Poultry	POULT	HUHN	POULT	POLLO	POLLO	KYKLI	KIP
74°C/ 165°F	Turkey	TURKE	TRUTH	DINDO	TACCH	PAVO	KALKO	KALKO
71°C/ 160°F	Burger	BURGR	BURGR	BURGR	BURGR	BURGR	BURGR	BURGR
71°C/ 160°F	User	USER	ANWEN	USAGR	UTENT	USUAR	FÖRBR	GEBRU

IV. User-set target temperature (USER mode)
Press the "-" or "+" button to shift to "USER" mode
Press the **ON/OFF** button to enter setting mode (Digital display of target temperature blinks).
Use "-" or "+" button to set the target temperature.
Press the **ON/OFF** button to confirm the target temperature.

V. Temperature Alarm
Detected temperature reaches the target temperature (4 "bi-bi" alerts)
If the detected temperature stays above the target temperature, the 4 "bi-bi" alerts will sound once every 30 seconds.
The unit gives an alarm signal and the LCD blinks showing "HHH" if the detected temperature is higher than 200°C.

VI. °C/°F units selection
Slide the "°C/°F" switch to change the temperature unit.
(For the location of the "°C/°F" slider, please refer to Fig. 2)

VII. Backlight
Pressing any button will trigger the backlight.

VIII. Detachable LCD display module for cleaning
Move the upper handle following the direction shown in Fig. 2 to release the LCD display module. After releasing the LCD display module, the tongs are dishwasher safe.

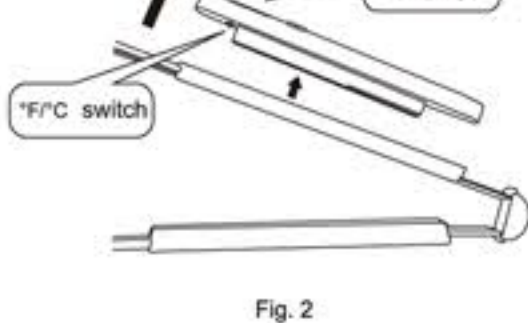


Fig. 2

IX. Low battery
The low voltage sign will be displayed if the battery voltage is too low to operate, the user should replace the battery before use.

X. Languages
To change the language, press and hold the **ON/OFF** button during installation of the batteries until "DE" appears on the top left of the LCD (Default language is German, DE).
Then press the "-" or "+" button to select the desired language. There are a total of 7 language choices (DE, FR, IT, ES, SW, DU, EN). Please refer to Table 1 for details.

Battery

Press the button to release the LCD display module (Fig. 2)
Remove the battery cover and replace the AAA batteries when necessary.
Please dispose of old batteries in an environmentally friendly way.

Caution

- The sensing probe can withstand a high temperature up to 300°C/572°F. All temperatures higher than this may cause damage.
- The temperature sensing accuracy refers to the comparison between this product and a regular thermometer under constant temperature.
- Please detach the LCD display module before cleaning the product (Do not wash or immerse the LCD display module in water.). Please ensure that there is absolutely no water on the tongs before reattaching the LCD display module to the tongs. The reason for this is that the product accuracy will be affected and the product is at risk of being damaged.

Attention

Your Digital BBQ-Tongs may not be disposed of in ordinary household garbage; they must be disposed of professionally. The materials are reusable in accordance with their designation. By reusing old equipment you make an important contribution to environmental protection. Please dispose of the tongs by taking them to your local waste disposal center for electric and electronic devices. Your local authorities can tell you how to find it.

Safety advice

- Keep your Digital BBQ-Tongs out of the reach of children
- Protect the device from direct sunlight, heat, high humidity, moisture and wetness
- Do not set your tongs down on hot surfaces.
- Do not apply strong force on LCD display.
- The normal function of the product may be disturbed by strong electro magnetic interference. If so, simply turn off and turn on the item again to resume normal operation.