

# PrimeTest 100

# Handheld unit for testing earth continuity, insulation resistance and substitute leakage with measured test result values

A highly useful, functional and diverse tool, the PrimeTest 100 has three operational modes and is an easy-to-use, comprehensive unit.

Simply push the relevant button to run through the pre-programmed test sequences for either Class I PAT test, Class II PAT test or IEC Lead test. Connect the PrimeTest 100 to a power outlet and it will automatically check the socket wiring and mains voltage.

Its large digital display shows test result values, as well as a PASS or FAIL indication. Battery powered, it'll help you work quicker and more efficiently.

Unlock extra features with our free and easy-to-use mobile app, PATMobile. Available for use on both Android and iOS devices, the handy app works with the PrimeTest 100 to enable the digital input and storage of test records alongside barcode scanning, label printing\* and photo tagging.

\*Print label feature only available for Android devices

#### **Key Features**

- Simple-to-use push button operation
- Easy-to-read display with LCD display – shows test results and pass/fail indication
- Accurate and reliable earth continuity testing
- Handheld and battery powered
- Long battery life
- Compatible with free PATMobile app – enables you to log results, export your data, tag photos and print results\*

#### **Electrical/Analysis Test Functions**

- Mains supply check
- IEC lead test
- Earth continuity (200mA)
- Insulation resistance (500V)
- Alternative/substitute leakage

#### Ideal for

- Low volume testing
- Manually recorded measurements



Get more from your manual PAT tester with our free and powerful mobile app.

Scan QR code to watch video







www.seaward.co.uk/PrimeTest100

**Tel:** +44 (0) 191 587 8741 **Email:** sales@seaward.co.uk



Optional Accessory Kits Available		Part Number
PATBag Kit	<ul> <li>Online PAT testing training course with exam</li> <li>30 day free trial of PATGuard Elements software</li> <li>Durable, purpose-made PATBag with compartments for all of your PAT accessories and labels</li> <li>110V adaptor</li> <li>500 pass + 500 fail labels</li> <li>Seaward Guide to PAT Testing</li> <li>PAT reference look-up card</li> <li>PAT logbook</li> <li>Quick start video guide</li> <li>PAT Business builder CD-ROM and booklet Includes PrimeTest 100 PAT tester</li> </ul>	345A925
PATBag Kit + PATGuard Elements software	The PATBag can optionally include PATGuard Elements manual data entry software – ideal for those who would like to keep an electronic register of assets and results including pass/fail results and retest dates.	345A926

## **Technical Specifications**

**Earth Continuity** 

Test Current +/- 200mA DC Display Range  $0.00 - 19.99\Omega$  Pass Value  $0.2\Omega$ 

**Insulation Range** 

Test Voltages 500VDC
Display Range 0.20 – 19.99MΩ
Page Voltage 2MΩ

Pass Value  $2M\Omega$ 

IEC Lead Test
Tests Performed Earth continuity

Insulation resistance Live, neutral continuity

and polarity

**Equivalent Leakage Class I** 

Test Voltage 40V, 50Hz AC nominal Display Range 0.10 – 19.99mA
Pass Value 0.75mA

**Equivalent Leakage Class II** 

Test Voltage 40V, 50Hz AC nominal Display Range 0.10 – 19.99mA Pass Value 0.25mA

**Power Socket Test** 

Input Voltage Range 230V +10% - 15% AC
Indicators Phase to earth voltage
Phase to neutral voltage
Neutral earth

### **General Specifications**

Dimensions 260 x 100 x 55mm (h x w x d)

Weight 800g

Power Source 6 x AA Batteries

Standard Accessories (supplied with PrimeTest 100)

0.5m extension adaptor Earth bond lead 6 x AA batteries Carry case

**Optional Accessories** 

PATGuard Elements software (387A910)

Test n Tag Pro Bluetooth/Serial printer with small (52 x 25mm) labels (compatible via PATMobile app, Android version only) (339A987) Roll of small labels (approx. 350 off 52x25mm labels) (339A947)

110V to IEC adaptor (344A050) 230 to 110V adaptor (270A076)

3 phase adaptor – 16A 4 pin 415V (for Rpe & IR) (209A910) 3 phase adaptor – 16A 5 pin 415V (for Rpe & IR) (209A911)

3 phase adaptor – 32A 4 pin 415V (for Rpe & IR) (209A912)

3 phase adaptor - 32A 5 pin 415V (for Rpe & IR) (209A913)

PAT checkbox (227A910)

PowerCheck 1557 (369A910)

1000 x Pass labels (91B038)

1000 x Fail labels (91B311)

100 x Rhinotags (91B309)

 $250\ x$  Barcode appliance no. labels (compatible via PATMobile app,

Android version only) (194A307)

Rechargeable batteries and charger (339A950)

#### Training

Seaward offer a range of PAT testing courses, including City & Guilds. Go to www.seaward.co.uk/training for more information.

Services

1 year warranty subject to product registration with Seaward, visit

www.seaward.co.uk/register-product

Service and calibration by Calibrationhouse.

Go to www.calibrationhouse.com for more information.

Part Numbers

 PrimeTest 100
 344A910

 PrimeTest 100 PATbag kit
 345A925

 PrimeTest 100 PATbag kit + PATGuard Elements
 345A926

Also Available in this Range

PrimeTest 50 347A910
PrimeTest 250+ 403A910

**Tel:** +44 (0) 191 587 8741 **Email:** sales@seaward.co.uk