


AIR ANGLE GRINDER

83953 - DAT-AAG SPARE PARTS LISTING

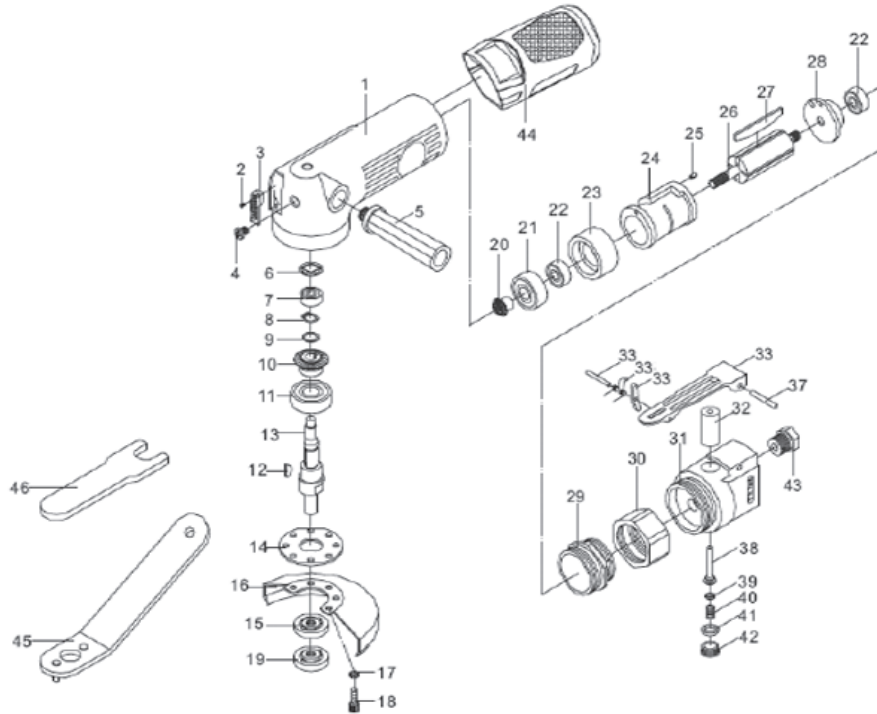

KEY No.	PART No.	STOCK No.	DESCRIPTION
1	YDAT-AAG-1	00339	Main Housing
2	YDAT-AAG-2	00340	Screw
3	YDAT-AAG-3	00341	Muffler
4	YDAT-AAG-4	00342	Screw
5	YDAT-AAG-5	00343	Handle
6	YDAT-AAG-6	00344	Dust Cover
7	YDAT-AAG-7	00345	Bearing
8	YDAT-AAG-8	00346	E-Clip
9	YDAT-AAG-9	00347	Spacer
10	YDAT-AAG-10	00348	Gear
11	YDAT-AAG-11	00349	Bearing
12	YDAT-AAG-12	00350	Semi-Round Key
13	YDAT-AAG-13	00351	Rotating Axle
14	YDAT-AAG-14	00352	Gasket
15	YDAT-AAG-15	00354	Rear Flange Nut
16	YDAT-AAG-16	00355	Metal Guard
17	YDAT-AAG-17	00356	Spacer
18	YDAT-AAG-18	00357	Cap Screw
19	YDAT-AAG-19	00358	Front Flange Nut
20	YDAT-AAG-20	00359	Gear
21	YDAT-AAG-21	00360	Bearing
22	YDAT-AAG-22	00361	Bearing

KEY No.	PART No.	STOCK No.	DESCRIPTION
23	YDAT-AAG-23	00362	Front Plate
24	YDAT-AAG-24	00363	Cylinder
25	YDAT-AAG-25	00364	Bolt
26	YDAT-AAG-26	00365	Rotor
27	YDAT-AAG-27	00366	Rotor Blade
28	YDAT-AAG-28	00368	Rear Plate
29	YDAT-AAG-29	00370	Fixing Ring
30	YDAT-AAG-30	00371	Connecting Nut
31	YDAT-AAG-31	00372	Rear Housing
32	YDAT-AAG-32	00373	Brass Bush
33	YDAT-AAG-33	00374	Trigger Kit
37	YDAT-AAG-37	00378	Trigger Bolt
38	YDAT-AAG-38	00379	Valve Stem
39	YDAT-AAG-39	00380	O-Ring
40	YDAT-AAG-40	00381	Spring
41	YDAT-AAG-41	00382	O-Ring
42	YDAT-AAG-42	00383	Screw Nut
43	YDAT-AAG-43	00384	Air Inlet
44	YDAT-AAG-44	00386	Soft Grip
45	YDAT-AAG-45	00387	Pin Wrench
46	YDAT-AAG-46	00388	Dead Hand Wrench