



LED RECHARGEABLE POCKET TORCH

24258 – INSTRUCTIONS FOR USE

Please visit drapertools.com/manuals for the latest version of this manual and the associated parts list, if applicable.

1. Product Introduction

1.1 Intended Use

Compact pocket high power flashlight with 6 light modes, waterproof, drop resistant and durable design. Supplied with a handy belt clip, magnet and Type-C charging cable. Any other application beyond the conditions established for use will be considered misuse. Draper Tools accepts no responsibility for improper use of this product.

2. Specification

Stock No.	24258
Part No.	PFL2000
IP Rating:	IPX4
Drop Resistance:	1.5 metre
Net weight:	94g
Dimensions (HXWxD):	30 x 30 x 75mm
Light Measurement:	Max 2000 lumens
Charging cable:	Type-C
Charging time:	2 hours
Max Operating time:	
Mode 1 – High:	1800 lumens/1 hour
Mode 2 – Medium:	500 lumens/3 hours
Mode 3 – Low:	100 lumens/10hours
Rated input:	5 V / 500mA
Rechargeable Battery:	18350 li-ion

2.1 Explanation of Symbols



Read the instruction manual



Warning!



Keep out of the reach of children

3. Health and Safety Information

Important: Read all the Health and Safety instructions before using this product and retain for later use. Failure to follow these instructions may result in injury or damage to the user, the product or the light.

3.1 General Health and Safety Precautions

- **DO NOT** turn the light on when it is being charged.
- **DO NOT** shine the light directly into eyes.
- **DO NOT** allow children to use the light.
- **DO NOT** handle or move the light whilst it is being charged.
- **DO NOT** leave battery in a discharged state, recharge battery immediately.
- **WARNING!** To reduce the risk of burns or fire:
 - **DO NOT** attempt to open, disassemble, modify or service the torch.
 - **DO NOT** crush, puncture, short external contacts or dispose of in fire or water.
 - **DO NOT** expose to temperatures above 50°C.
 - **DO NOT** use this product if the casing is damaged in any way or if there is evidence of battery leakage.
 - Recycle or dispose of used battery as stipulated by local regulation.
- **DO NOT** attempt to repair this device; it contains no user-serviceable parts.

3.2 Residual Risk

The safety instructions in this manual cannot account for all possible conditions and situations that may occur. Exercise common sense and caution when using this product and protect against any additional conceivable risks.

4. Identification and Unpacking

4.1 Product Overview – Fig.1

Carefully remove the product from the packaging and examine it for any signs of damage that may have occurred during shipment.

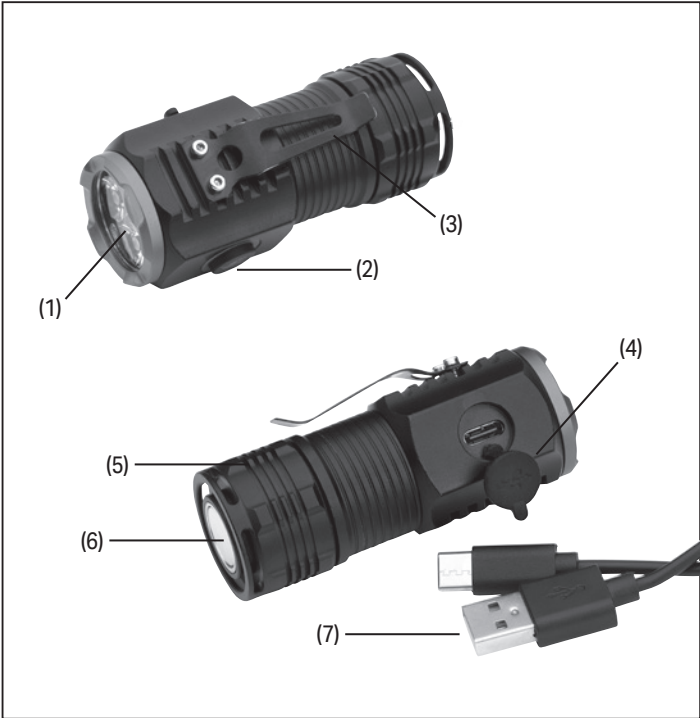


Fig. 1

1. LED light

2. ON/OFF/Mode/Charging Indicator button

3. Belt clip
4. USB charging port cover

5. Battery compartment

6. Magnet

7. USB-C charging cable

Please visit [drapertools.com](https://www.drapertools.com) for our full range of accessories and consumables.

4.2 Packaging

Keep the product packaging for the duration of the warranty period in case the product needs to be returned for repair.

WARNING! Keep packaging materials out of reach of children. Dispose of packaging correctly and responsibly and in accordance with local regulations.

5. Fitting the Battery – Fig.2

1. Unscrew the battery compartment cap (5)

2. Fit 1 X 18350 li-ion battery - check that the battery is fitted in the correct +/- orientation.

3. Refit cap and turn to secure.

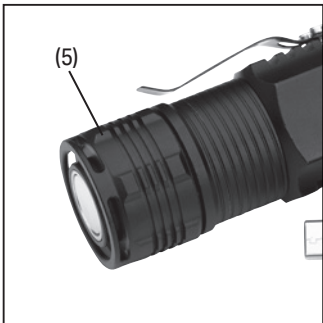


Fig. 2

6. Charging the Light – Fig.3

1. Charge the light before initial use.

2. Lift the cover (4) and fit the USB charging cable supplied into the USB charging port. Plug into a suitable power outlet.

3. Charging will take approximately 2hours.

4. The ON/OFF button light will flash red and turn blue when fully charged.

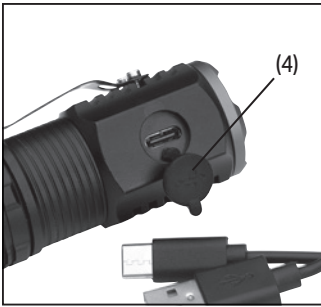


Fig. 3

7. Identification and Unpacking

7.1 Press the ON/OFF/MODE button (2) to switch on.

Press	Brightness Settings
X1	ON/High
X2	Medium
X3	Low
X4	Fast Flashing
X5	Slow Flashing/S.O.S
X6	OFF

During any mode, hold the button for 2 seconds to go into high power mode.

8. Maintenance

- Clean the torch with a damp cloth.

• Store in a dry child proof area.

• Before storage, fully charge the battery, subsequently recharge the battery at least once every six months of non-use.

9. Spares, Returns and Disposal

For spare parts, servicing, and repair and replacement options, please contact the Draper Tools Product Helpline for details of your nearest authorised agent.

Any servicing or repairs carried out by unauthorised personnel or installation of spare parts not supplied by Draper Tools will invalidate your warranty.

At the end of its working life, dispose of the product responsibly and in line with local regulations. Recycle where possible.

- **DO NOT** dispose of this product with domestic waste; most local authorities provide appropriate recycling facilities.



WEEE – Waste Electrical & Electronic Equipment
Do not dispose of Waste Electrical & Electronic Equipment in with domestic rubbish

- **DO NOT** burn or mutilate batteries; this may release toxic or corrosive substances.



Do not incinerate or throw onto fire

10. Warranty

12 months – Visit [drapertools.com/warranty](https://www.drapertools.com/warranty) for full details.