



Item	Part No.	Description
1	IR16.01	Support Tank for Oil Tank
2	IR16.02	Connection Plate
3	IR16.03	Front Guard (for IR16 only)
5	IR16.05	Base
6	IR16.06	Cable Grip
7	IR16.07	Inside Plate (for IR16 only)
8	IR16.08	Left Side Plate
9	IR16.09	Exhaust Pipe Sleeve
10	IR16.10	Left Inside Plate

Item	Part No.	Description
11	IR16.11	Top Cover (for IR16 only)
12	IR16.12	Pipe Clamp
13	IR16.13	Exhaust Pipe Seat
14	IR16.14	Protection Grille
15	IR16.15	Thermostat
16	IR16.16	Bracket for Electrical Box
17	IR16.17	Pipe Bracket (A)
18	IR16.18	Pipe (Short)
19	IR16.19	Rear Panel

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice. There may be alternative versions of this product, please contact us should you require this information.

IMPORTANT: No liability is accepted for incorrect use of product. Spare parts must be fitted by a competent person

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.



Parts Information:
Industrial Infrared Diesel Heater 16kW
Model No: IR16.V2

Item	Part No.	Description
20	IR16.20	Heat Resistance Plate (for IR16 only)
21	IR16.21	Right Side Plate
22	IR16.22	Handle (for Side Door)
23	IR16.23	Decorative Cover
24	IR16.24	Label (for Control Panel)
25	IR16.25	Control Panel
--	IR16-25-02	Control Panel (not shown)
--	IR16-25-03	Power Board (not shown)
--	IR16-25-04	Socket Adaptor (not shown)
--	IR16-25-05	Wire Assembly (not shown)
--	IR16-25-06	Red PVC Wire Lead (not shown)
--	IR16-25-07	Black PVC Wire Lead (not shown)
--	IR16-25-08	Detection Wire Set (not shown)
--	IR16-25-09	Stop Detection Wire Set (not shown)
--	IR16-25-10	Oil Float (not shown)
--	IR16-25-11	Temperature Sensor Wire (not shown)
26	IR16.26	Control Box
27	IR16.27	Lock & Key
28	IR16-V2-28	Front Panel (for IR16 only)
29	IR16.29	Power Control PCB
30	IR16.30	Base for Control Panel
31	IR16.31	Right Inside Panel
32	IR16.32	Connection Plate (for Inside Panel)
33	IR16.33	Castor Wheel Plate
34	IR16-V2-34	Castor
34	IR16-V2-34B	Castor (with Brake)
35	IR16.35	Oil Tank Assembly

Item	Part No.	Description
--	IR16-35-02	Electromagnetic Pump (not shown)
--	IR16-35-03	Connector 4mm (not shown)
--	IR16-35-05	Capacitor for Motor (not shown)
--	IR16-35-06	Ignition Needle Assembly (not shown)
--	IR16-35-07	High Voltage Package (not shown)
--	IR16-35-08	Photocell Assembly (not shown)
--	IR16-35-09	Electromagnetic Fuel Return Valve (not shown)
--	IR16-35-10	Socket Adaptor (Male) (not shown)
--	IR16-35-11	Nozzle 0.40gph 60h (not shown)
--	IR16-35-12	Nozzle 0.30gph 60h (not shown)
--	IR16-35-14	Fan Wheel (not shown)
--	IR16-35-15	Copper Pipe (3-Way) (not shown)
36	IR16.36	Fuel Tank Assembly
37	IR16.37	Tank Cap (c/w Oil Filter)
38	IR16.38	Decorative Plate
39	IR16.39	Vent Plug
40	IR16.40	Sensor
41	IR16.41	Pipe (Middle Section)
42	IR16.42	Lower Front Panel
43	IR16.43	Pipe Clamp
44	IR16.44	Pipe Bracket
45	IR16.45	Connection Plate
46	IR16.46	Muffler Plate
--	IR16-47	Toolbox Lock (c/w Key) (not shown)
--	IR16-48	Elbow Funnel (not shown)
--	IR16-F	Filter (not shown)

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice. There may be alternative versions of this product, please contact us should you require this information.

IMPORTANT: No liability is accepted for incorrect use of product. Spare parts must be fitted by a competent person

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.

Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk. IP32 7AR



01284 757500



01284 703534



sales@sealey.co.uk



www.sealey.co.uk