



Item	Part No.	Description
1	BBQ10.01	WHEEL,CASTOR (W/BRAKE)(75x8x25x92)
2	BBQ10.02	FRONT LEG (RIGHT)
3	BBQ10.03	BACK LEG (RIGHT)
4	BBQ10.04	BOTTOM PANEL
5	BBQ10.05	FRONT LEG (LEFT)
6	BBQ10.06	BACK LEG (LEFT)
7	BBQ10.07	WHEEL AXLE
8	BBQ10.08	WHEEL,FIXED (C/W COVER)(152x8x39)
9	BBQ10.09	SIDE PANEL
10	BBQ10.10	BACK PANEL
11	BBQ10.11	FRONT BAR FOR DOOR
12	BBQ10.12	SUPPORT BAR FOR CABINET
13	BBQ10.13	DOOR
14	BBQ10.14	DOOR SPINDLE
15	BBQ10.15	TOP GRILL (c/w LID)
16	BBQ10.16	RIGHT SIDE SHELF (WITH GRILLE)

Item	Part No.	Description
17	BBQ10.17	LEFT SIDE SHELF (c/w GRILLE)
18	BBQ11.16	GREASE COLLECTOR
19	BBQ11.17	FLAME PROTECTOR
20	BBQ11.19	COOKING GRILL (22x41.5cm)
21	BBQ11.18	COOKING PLATE (22x41.5cm)
22	BBQ10.22	WARMING RACK
--	BBQ11.22	GAS KNOB (not shown)
--	BBQ11.23	UK REGULATOR c/w 0.8m HOSE (not shown)
--	BBQ11.24	IGNITOR WITH WIRE (not shown)
--	BBQ10.26	VALVE COMPLETE (VALVE/GAS TUBE/CONNECTOR) (not shown)
--	BBQ11.26	SIDE BURNER (not shown)
--	BBQ11.27	MAIN BURNER (not shown)
--	BBQ11.28	THERMOMETER (not shown)
--	BBQ10.FK	FIXING KIT (not shown)

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.
IMPORTANT: No liability is accepted for incorrect use of product.
WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.