



Item	Part No.	Description
1	BOOST120V2.01	LOWER PANEL
2	BOOST120V2.02	MAIN TRANSFORMER
3	BOOST180.03	CABLE BUSHING
4	BOOST180.04	ON/OFF SWITCH
5	BOOST180.05	WHITE ROCKER SWITCH
6	BOOST180.06	POWER CABLE WITH PLUG
7	BOOST180.07	POSITIVE CLAMP + CABLE
7A	BOOST180.07A	NEGATIVE CLAMP+CABLE
8	BOOST180.07	POSITIVE CLAMP + CABLE
9	BOOST180.07A	NEGATIVE CLAMP+CABLE
10	BOOST180.10	TERMINAL COMPLETE (PAIRS)
11	START560.03	FUSE COVER

Item	Part No.	Description
12	BOOST180V2.12	AMMETER 0-60A (WITH SURROUND)
13	START180.F	FUSE 50Amp (SINGLE) X 2
14	BOOST180.14	FUSE HOLDER (SINGLE POST-NUTS, INSULATION)
15	BOOST180.15	SUPPORT
16	BOOST180.16	SHUNT
17	BOOST180.17	RECTIFIER
18	BOOST120V2.18	TOP COVER
19	BOOST120V2.19	HANDLE BELT
20	BOOST120V2.20	MIDDLE SUPPORT
21	BOOST180V2.21	RUBBER FOOT
--	BOOST120V2PP	PANEL PARTS (NOT SHOWN)

**NOTE:** It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

**IMPORTANT:** No liability is accepted for incorrect use of product.

**WARRANTY:** Guarantee is 12 months from purchase date, proof of which will be required for any claim.