

TMP006

This user's guide describes the function and operation of the [TMP006](#), a non-contact infrared (IR) sensor with a digital interface. This document discusses the most important application-related design considerations to achieve optimal performance when using the TMP006 for surface temperature measurements.

Contents

1	Introduction	2
2	System Overview	3
3	TMP006 Object Temperature Measurement Setup	4
4	TMP006 Layout Guidelines	6
5	Object Temperature Calculation	9
6	Calibrating the System	10

List of Figures

1	TMP006 in a Target Object Temperature Measurement Setup	3
2	Percentage of IR Signal Absorbed by Sensor versus Angle of Incidence.....	5
3	Relationship Between Target Object Size and Distance from the TMP006.....	6
4	TMP006 Two-Layer PCB: Top Layer.....	7
5	Enlarged View of Layer 1: TMP006 Land Pattern and Copper Fill.....	8
6	TMP006 Two-Layer PCB: Bottom Layer.....	9
7	Finding the Slope of the Calibration Function vs $T_{OBJ}^4 - T_{DIE}^4$ to Calculate S_0	11

1 Introduction

1.1 Terms and Definitions

The following list summarizes many of the terms and abbreviations used in this document.

- PCB: Printed circuit board; specifically refers to the printed circuit board that the TMP006 is mounted on.
- IR: Infrared, or radiation that occurs in the infrared wavelengths (0.7 μm to 1000 μm). The TMP006 uses IR wavelengths from 4 μm to 8 μm .
- IR sensor, Sensor: The IR sensor within the TMP006 integrated circuit device.
- Target object, Target: The object for which the TMP006 measures the temperature.

1.2 If You Need Assistance

If you have questions about the TMP006, join the discussion with the Linear Amplifiers Temperature Sensors Applications Team in the e2e™ forum at e2e.ti.com. Include **TMP006** as the subject heading of your posting.

1.3 Information About Cautions and Warnings

This document contains caution statements.

CAUTION

This is an example of a caution statement. A caution statement describes a situation that could potentially damage your software or equipment.


The information in a caution or a warning is provided for your protection. Please read each caution and warning carefully.

1.4 FCC Warning

This equipment is intended for use in a laboratory test environment only. It generates, uses, and can radiate radio frequency energy and has not been tested for compliance with the limits of computing devices pursuant to subpart J of part 15 of FCC rules, which are designed to provide reasonable protection against radio frequency interference. Operation of this equipment in other environments may cause interference with radio communications, in which case the user at his own expense is required to take whatever measures may be required to correct this interference.

2 System Overview

Figure 1 shows an example of the TMP006 in a typical target object surface temperature measurement setup.

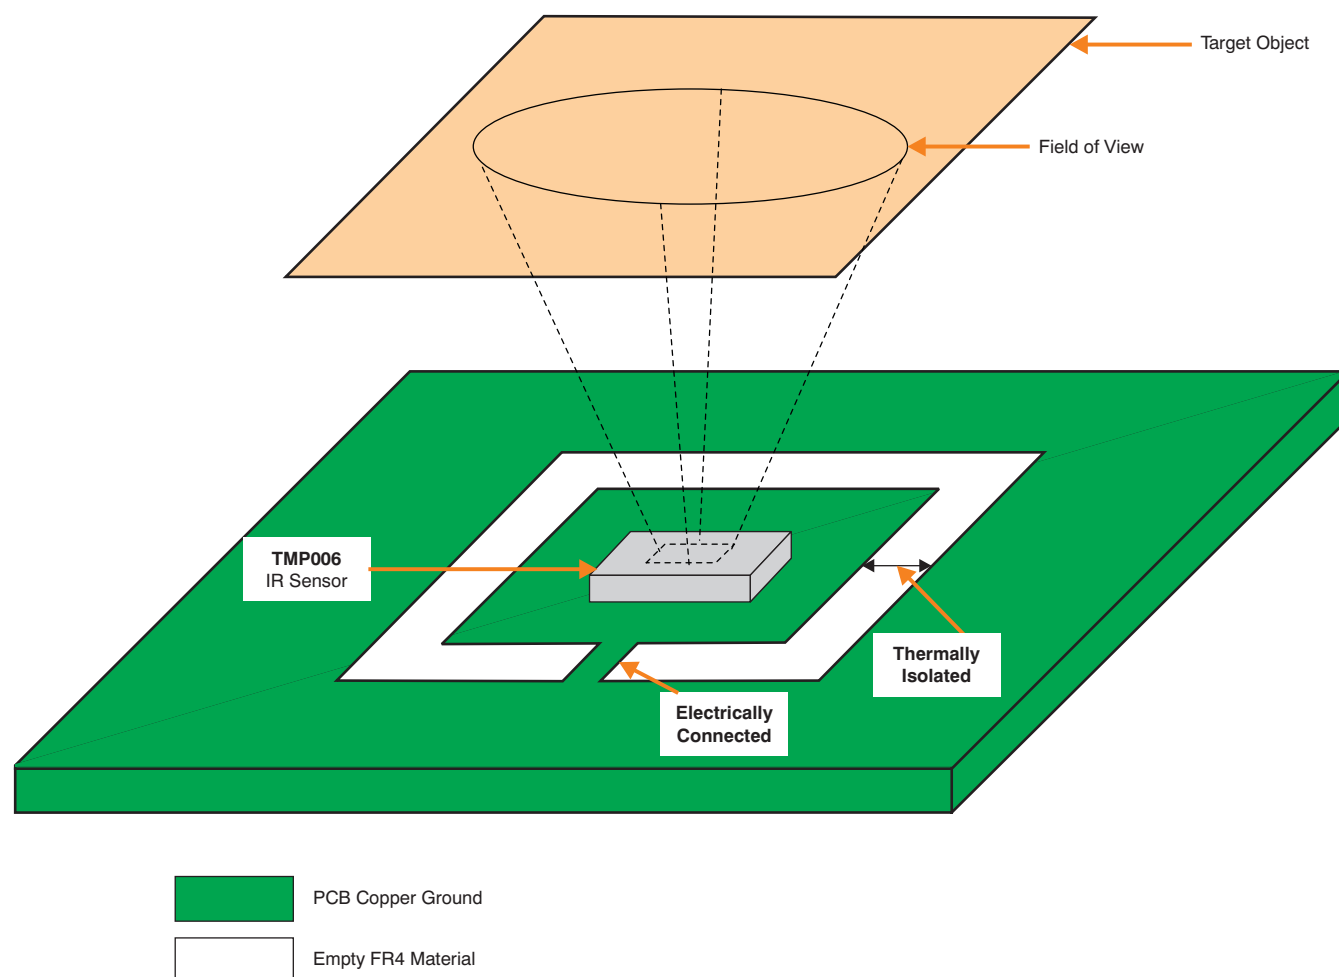

NOTE: Drawing not to scale; for illustration purposes only. The TMP006 field of view is much wider than shown here.

Figure 1. TMP006 in a Target Object Temperature Measurement Setup

The TMP006 must be mounted on a printed circuit board (PCB). [Section 4](#) reviews the details of the PCB construction.

CAUTION

Many of the components mounted on a PCB (including the TMP006) are susceptible to damage by electrostatic discharge (ESD). Customers are advised to observe proper ESD handling precautions when handling the TMP as configured on a PCB, including the use of a grounded wrist strap at an approved ESD workstation.

3 TMP006 Object Temperature Measurement Setup

When measuring the temperature of an object using the TMP006, there are several fundamental measurement constraints that must be followed to ensure the accuracy of the object temperature calculation. The two primary constraints are:

- The surface emissivity of the target object; and
- The placement of the TMP006, relative to the size of the target.

The next two subsections examine these constraints in particular.

3.1 Target Object Emissivity Guidelines

The *emissivity* of an object is defined as the ability of an object surface to radiate energy relative to an ideal emitter. An ideal emitter, also called a *black body*, has an emissivity value of 1. When using the TMP006 for target object surface temperature calculations, it is essential that the surface of the target object be able to emit sufficient IR radiation to be accurately detected by the IR sensor in the TMP006. Targets with very low emissivity values emit less IR radiation, and therefore produce smaller signals, which are harder for the TMP006 to capture and measure. Polished and shiny metal objects have surface emissivity values that are typically too low for use with the TMP006.

To measure the surface temperature of an object with a very low emissivity, it can be painted with lampblack paint which has an emissivity of 0.96.

As a design guideline, the TMP006 should only be used to calculate the surface temperature of target objects with emissivity values greater than 0.7, and preferably greater than 0.9. The emissivity values of common objects are listed in [Table 1](#).

Table 1. Emissivity Values for Common Objects

Object or Material	Emissivity	Object or Material	Emissivity
Aluminum, commercial sheet	0.09	Nickel, electroplated	0.03
Aluminum, polished	0.039 to 0.057	Porcelain, glazed	0.92
Aluminum, anodized	0.77	Paper	0.93
Brass, dull plate	0.22	Paint	0.8-0.96
Brass, polished	0.03	Plaster	0.92
Brick, red rough	0.90	Plastics	0.91
Cast Iron, turned and heated	0.6 to 0.7	Sand	0.76
Chromium, polished	0.08 to 0.36	Sawdust	0.75
Concrete	0.85	Silver, polished	0.02 to 0.03
Cotton, cloth	0.77	Steel, mild	0.2 to 0.32
Copper, polished	0.08 to 0.036	Steel, oxidized	0.79
Glass	0.92	Steel, polished	0.07
Gold, pure and polished	0.018 to 0.035	Steel, galvanized old	0.88
Granite	0.45	Steel, galvanized new	0.23
Gypsum	0.85	Stainless steel, weathered	0.85
Ice	0.97	Stainless steel, polished	0.075
Iron, polished	0.14 to 0.38	Tile	0.97
Iron, plate rusted red	0.61	Water	0.95
Lampblack paint	0.96	Wood, oak	0.91
Marble, white	0.95	Wrought iron	0.94

3.2 Measurement Geometry Setup

The TMP006 can accurately detect signals in almost the entire 180° field of view of the sensor. The final calculated target object temperature is an integration of all of the signals present in the sensor field of view. Therefore, the ability of the TMP006 to accurately calculate the temperature of a target depends on ability of the IR sensor to capture the majority of its signal from the target. This capture effectiveness, in turn, depends on two factors: the angle of incidence and the distance of the TMP006 from the target.

Figure 2 illustrates the dependence of the TMP006 on the angle of incidence compared to the IR signal absorption. For this test, the intensity of an input signal was held constant and was moved throughout the sensor field of view. This figure shows that the majority of the received signal comes from IR sources located at 0° angles of incidence.

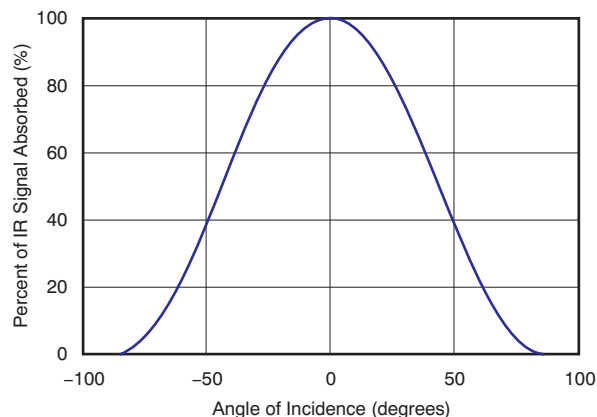


Figure 2. Percentage of IR Signal Absorbed by Sensor versus Angle of Incidence


As a design guideline, place the TMP006 directly underneath the target object with the surface of the target parallel to the TMP006, so the angle of incidence between them is 0°.

The distance that the TMP006 should be placed from the target is largely dictated by the size of the target. Smaller targets must be placed closer to the TMP006 to ensure that the majority of the IR signal captured by the sensor is emitted from the target. A circular target should be placed at a distance less than one-half of the radius of the target to ensure at least 90% of the IR signal that the sensor captures is from the target.

As the sensor is moved away from the target, other objects or surfaces enter into the device field of view. Because the final result is an integration of the entire field of view of the sensor, it is not possible to determine which captured signals come from the target and which captured signals come from the other objects (or surfaces).

As a design guideline, then, the target object should be placed at a distance no further than one-half of the radius of the target from the TMP006.

Figure 3 shows how the percentage of the final IR signal captured by the TMP006 depends on the radius of the target and its distance from the TMP006.

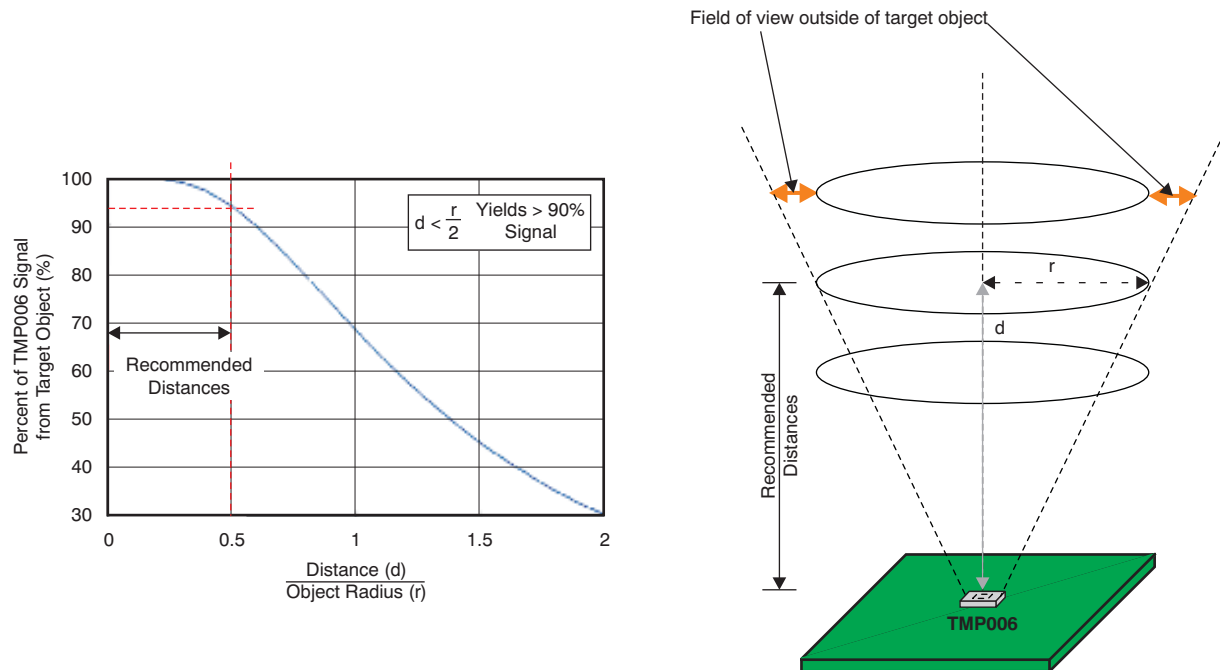

NOTE: Drawing not to scale; for illustration purposes only. The TMP006 field of view is much wider than shown here.

Figure 3. Relationship Between Target Object Size and Distance from the TMP006

4 TMP006 Layout Guidelines

The IR thermopile sensor in the TMP006 is as susceptible to conducted and radiant IR energy from below the sensor on the PCB as it is to the IR energy from objects in its forward-looking field of view. When the area of PCB below the TMP006 is at the same temperature as the die or substrate of the TMP006, heat is not transferred between the IR sensor and the PCB. However, temperature changes on a closely-placed target object or other events that lead to changes in system temperature can cause the PCB temperature and the TMP006 temperature to drift apart from each other. This drift in temperatures can cause a heat transfer between the IR sensor and the PCB to occur. Because of the small distance between the PCB and the bottom of the sensor, this heat energy will be conducted (as opposed to radiated) through the thin layer of air between the IR sensor and the PCB below it. This heat conduction causes offsets in the IR sensor voltage readings and ultimately leads to temperature calculation errors. To prevent and minimize these errors, the TMP006 layout must address three critical factors:

1. Match the thermal time constant of the PCB below the TMP006 IR sensor with the TMP006 sensor itself.
2. Thermally isolate the TMP006 from the rest of the PCB and any heat sources on it.
3. Provide a stable thermal environment to reduce the noise in the measurement readings.

Guidelines for creating a PCB that has been used and tested extensively by Texas Instruments are shown in Figure 4 through Figure 6. These PCB layout guidelines are based on a simplified two-layer design for the TMP006 that has no significant performance reductions from the four-layer design used on the TMP006EVM. For a more complete understanding of the TMP006 layout requirements as well as detailed layout design guidelines used for the TMP006EVM, refer to the related document *TMP006 Layout and Assembly Guide* ([SBOU108](#)), available for download from the [TI website](#).

4.1 Layer 1: Top Layer

Figure 4 shows the top layer of the TMP006 two-layer PCB.

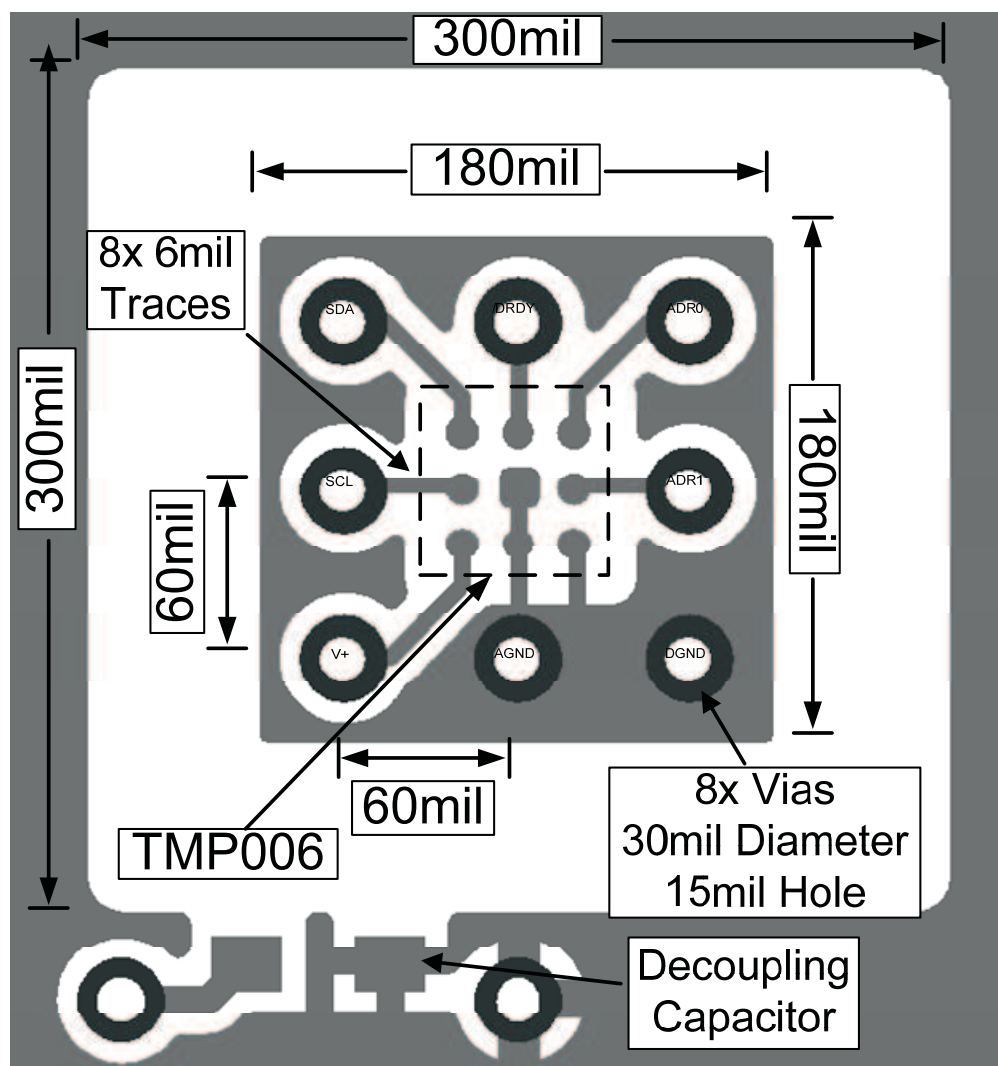


Figure 4. TMP006 Two-Layer PCB: Top Layer

Figure 5 shows an enlarged view of Layer 1 to clearly indicate the TMP006 land pattern and 15-mil x15-mil (.015-in x .015-in) copper fill.

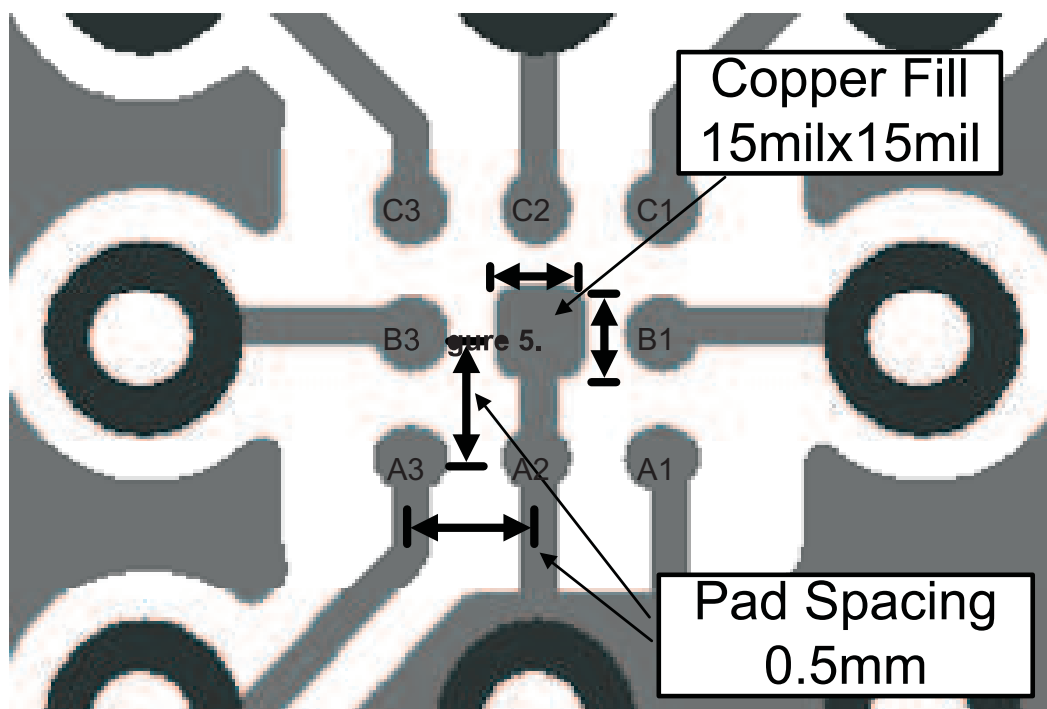


Figure 5. Enlarged View of Layer 1: TMP006 Land Pattern and Copper Fill

4.2 Layer 2: Bottom Layer

The bottom layer of the TMP006 two-layer PCB is shown in Figure 6.

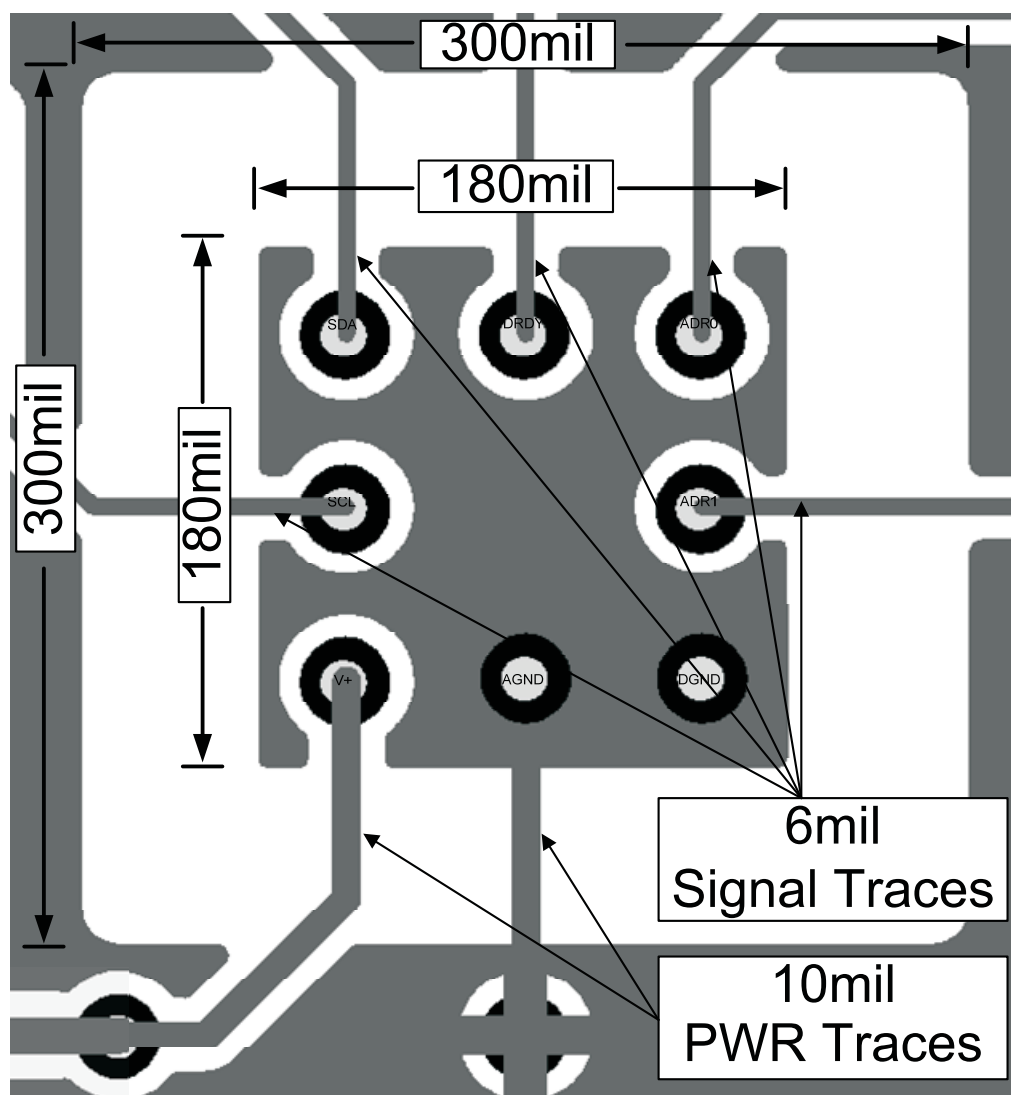


Figure 6. TMP006 Two-Layer PCB: Bottom Layer

5 Object Temperature Calculation

Once the TMP006 has been installed in a system, measurements of the local temperature and object voltage can be made with the TMP006 through the digital interface. Using these two measurements, the target object temperature can be calculated. Section 5.1 presents the calculations required to solve for a target object temperature. V_{OBJ} and T_{DIE} are the readings from the object voltage (Register 0) and local temperature (Register 1) registers in the TMP006, respectively.

5.1 Equations for Calculating Target Object Temperatures

The target object temperature calculations consist of a series of equations that can be used to solve for the target object temperature (T_{OBJ}) in Kelvins. Equation 1 represents the sensitivity of the thermopile sensor and how it changes over temperature:

$$S = S_0 [1 + a_1(T_{DIE} - T_{REF}) + a_2(T_{DIE} - T_{REF})^2] \quad (1)$$

Equation 1 also contains the primary calibration factor, S_0 , which is discussed more in Section 6.

Equation 2 describes an offset voltage that arises because of the slight self-heating of the TMP006, caused by the non-zero thermal resistance of the package and the small operational power dissipation (1 mW) in the device:

$$V_{OS} = b_0 + b_1(T_{DIE} - T_{REF}) + b_2(T_{DIE} - T_{REF})^2 \quad (2)$$

Equation 3 models the Seebeck coefficients of the thermopile and how these coefficients change over temperature.

$$f(V_{OBJ}) = (V_{OBJ} - V_{OS}) + c_2(V_{OBJ} - V_{OS})^2 \quad (3)$$

Equation 4 relates the radiant transfer of IR energy between the target object and the TMP006 and the conducted heat in the thermopile in the TMP006.

$$T_{OBJ} = \sqrt[4]{T_{DIE}^4 + \left(\frac{f(V_{OBJ})}{S}\right)} \quad (4)$$

Solve the system of equations to calculate the temperature of the target object in Kelvins.

The terms used in these formulas are:

- V_{OBJ} : Voltage in TMP006, Register 0
- T_{DIE} : Temperature in TMP006, Register 1
- S_0 : Calibration factor (should be calibrated)
- a_1 : 1.75×10^{-3}
- a_2 : -1.678×10^{-5}
- T_{REF} : 298.15 K
- b_0 : -2.94×10^{-5}
- b_1 : -5.7×10^{-7}
- b_2 : 4.63×10^{-9}
- c_2 : 13.4

6 Calibrating the System

The final step to calculate the temperature of the target object is to calibrate the system by calculating the appropriate sensitivity factor, S_0 . The term S_0 is unique to a given system and can be determined with a simple two-point calibration performed on one or several devices. S_0 is an accumulation of the system-related signal reductions that can occur when using the TMP006/ This value is part of Equation 1 in the object temperature calculations. This series of equations (for the object temperature calculations) are derived in a way that reduces all application-related factors to a single gain error term. Because the errors only create a gain error, the S_0 term can be determined with a simple two-point calibration. The primary contributors to S_0 are the field of view and emissivity of the target object (refer to Section 3 for additional discussion of these two factors).

To determine S_0 , plot the Calibration Function as shown in Equation 2 versus $T_{OBJ}^4 - T_{DIE}^4$. S_0 is equal to the slope of a linear approximation of the plotted data.

$$\text{Calibration Function} = \frac{f(V_{OBJ})}{[1 + a_1(T_{DIE} - T_{REF}) + a_2(T_{DIE} - T_{REF})^2]} \quad (5)$$

Typical values for S_0 are between 5×10^{-14} and 7×10^{-14} .

In order to plot the Calibration Function versus $T_{\text{OBJ}}^4 - T_{\text{DIE}}^4$, the actual temperature of the object (T_{OBJ}) must first be measured using an accurate temperature probe. The local die temperature measurement should be taken from the TMP006 local temperature sensor (Register 1). Ideally, the two points used for the linear slope-fit represent two extreme temperature points in the system. For example, the first temperature measurement point could be taken with the main system in standby mode, and the second temperature measured with the system running at full power.

Figure 7 shows a plot of the calibration function for several TMP006 devices tested in the same system. The calibration functions for the TMP006 devices were plotted over many temperatures by accurately controlling the local temperature and the object temperature using test equipment. Figure 7 shows that all errors are only gain errors; device-to-device variation is limited, meaning that the calibration can be performed on only a single device. This plot features many measurement points for each device; although only two points are required for calibration, using more data points produces a more accurate curve fit.

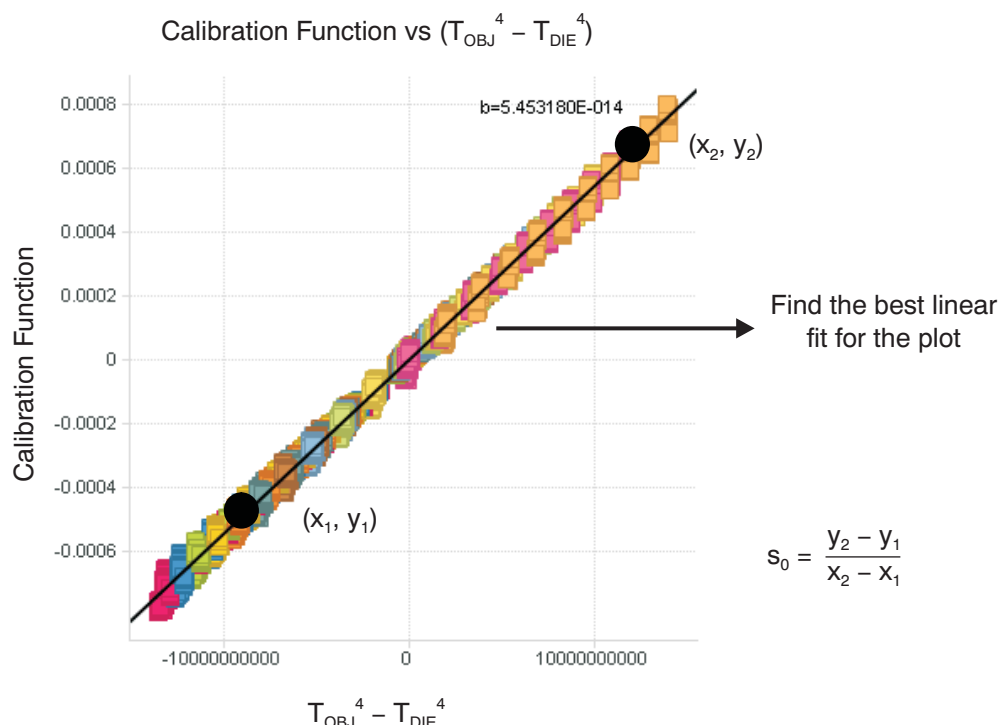


Figure 7. Finding the Slope of the Calibration Function vs $T_{\text{OBJ}}^4 - T_{\text{DIE}}^4$ to Calculate S_0

IMPORTANT NOTICE

Texas Instruments Incorporated and its subsidiaries (TI) reserve the right to make corrections, modifications, enhancements, improvements, and other changes to its products and services at any time and to discontinue any product or service without notice. Customers should obtain the latest relevant information before placing orders and should verify that such information is current and complete. All products are sold subject to TI's terms and conditions of sale supplied at the time of order acknowledgment.

TI warrants performance of its hardware products to the specifications applicable at the time of sale in accordance with TI's standard warranty. Testing and other quality control techniques are used to the extent TI deems necessary to support this warranty. Except where mandated by government requirements, testing of all parameters of each product is not necessarily performed.

TI assumes no liability for applications assistance or customer product design. Customers are responsible for their products and applications using TI components. To minimize the risks associated with customer products and applications, customers should provide adequate design and operating safeguards.

TI does not warrant or represent that any license, either express or implied, is granted under any TI patent right, copyright, mask work right, or other TI intellectual property right relating to any combination, machine, or process in which TI products or services are used. Information published by TI regarding third-party products or services does not constitute a license from TI to use such products or services or a warranty or endorsement thereof. Use of such information may require a license from a third party under the patents or other intellectual property of the third party, or a license from TI under the patents or other intellectual property of TI.

Reproduction of TI information in TI data books or data sheets is permissible only if reproduction is without alteration and is accompanied by all associated warranties, conditions, limitations, and notices. Reproduction of this information with alteration is an unfair and deceptive business practice. TI is not responsible or liable for such altered documentation. Information of third parties may be subject to additional restrictions.

Resale of TI products or services with statements different from or beyond the parameters stated by TI for that product or service voids all express and any implied warranties for the associated TI product or service and is an unfair and deceptive business practice. TI is not responsible or liable for any such statements.

TI products are not authorized for use in safety-critical applications (such as life support) where a failure of the TI product would reasonably be expected to cause severe personal injury or death, unless officers of the parties have executed an agreement specifically governing such use. Buyers represent that they have all necessary expertise in the safety and regulatory ramifications of their applications, and acknowledge and agree that they are solely responsible for all legal, regulatory and safety-related requirements concerning their products and any use of TI products in such safety-critical applications, notwithstanding any applications-related information or support that may be provided by TI. Further, Buyers must fully indemnify TI and its representatives against any damages arising out of the use of TI products in such safety-critical applications.

TI products are neither designed nor intended for use in military/aerospace applications or environments unless the TI products are specifically designated by TI as military-grade or "enhanced plastic." Only products designated by TI as military-grade meet military specifications. Buyers acknowledge and agree that any such use of TI products which TI has not designated as military-grade is solely at the Buyer's risk, and that they are solely responsible for compliance with all legal and regulatory requirements in connection with such use.

TI products are neither designed nor intended for use in automotive applications or environments unless the specific TI products are designated by TI as compliant with ISO/TS 16949 requirements. Buyers acknowledge and agree that, if they use any non-designated products in automotive applications, TI will not be responsible for any failure to meet such requirements.

Following are URLs where you can obtain information on other Texas Instruments products and application solutions:

Products

Audio	www.ti.com/audio
Amplifiers	amplifier.ti.com
Data Converters	dataconverter.ti.com
DLP® Products	www.dlp.com
DSP	dsp.ti.com
Clocks and Timers	www.ti.com/clocks
Interface	interface.ti.com
Logic	logic.ti.com
Power Mgmt	power.ti.com
Microcontrollers	microcontroller.ti.com
RFID	www.ti-rfid.com
RF/IF and ZigBee® Solutions	www.ti.com/lprf

Applications

Communications and Telecom	www.ti.com/communications
Computers and Peripherals	www.ti.com/computers
Consumer Electronics	www.ti.com/consumer-apps
Energy and Lighting	www.ti.com/energy
Industrial	www.ti.com/industrial
Medical	www.ti.com/medical
Security	www.ti.com/security
Space, Avionics and Defense	www.ti.com/space-avionics-defense
Transportation and Automotive	www.ti.com/automotive
Video and Imaging	www.ti.com/video
Wireless	www.ti.com/wireless-apps

TI E2E Community Home Page

e2e.ti.com

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265
Copyright © 2011, Texas Instruments Incorporated