


# Preparing 5 / 7 Drawer Trolley

Stock No.


29779/29792

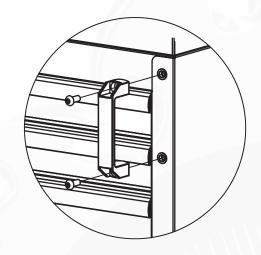

1. Attach Handles

Attach handles to front angled side with 4 pieces of M8 x 20mm bolt.


Do not fully tighten.

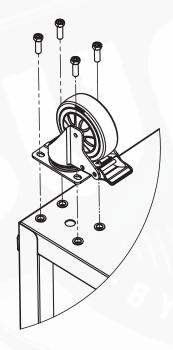

### 3. Attach Castors

Attach castors to the bottom of unit with 16 pieces of M8 x 20mm bolt.

Do not fully tighten.

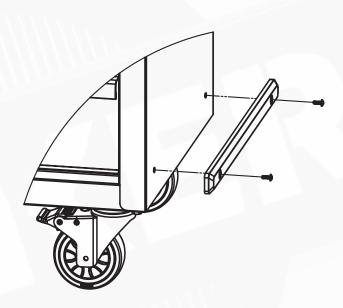

To make assembly easier we recommend having two


persons aid one another in assembly.

## 2. Attach Bumpers

Attach bumpers to side panel with 4 pieces of M4 x 10mm bolt.

Do not fully tighten.



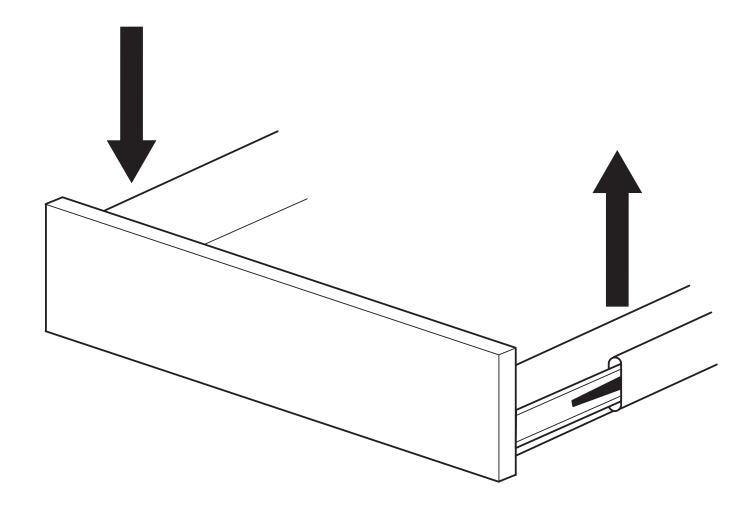

## **REMOVING AND REPLACING THE DRAWERS:**

- Pull the drawer completely out
- Press down the left tab and lift up the right tab
- Pull drawer off sliders
- To reinstall the drawer, realign with the internal drawer slider and push in until locked in place

#### **CASTOR MAINTENANCE**

Grease the castors annually using high-quality bearing grease.

#### **CARE AND CLEANING**

Periodically the surfaces should be cleaned with a mild detergent and water. Grease and oil can be removed with most standard cleaning fluids. For safety, use a non-flammable cleaning fluid.

Auto wax will preserves the storage unit's luster finish and protects against scratches.

