




Creating Custom Length Wires with the V5 Crimping Tool

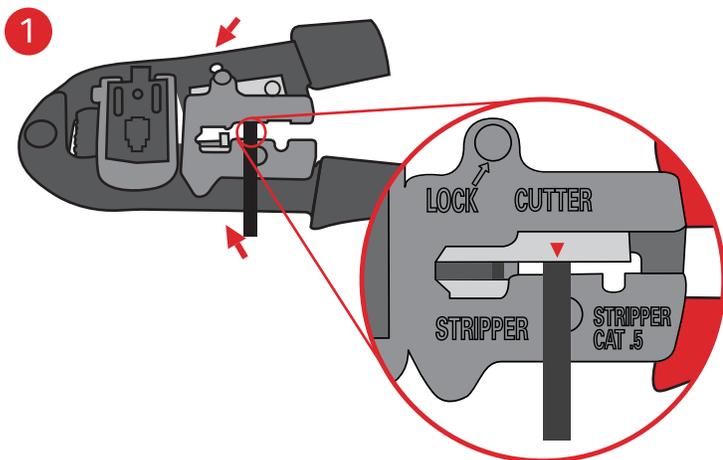


To cut to length, insert the V5 Cable Stock underneath the cutting blade. Squeeze the crimping tool firmly to cut the cable.

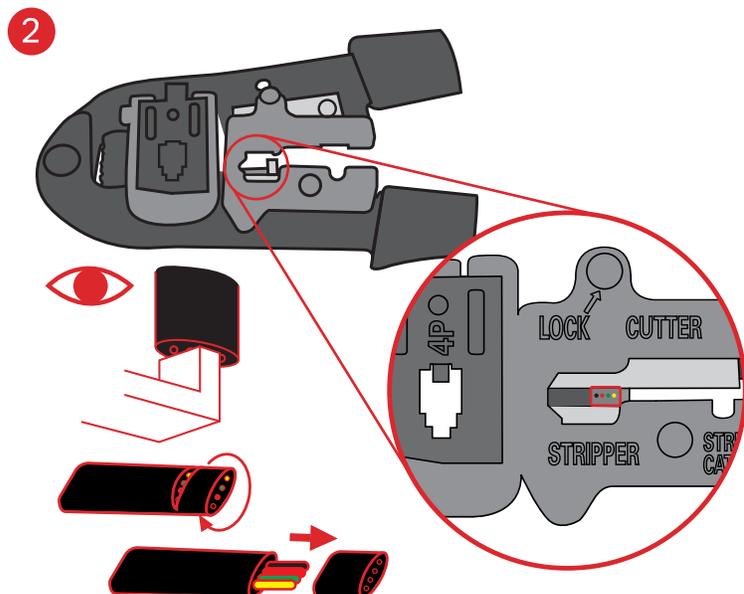

Place the cable into the wire stripper and press it flush against the metal back stop. Squeeze down, and with the tool still squeezed, pull the cut cable from the end of the cable stock.

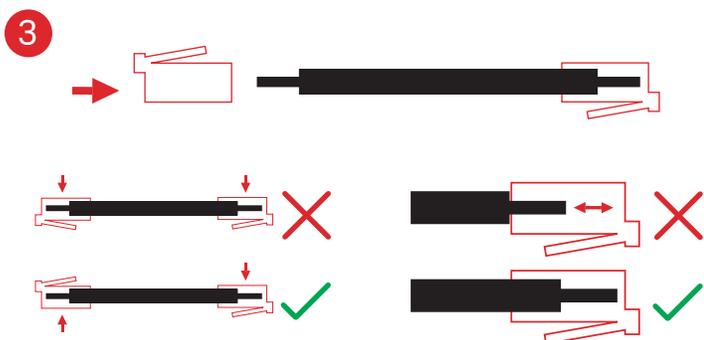

Insert connectors on each side of the cut cable. Ensure that cables are fully seated inside connector, and that they are correctly oriented.

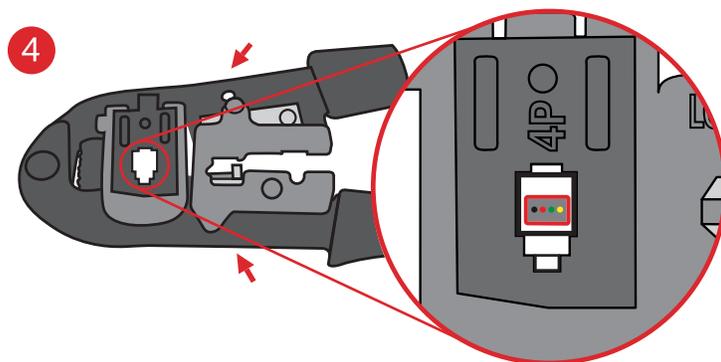

Insert the connector into the crimping tool and squeeze firmly.