

LUMOTAST 16, emergency stop button, 2 NC + 1 NO, Silver, Flat quick-connect terminal 2.8 x 0.5 tin-plated, reset by rotating, arrows red



fields of application

- > Measurement-control-regulation
- > Electrical engineering
- > Mechanical and system engineering
- > Signalling systems
- > Handheld terminals
- > Industrial robots

yellow

> Model construction

special features

- > Round mounting hole, diameter 16.2 mm
- > Mounting depth: 18 mm
- > Terminal: male quick-connect terminal 2.8 x 0.5 mm
- > Solderability: lead-free soldering with maximum 280°C for 5 seconds
- > Water jet protection class IP 65 and IP 67 on front



description

The LUMOTAST 16 emergency stop elements are equipped with up to 3 contacts. This means that, for example, 2 redundant contacts can be earmarked for safety applications, while a signaling contact triggers the position sensing. An additional safety factor for your application.

technical data

Collar color

| > | general |
|---|---------|
| _ | uenerai |

Color of mushroom red
Legending color red

Collar shape round -25 °C Operating temperature, min. Operating temperature, max. 70 °C -40 °C Storage temperature, min. Storage temperature, max. 80 °C illuminated No Packaging Box Packaging unit 10 pcs. net weight 13.4 g

 Operating life
 30,000 cycles

 B10
 50,000 cycles

 B10d
 100,000 cycles

Degree of protection, front side, according to DIN EN 60529 IP67

UL Enclosure Type Rating front type 1

side

shock resistance 05 side 05 frontal

direct links

> RAFI eCatalog

The information in this data sheet only contains general descriptions and / or performance features, which may not apply precisely as described to the respective application, and which my change due to further product enhancements. The technical data, illustrations and other information about our products are the mere results of individual technical testing. These descriptions and other product features are only binding if they expressly agreed upon at the time of the conclusion of a binding contract. In all other cases, we reserve the right to make technical changes as well as changes of availability. Pictures and other graphic illustrations are approximations only. All product names may be trademarks or brand names of the RAFI Group or any other sub-supplier of RAFI. The use of such by any third parties for their own purposes may infringe the rights of the respective entity holding those rights.

date: Feb 28, 2024 page: 1/5

RAFI GmbH & Co. KG

Ravensburger Str. 128-134 88276 Berg / Ravensburg Germany www.rafi-group.com, info.headquarters@rafi-group.com



MOQ order 10 pcs.

Pollution degree acc. to DIN EN

61010-1

RoHS compliant Yes

REACH compliant

> mounting diameters

Outside dimension, length 29.6 mm
Outside dimension, width 29.6 mm
Outside dimension, height 40.6 mm
Mounting hole 16.2 mm
Mounting depth 18 mm
Installation height 22.6 mm

> mechanical data

Actuation function latching

Contact function 2 NC + 1 NO

Contact material Silver

Resetting by rotating
Fixing Threaded ring

Solderability Yes
Threaded ring torque, max. 0.8 Nm

Terminal on the rear Flat quick-connect terminal 2.8 x 0.5 tin-plated

Pollution degree 2

Yes

> electrical data

Rated insulation voltage 250 V Rated voltage, min. 10 V

Rated voltage, max. acc. to UL 35 V / 2 A (AC / DC)

60947

Rated current, min. 0.015 A
Rated power, max. 250 W

Category of use AC-15 / B300 240 V / 1,5 A (IEC 60947)

35 V / 5 A (IEC 60947)


Category of use DC-13 / Q300 35 V / 2 A (IEC60947)

250 V / 0,27 A (IEC)




drawings

Dimensioned drawing

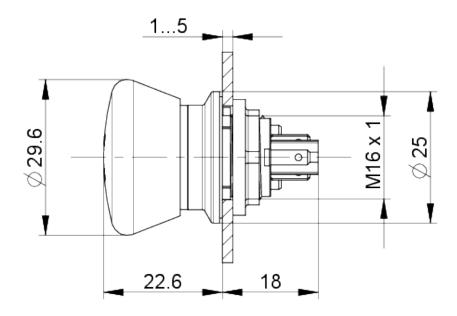


Mounting hole drawing

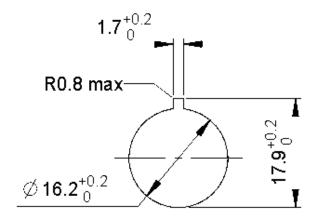



Schematic diagram

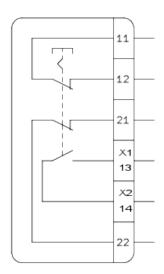



mounting

LUMOTAST 16, LUMOTAST 22, LUMOTAST 25, RAMO 22, RAMO 30

Betriebsanleitung Not-Halt-Befehlsgeräte (Original)

Operating Instructions EMERGENCY STOP Control Units (Translation of the source text) Mode d'emploi auxiliaires de commande d'ARRÊT D'URGENCE (Traduction original)



1. Sicherheitshinweise

- Vor Inbetriebnahme bitte Betriebsanleitung sorgfältig lesen. Not-Halt-Befehlsgeräte erfüllen eine Personenschutz-Funktion. Unsachgemäßer Einbau, sachwidrige Anwendung oder Manipulationen können zu schweren Verletzungen von Personen
- Not-Halt-Befehlsgeräte dürfen nicht umgangen, entfernt oder auf andere Weise unwirksam
- Vor Beginn der Installation Anlage und Gerät spannungsfrei schalten!
 Vor Erst-Inbetriebnahme der Maschine oder Anlage Not-Halt-Befehlsgerät durch Testbetätigung auf korrekte Montage und Funktion überprüfen.
- Not-Halt-Befehlsgeräte mit sichtbaren Beschädigungen sind unverzüglich auszutauschen. Not-Halt-Funktion darf nicht als Ersatz für Schutzmaßnahmen oder andere Sicherheitsfunk-
- Not-Halt-Funktion darf die Wirksamkeit von Schutzreinrichtungen oder von Einrichtungen mit anderen Sicherheitsfunktionen nicht beeinträchtigen.

(GB) 1. Safety instructions

- se read the operating instructions carefully prior to use
- EMERGENCY STOP control units are designed to protect persons. Inappropriate installation, D 3. Produktbeschreibung
 - improper use or inadmissible manipulation may result in severe injuries!

 EMERGENCY STOP control units must never be bypassed, removed or disabled in any other

 - Disconnect the power supply to the machinery and device prior to installation!

 Operate the EMERGENCY STOP control unit to test and verify proper installation and function prior to initial start-up of the machine or line.
 - An EMERGENCY STOP control unit with an obvious defect must be replaced immediately The emergency stop function is not to be used for safety measures or safety functions.

 - The emergency stop function must not compromise the effectiveness of safety devices or devices with other safety functions.

F 1. Consignes de sécurité

- Il faut soigneusement lire le mode d'emploi avant la mise en service. Les auxiliaires de commande d'ARRÊT D'URGENCE remplissent une fonction de protection personnelle. Un montage inapproprié, une application contre-indiquée ou une manipulation peuvent causer des blessures corporelles graves!

 Il est interdit de ponter, d'enlever ou de rendre inopérants les auxiliaires de commande d'ARRÊT
- D'URGENCE!
- Avant d'entamer l'installation il faut mettre l'installation et l'appareil hors tension!
- Avant la première mise en service de la machine ou de l'installation, contrôler l'auxiliaire de commande d'ARRÊT D'URGENCE quant au montage et à un fonctionnement corrects.
- Les auxiliaires de commande d'ARRÊT D'URGENCE présentant des dommages visibles sont à remplacer sans tarder.
- La fonction d'arrêt d'urgence ne peut pas être utilisée en remplacement de mesures de protec-
- tion ou d'autres fonctions de sécurité. La fonction d'arrêt d'urgence ne peut pas entraver l'efficacité de dispositifs de sécurité ou de dispositifs possédant d'autres fonctions de sécurité

D 2. Allgemeine Beschreibung und bestimmungsgemäße Verwendung

Not-Halt-Befehlsgeräte sind elektromechanische Schältgeräte zum Schutz von Personen. Sie dienen der schnellen Abschältung um Maschinen, Fährzeuge und Anlagen in einen sicheren Zu-stand zu bringen, um Gefahren und Schäden für Mensch und Maschine zu vermeiden oder zu

Für die Inbetriebnahme, den Einsatz und technischen Überprüfungen gelten im speziellen fol

- Die Maschinenrichtlinie 2006/42/EG
- Die Sicherheitsvorschriften sowie
 Die Unfallverhütungsvorschriften / Sicherheitsregeln Hersteller und Benutzer von Maschinen, an denen Not-Halt-Befehlsgeräte eingesetzt werden, tra

gen die Verantwortung für die Beachtung der Betriebsanleitung, wie auch für die Einhaltung der für sie geltenden Sicherheitsvorschriften und -regeln.

Für den Einbau und Betrieb von Not-Halt-Befehlsgeräten müssen zur bestimmungsgemäßen Verwendung folgende Anforderungen beachtet und eine Gefahrenbewertung durchgeführt

- EN ISO 13850:2015 EN 60204-1/A1:2009 EN ISO 13849-1:2015

(GB) 2. General description and intended use

EMERGENCY STOP control units are electromechanical switching devices designed to protect persons. They are used for instant disconnection to achieve a safe status of machines, vehicles or other equipment in order to avoid or reduce risks or damage to man and machine.

The following standards and regulations apply to their start-up, use and technical inspections without limitation:

- Machinery Directive 2006/42/EC
- Accident prevention regulations / rules for safety

Manufacturers and users of machines provided with EMERGENCY STOP control units are resp sible for ensuring that the operating instructions are observed and the applicable safety standards and rules complied with.

For the installation and operation of EMERGENCY STOP control devices in line with the intended use, the following requirements must be observed and a risk assessment must be performed:

- EN ISO 13849-1:2015 - EN ISO 13850:2015

- EN ISO 13849-2:2012 - EN 60204-1/A1:2009

F) 2. Description générale et application conforme aux prescriptions

Les auxiliaires de commande d'ARRÉT D'URGENCE sont des appareils de commutation élec-tromécaniques pour protéger des personnes. Ils servent à couper rapidement les machines, les véhicules et les installations, à les amener dans un état de sécurité fiable pour éviter ou diminuer les risques de dommages corporels et de dégâts matériels. Pour la mise en service, l'utilisation et les contrôles techniques, il faut respecter les prescriptions suivantes:

- La directive sur les machines selon la norme 2006/42/EG
- Les règlements de sécurité ainsi que Les instructions sur la prévention des accidents / règlements de sécurité

C'est aux fabricants et utilisateurs de machines où des auxiliaires de commande d'ARRÊT D'URGENCE sont utilisés, qu'incombe la responsabilité du respect du mode d'emploi ainsi que des prescriptions et règlements de sécurité en vigueur.

Pour l'installation et l'exploitation de dispositifs d'ARRÊT D'URGENCE, les exigences suivantes doivent être respectées et une évaluation des risques doit être menée en vue d'une utilisation en bonne et due forme:

- EN ISO 13849-1:2015 - EN ISO 13850:2015
- EN ISO 13849-2:2012

Aufbau: Die Not-Halt-Befehlsgeräte bestehen aus einer Kombination von Betätigern mit einem oder mehreren Schaltelementen. Die Not-Halt-Befehlsgeräte gibt es als Einbauversion oder in einem Gehäuse verbaut. Die Betätigung erfolgt durch Drücken, die Entriegelung erfolgt je nach

- /ariante entweder durch:
 Drehbewegung in beide Richtungen nach links oder nach rechts
- Ziehen entgegen der Betätigungsrichtung
 "Aktiv/laktiv"-Varianten: "Aktiv": beleuchtet, rot, Not-Halt Funktion gegeben; "Inaktiv": unbeleuchtet, transparent, keine Not-Halt Funktion.

(GB) 3. Product description

Design: An EMERGENCY STOP button is an assembly of actuator combined with one or more contact blocks. EMERGENCY STOP buttons are available either as a panel mounting version or installed in a separate housing. They are operated by pressing. Unlatching is done by one of two methods:

- Turning in either direction
- Pulling against the direction of operation
- "Aktiv/Inaktiv"-Variants: "Aktiv": illuminated red, Emergency Stop function given; "Inaktiv": not illuminated, transparent, no Emergency Stop function.

Structure: Les boutons-poussoirs d'ARRÊT D'URGENCE sont composés d'une combinaisor d'actionneurs ou de plusieurs éléments de commutation. Les boutons-poussoirs d'ARRÉT D'URGENCE sont disponibles en version intégrable ou installés dans un boîtier.

L'actionnement s'effectue par appui sur ces derniers. Selon la variante, le déverrouillage s'effectue

- Soit en tirant dans la direction opposée de la direction d'actionnement
- "Aktiv/Inaktiv"-Variantes: "Aktiv": lit rouge, d'arrêt d'urgence fonction donné; "Inaktiv": pas lit,

| Produkt Product Produit | Einbau Ø mm Mounting Ø mm Montage Ø mm | Betätiger Actuator Actionneur | | Schaltelement Contact block Elément de commutation |
|-------------------------------|--|--|--|---|
| LUMOTAST 16 | Ø 16,2 | 115.213.002/0000 115.213 115.213.002/0000 115.213 115.213.004/00 | 103/0000 104/0000 301/0000 302/0000 303/0000 304/0000 311/0000 311/0000 313/0000 314/0000 401/0000 402/0000 402/0000 404/0000 411/0000 411/0000 414/0000 414/0000 | integriert / incl. |
| LUMOTAST 22 | Ø 22,3 | 1.15.105.002/0000 1.15.105. 1.15.105.012/0000 1.15.105. 1.15.105.022/0000 | 032/0000 112/0000 | integriert / incl. |
| LUMOTAST 25 | Ø 16,2 | 1.15.154.006/0301 1.15.154.016/0301 | | integriert / incl. |
| RAMO 22 | Ø 22,3 | 1.10.031.001/0000 1.10.031.004/0330 1.10.031.022/0330 1.10.031.101/0000 | | integriert / incl. |
| RAMO 30 | Ø 30,3 | 1.11.031.001/0000 1.11.031.004/0330 1.11.031.022/0330 1.11.031.101/0000 | | integriert / incl. |

Tabelle 3.1 Weitere technische Daten sind dem Katalog zu entnehmen.

GB Table 3.1 For additional technical data, please refer to the catalogue

(F) Tableau 3.1 Pour les autres caractéristiques techniques, voir catalogue,

The information in this data sheet only contains general descriptions and / or performance features, which may not apply precisely as described to the respective application, and which my change due to further product enhancements. The technical data, illustrations and other information about our products are the mere results of individual technical testing. These descriptions and other product features are only binding if they expressly agreed upon at the time of the conclusion of a binding contract. In all other cases, we reserve the right to make technical changes as well as changes of availability. Pictures and other graphic illustrations are approximations only. All product names may be trademarks or brand names of the RAFI Group or any other sub-supplier of RAFI. The use of such by any third parties for their own purposes may infringe the rights of the respective entity holding those rights. date: Feb 28, 2024 page: 5/5

RAFI GmbH & Co. KG

Ravensburger Str. 128-134 88276 Berg / Ravensburg Germany www.rafi-group.com info.headquarters@rafi-group.com