



After the development of the chem-wick and the no clean flux formula years ago, the desoldering wick has not been changed anymore. JAMA and AREXX have developed a ergonomic dispenser to keep the desoldering braid. This new ergonomic dispenser is much more user friendly than the regular dispenser. Also there is less braid waste (1), which has positive advantages for our environment. The ABS holder (3) and the metal tip (2) of the dispenser are non magnetic and ESD free. The no clean flux formula implies that not only the solder will be absorbed but also the flux.

Desoldering *When you made a soldering failure, you can easily remove the mistaken component with wick.*

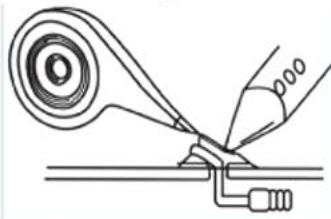

Put the soldering wick on the solder path. Heat the wick and the path with the soldering iron and the copper braid of the wick will suck the solder.

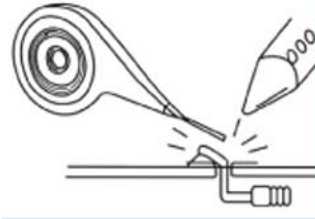

When the wick removed all the solder from the path, pull back the wick and the soldering iron simultaneously

Technical specifications:

- Free oxygen copper braid
- Free washing no clean formula Flux
- ESD FREE ERGONOMIC HOUSING
- Braid length 2 meter
- Braid width 1.7mm or 2.6mm