
# 70-9119 RKP14C Compact Project PCB Kit Component List and Instructions

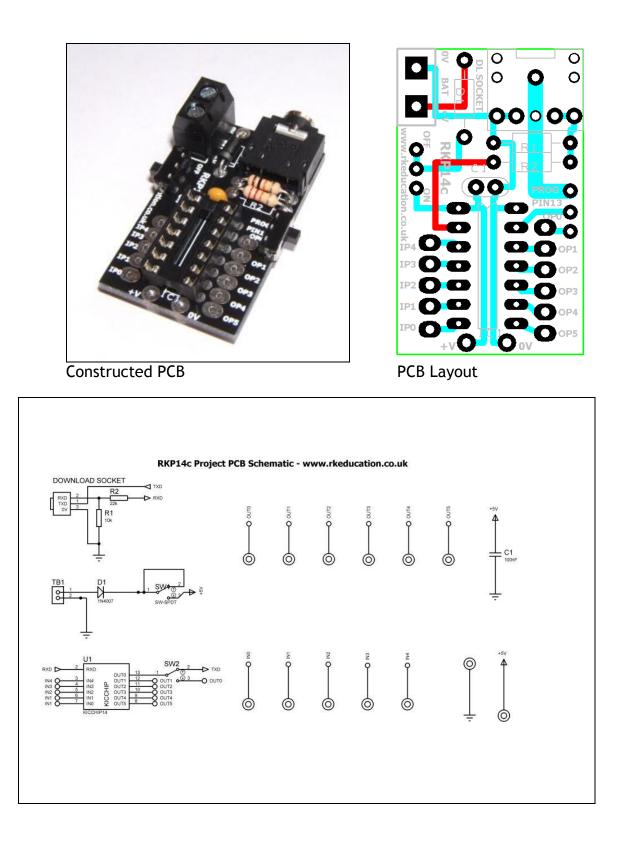

## Schematic Diagram Description

The RKP14C compact project PCB has been designed to use PIC microcontrollers such as Genie and PICAXE.

- Software is downloaded from a PC into the microcontroller via a 3.5mm stereo socket
- All input and output pins have a PTH
- Easily interfaced to peripheral devices
- Power supplied via a terminal block 6V DC is recommended
- Power switch and LED power indicator

## Components List

- C1 100nF multilayer ceramic capacitor
- D1 1N4007

IC1 - 14 way DIP socket with microcontroller e.g. Genie

R1 -  $10k\Omega \frac{1}{4}$  watt resistor (brown black orange)

R2 -  $22k\Omega$  <sup>1</sup>/<sub>4</sub> watt resistor (red red orange)

DL SOCKET - PCB mount 3.5mm stereo connector

TB1 - 2 way 5mm pitch terminal block for power supply

Ultra miniature slide switches for power switch and program select switch

## Instructions

The PCB has been designed to use microcontrollers based on PIC, e.g. Genie. For instructions on using your chosen microcontroller please see the appropriate website.

## Connecting Power

The power is connected via the terminal block TB1. The OV input, usually black is marked clearly, as is +V which is usually red, a regulated 6V DC power supply can be used. Other voltages may be used as required. The recommended maximum voltage for the PIC is 5.5V DC. The 6V DC supply is reduced by approximately 0.7V DC by diode D1. D1 may be left out but if this is done adjust the supply voltage accordingly.

A power switch has been included and is below TB1.

#### Downloading software

Once the software has been written using the Genie Programming Editor (or equivalent) it can be downloaded into the Genie (or equivalent). This is downloaded using a download cable that connects either to your PC's serial port or USB port. Insert the download plug into the download socket and activate the program function in your Programming Editor. The slide switch labelled pin7 must be set to **PROG.** It will need to be set to **OPO** when the software is being executed. If all goes well it will tell you the program download was successful.

#### Using the I/O pins

Using the I/O pins is simple and is just a case of soldering jumper wires between the appropriate pin and peripheral. Remember to use a common OV. Power supply pins have been included below IC1, there is +VE on the left and OV on the right.

