


BOT120 PICAXE-20X2 MICROBOT

Microbot Overview


The BOT120 PICAXE 20X2 Microbot is a simple to assemble kit that uses a unique design which requires no soldering of wires to build and/or reconfigure a versatile robot.

At the heart of the Microbot is a motherboard which contains a powerful PICAXE 20X2 microcontroller which can be programmed using flowcharts using the 'Logicator for PICAXE' software or in the PICAXE BASIC language. The Microbot can be programmed on Windows, Linux and Mac computer systems. Programs are downloaded via the AXE027 USB cable (purchase separately).

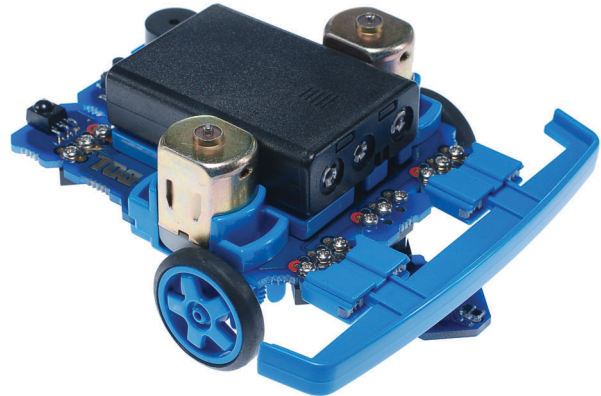

The Microbot motherboard is also fitted with a battery box, 2 motors to create movement, a piezo sounder to make sounds, two LED 'eyes', a push switch and a download socket for connecting the AXE027 USB programming cable.

Various input/output modules can also be easily connected to the motherboard via the unique patented 'microbric edge' and connector 'bric'. A 'microbric edge' consists of three conductors (+ V, 0V and Data). The plastic bric is used to connect two 'microbric edges' together and then clamping nut/bolts are used to complete the electrical connection and to physically hold the assembly together.

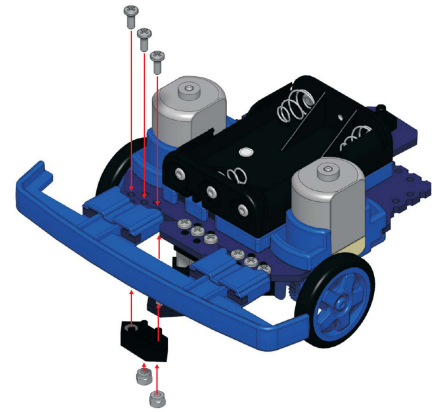

The starter pack contains a number of modules including bumper, line tracker, pen holder and a servo connector. Other sensor modules are also available separately in 'add-on packs' – for instance the BOT121 sensors pack contain an infra-red sensor module to receive commands from a TV style remote control, two LDR light sensor modules and an infra-red transmitter module.

PICAXE Programming System


The 'brain' of the Microbot is a powerful PICAXE-20X2 microcontroller that can be reprogrammed by the end user. Therefore the Microbot can be easily customised and programmed with new features as required. For further details about using the PICAXE system please see the PICAXE manuals, which are available as a free download from www.picaxe.co.uk

This manual includes side by side examples of both 'PICAXE BASIC' and 'Logicator flowchart' programs. Either can be used to program Microbot.

Microbot Power Supply

The Microbot is designed to run at 4.5V from 3 x AAA (LR03, 24A) size batteries (not supplied). Good quality alkaline batteries are recommended. Always ensure the batteries are connected the correct way around and do not mix new and old, or different types, of batteries together.

If the Microbot fails to operate or moves erratically try replacing the batteries. Please dispose of old batteries by taking to a recycling centre.

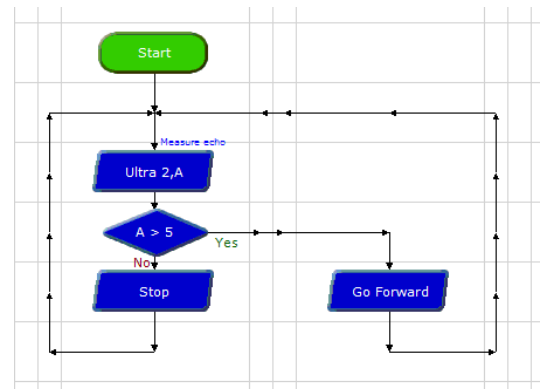


Contents

Microbot Overview	1
PICAXE Programming System	1
Microbot Power Supply	1
BOT120 Microbot Contents List	3
The Microbric Connector	4
Assembly 1 – Motherboard Panel	5
Assembly 2 – Battery Box	6
Assembly 3 – Motor Housing	7
Assembly 4 - Motors	7
Assembly 5 - Wheels, Tyres and Rear Skid	9
Assembly 6 - Line Tracker	10
Assembly 7 – Bumper Switches	12
Assembly 8 - Pen Holder, Servo and SRF005 Modules	14
Fully Assembled Microbot	14
Motor Trouble Shooting	15
Programming Software	16
Programming Cable	16
Download Hard Reset	17
PICAXE-20X2 Pin Connections	17
PICAXE-20X2 Microbot Pinout Table (Logicator)	18
PICAXE-20X2 Microbot Pinout Table (Programming Editor / AXEpad)	19
Programming Example 1 - LED Eyes	20
Programming Example 2 – Push Button Switch	21
Programming Example 3 – Bumper	22
Programming Example 4 – Piezo Sounder	23
Programming Example 5 – Motors	24
Programming Example 6 – Line Tracker Testing	27
Programming Example 7 – Line Tracker Program	28
BOT121 Microbot Sensors Pack	29
Assembly 9 - Infra-red Receiver (IR RX) Module	31
Assembly 10 - Infra-red Transmitter (IR TX) Module	31
Using the TVR010A Infra-red TV Style Remote	32
Programming Example 8 – Infra-red Receiver	33
Programming Example 9 – Infra-red Transmitter	34
Assembly 11 - LDR Light Sensor Modules	35
Programming Example 10 – Testing LDR Light Sensors	35
Programming Example 11 – Light Follower	36
SRF005 Ultrasonic Range Finder	38
Assembly 12 - SRF005 Ultrasonic Range Finder	38
Programming Example 12 – Testing SRF005	39
Programming Example 13 – Using the SRF005	40
BOT123 Servo Upgrade Pack	41
Assembly 13 - BOT123 Servo / SRF005 Servo Adapter	42
Programming Example 14 – Using Servos	42
BOT127 Line Tracker / LED Upgrade Pack	44
Appendix 1 - Home Made Sensors	45
Appendix 2 - BOT120 Microbot Motherboard Schematic	46
Appendix 3 - BOT120 Sensors Schematic	46
Appendix 4 - BOT121 Sensors Pack Schematic	47
Appendix 5 - BOT123 Servo Pack Schematic	47
Appendix 6 - Advanced PIC (Non-PICAXE) Programming	48
Appendix 7 - Copyright and Trademarks	49
BOT110 Versabot - Microbot's 'big brother!'	49

BOT120 Microbot Contents List

- BOT120 Microbot Pack (software free download)
- BOT120S Microbot Pack with AXE026 Serial Cable and software CD
- BOT120U Microbot Pack with AXE027 USB Cable and software CD

Qty	Description	Replacement order code
1	<i>PCB panel containing:</i> Microbot motherboard Bumper Modules x 2 Line Tracker Module Pen Holder Module Servo Module PCB Quarter Module PCB SRF005 Module PCB	BOT120 BOT919 BOT127 BOT120 BOT123 BOT918 BOT120
2	Motors	BOT900
1	Battery Holder	BOT911
1	Battery Base	BOT910
2	Motor Housings	BOT902
2	Axles	BOT903
2	Wheels	BOT904
2	Tyres	BOT905
1	Bumper	BOT906
2	Bumper connectors	BOT907
2	Bumper contact rubber (elastomer)	BOT908
1	Skid	BOT909
19	M2 hex head bolts	BOT125
12	M2 domed nuts	BOT125
4	14mm support posts	BOT126
2	M3 battery mount bolts	BOT920
2	M3 battery mount nuts	BOT921
6	bricks	BOT125
2	worm gears	BOT901
1	3 way straight header	CON035
1	Allen Key	BOT124
1	tube grease	BOT912

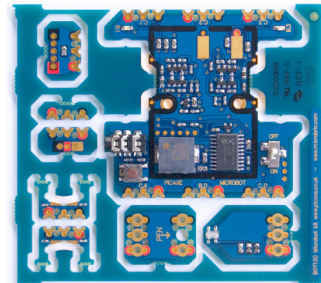

The full assembly instructions and program examples are found in the Microbot manual which is a free download from:


<http://www.rev-ed.co.uk/docs/bot120.pdf>

The Microbric Connector

The Microbot is delivered as a pre-assembled panel containing the electronic modules as well a set of self-assembly mechanical parts.

A unique aspect of the Microbot is that all assembly of the main parts can be completed without requiring a soldering iron or other tools apart from an Allen key. All parts of the Microbot starter pack either bolt or clip together so can be quickly and easily connected, rearranged, or removed as required.

The circuit boards are connected to each other using a patented plastic 'microbric'. The bric has two purposes, firstly it physically holds the modules together and secondly it provides electrical connection between the modules.


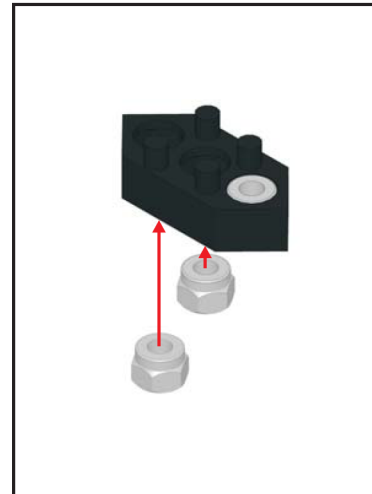


Each bric has three holes into which nuts should be inserted to form a complete bric assembly


Each bric has four locating posts which mount with corresponding holes in the circuit board modules; two posts go into one board and two into the other.



Note that the posts only allow the bric to be connected in one way. When correctly oriented the connecting bric will fit flush to the circuit board. If incorrectly fitted the connecting bric will be angled to the circuit board; in this case remove the connecting bric, rotate it through 180 degrees and then refit.

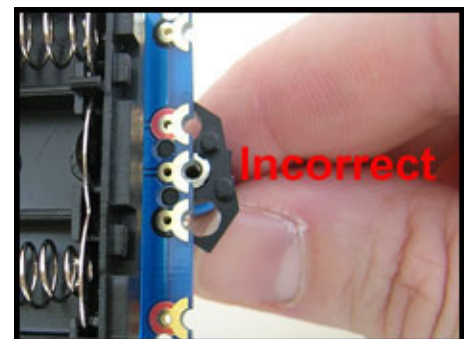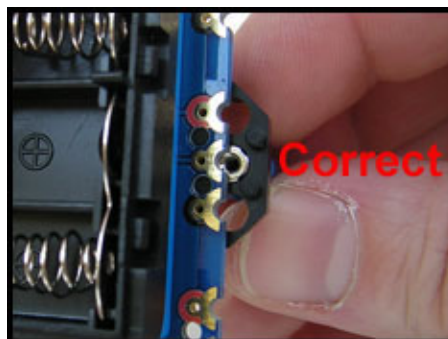


When aligned correctly, bolts are then used to clamp the two modules together and to form electrical contact from one board to the other. Note that the connection points on the modules are colour coded – the contacts with the red marking must always connect together.

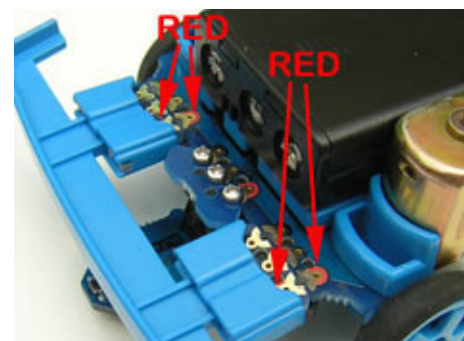

Always switch the Microbot power off when connecting or disconnecting modules. This will prevent accidentally short circuits if the metal allen key accidentally knocks against two contacts at the same time.

Assembly 1 – Motherboard Panel

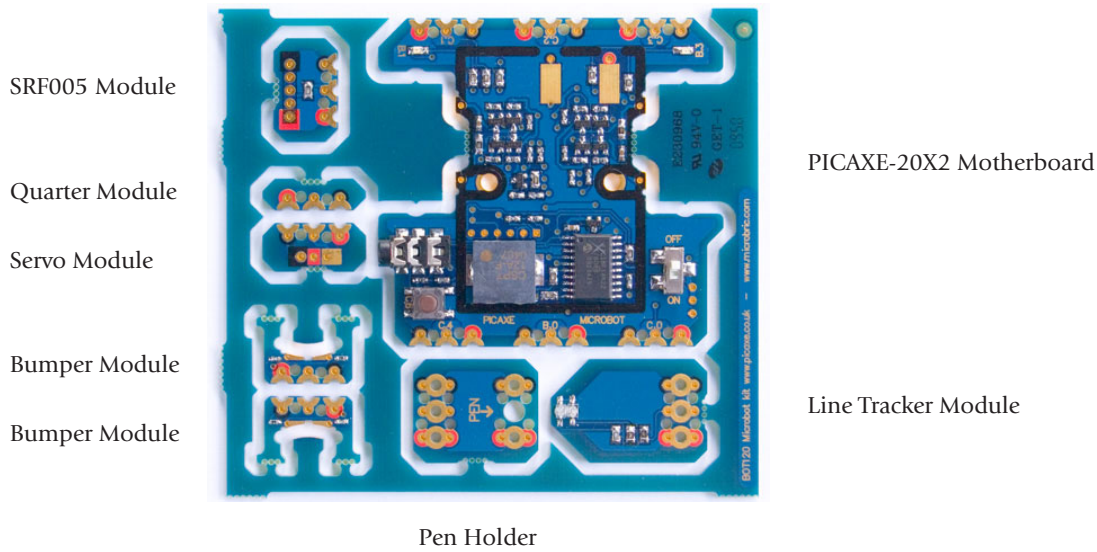


The motherboard and other circuit board modules of the Microbot are delivered as a snap-apart panel. All panels are fully assembled and tested before leaving the factory.

Each module should be snapped from the panel using a gentle push-down and push-up action.

The removed modules may have uneven burrs left from where they joined to the panel. This does not affect operation, but if desired these burrs may be removed by gentle filing.


The motherboard is the main component of your Microbot, the 'base plate' to which all other modules connect.

As well as providing contact and connection points for the other modules the motherboard contains the PICAXE 20X2 processor, the 'brain' of your Microbot, a download socket for connecting the cable to program the PICAXE-20X2 microcontroller, a piezo sounder, two illuminating LEDs, a push switch and a power on/off switch.

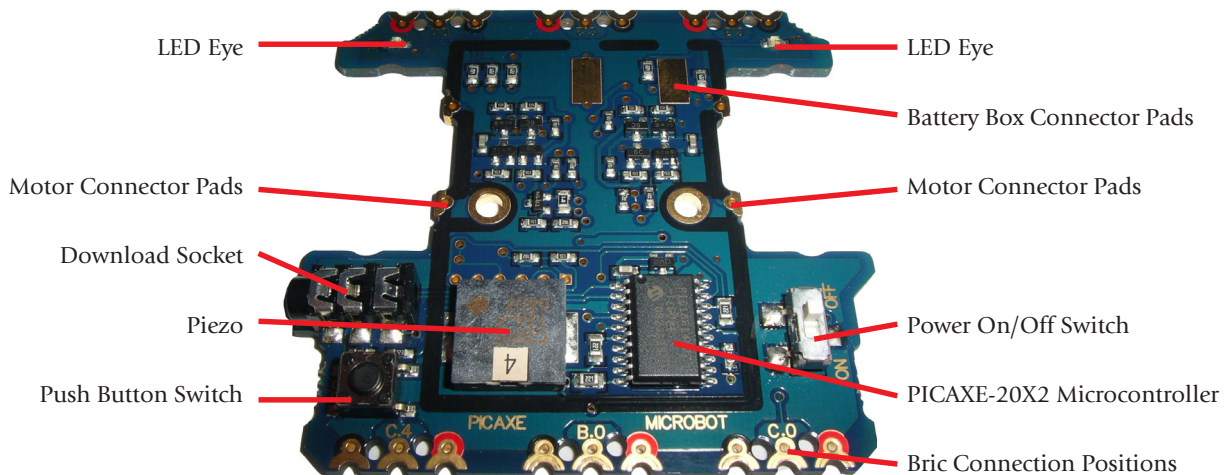

Assembly 2 – Battery Box


The battery box assembly consists of six components; a battery box with a lid, a base plate to mount the battery box, two M3 bolts and two M3 nuts to hold the assembly together and to the motherboard. Note that the nut and bolts are larger than the microbric nut/bolts.

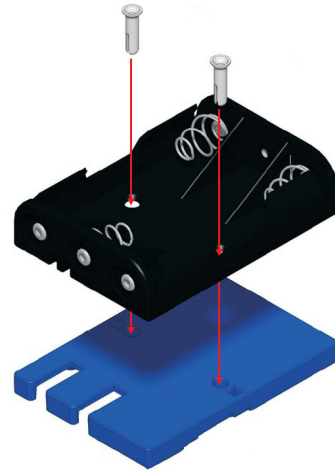

Align the two wires from the battery holder over the battery holder base. It is important that the two wires lay over the blue plastic.



Place the battery holder assembly into position over the motherboard making sure that the battery terminals align with the gold contact pads on the motherboard and push down, inserting the bolts through the motherboard.

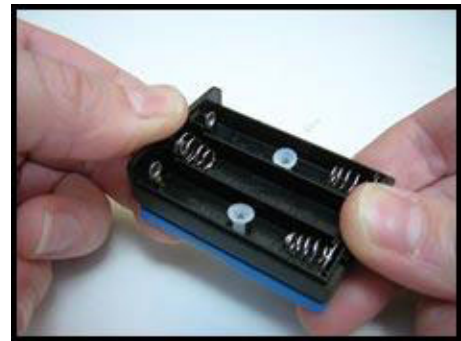





The motherboard should be turned over and nuts fitted to the bolts to hold the assembly in place.



Assembly 3 – Motor Housing

The motor housings consist of four parts; two motor mounts and two axles which transfer power from the motors to the wheels. The two axles are identical and can be used with either motor mount.

Press an axle into each of the motor mounts. Make sure you face each axle in the opposite direction as shown. To fit the axle insert the short end in first and then push the long end into its slot.

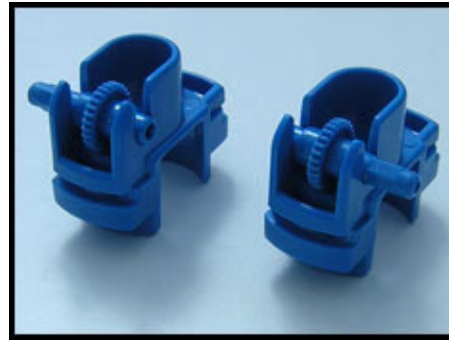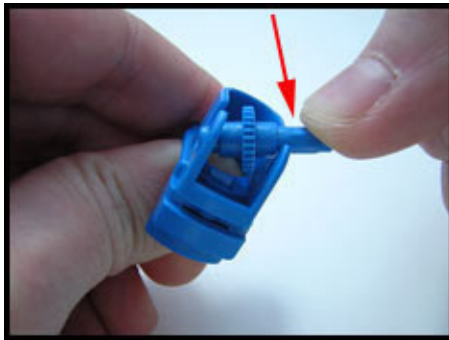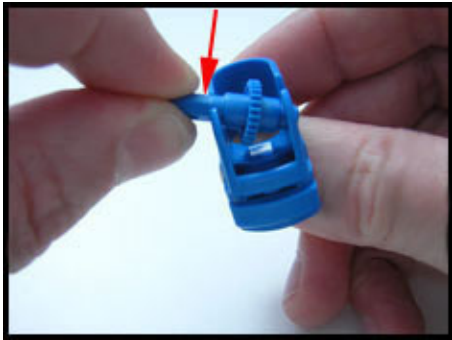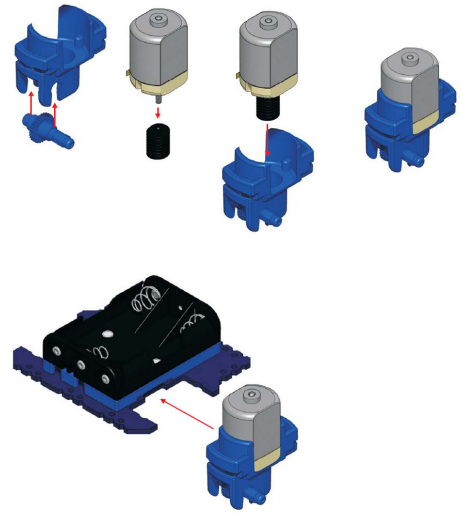



Assembly 4 - Motors

There are two motors provided, and two worm gears used to transfer the rotation of the motor shaft to the axle in the motor housings.


Ensure that the terminals of the motors have not been flattened. Flattened terminals will make poor contact while angled terminals will make good contact. If the terminals have been flattened then gently lift them up.

Push the worm gear all the way onto both the motor's shafts. The worm gears will fit onto either motor shaft.


If pushing the worm gear onto the motor shaft is difficult then use a hard surface to push against.

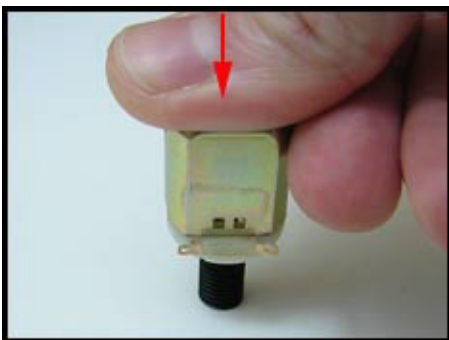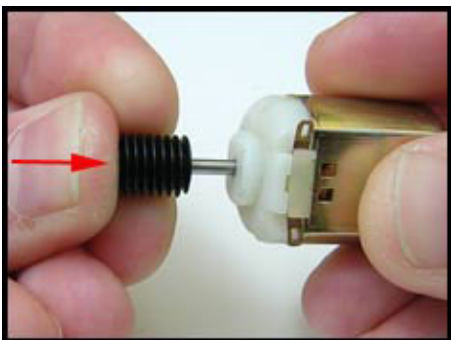

Place a motor into each of the motor housings ensuring that the motor terminals are facing the opposite way to the axle


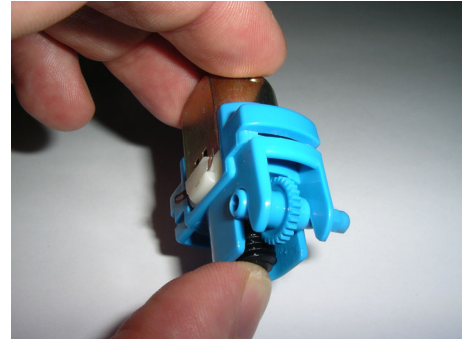


The motor housings are fitted so the axles are positioned closest to the front of the motherboard.

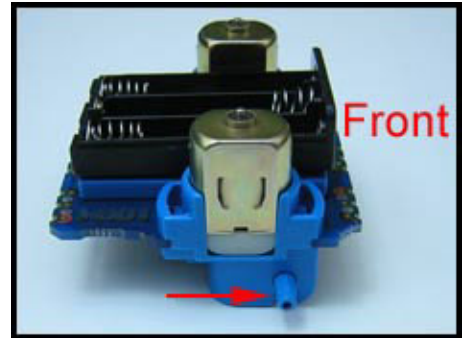


Push the motor assemblies onto the motherboard one at a time ensuring that the motor terminals are angled and not flattened before doing so.

Follow the illustrations carefully noting the orientation of the axles and making sure that they are towards the front. These are a tight fit so it will be necessary to push quite hard.

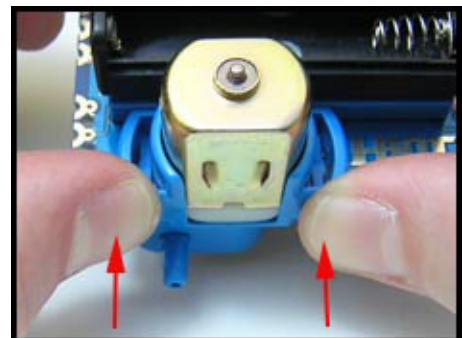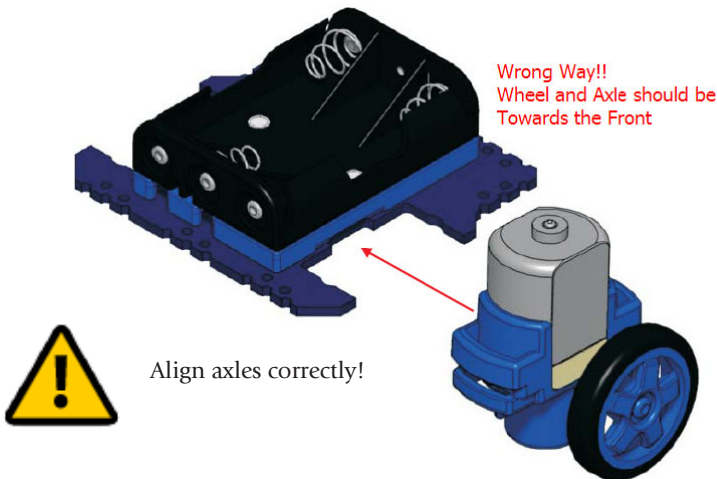

Now place a single drop of grease onto the side of each worm gear. This is very important as it lubricates the gears for smoother operation. The grease will automatically disperse around the gears when the motor is switched on. Also place a drop of grease at both ends of the axle (where it makes contact with the gearbox housing).

This is how your Microbot should look now:



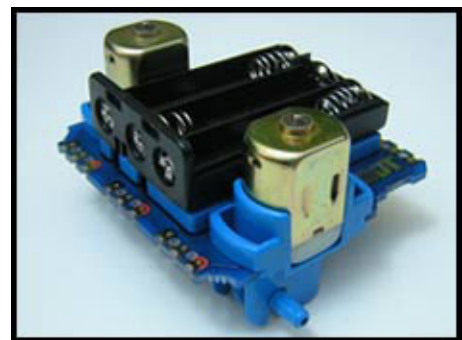


Assembly 5 - Wheels, Tyres and Rear Skid

The Microbot is driven by two wheels at the front and uses a skid to support itself at the rear. Each wheel has a tyre which must be fitted and the skid assembly consists of four parts; a bric, a 14mm support post, a bolt and the plastic skid itself.

Gently stretch the tyres over the wheels and once in place ensure the tyre is evenly fitted, check there are no bumps and that each tyre's width is consistent all the way around the wheel


Fit the wheel and tyre assemblies to each of the motor housing axles. These are a push fit. Either wheel can be fitted to either motor.

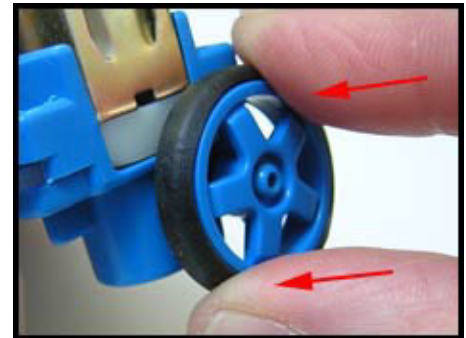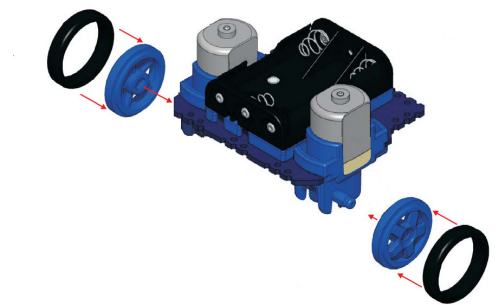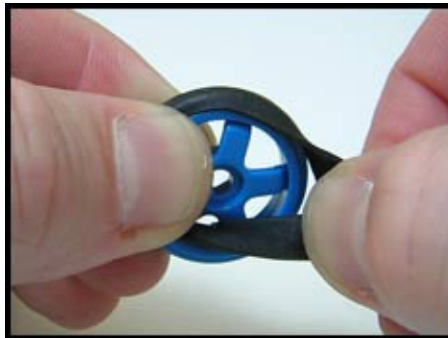

To assemble the rear skid, the 14mm support post should be pressed into the centre hole of its mounting bric as far as it will go.

The skid cover should then be slipped over the 14mm support post.




Align the skid assembly with the centre connection point at the back of the motherboard. The two posts of the bric will fit into the two holes of the centre connection point. When correctly oriented the connecting bric will fit flush with the motherboard. If incorrectly fitted the connecting bric will be angled to the motherboard; in this case remove the connecting bric, rotate it through 180 degrees and refit.

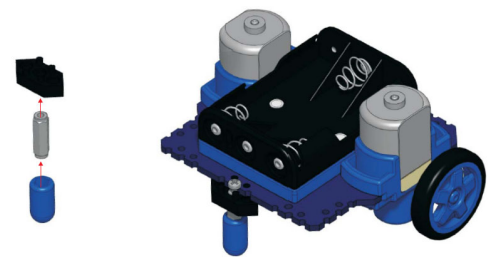

Once the connecting bric has been correctly aligned with the centre connection point at the back of the motherboard it should be bolted into place with a single bolt.


If desired you may also choose to connect the servo module here at the same time, as this helps strengthen the connection.

This is how your Microbot should now look.

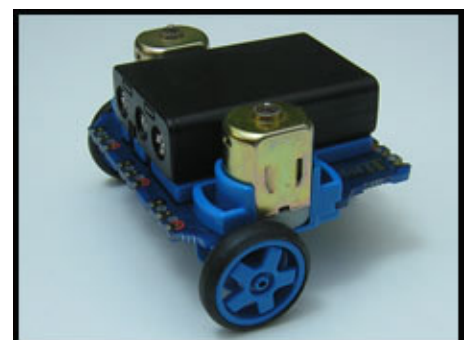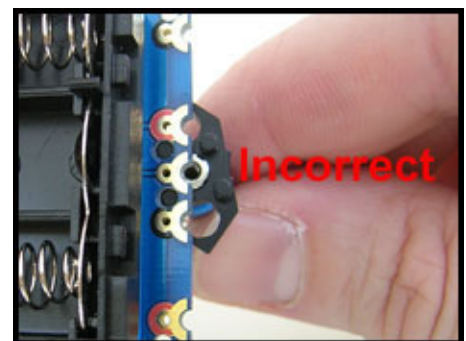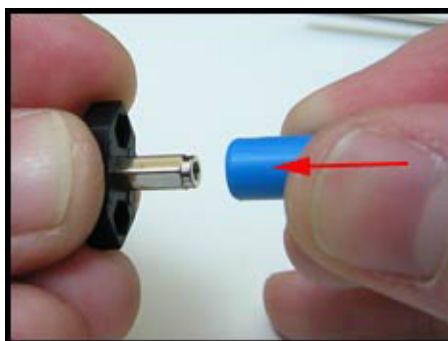


Assembly 6 - Line Tracker

The Line Tracker consists of thirteen parts; the Line Tracker module, the quarter module, two connecting brics, three 14mm posts and six bolts.

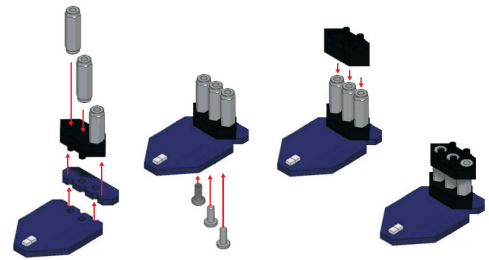

Ensure the Line Tracker module is the correct way up and fit one of the brics to the top of circuit board.

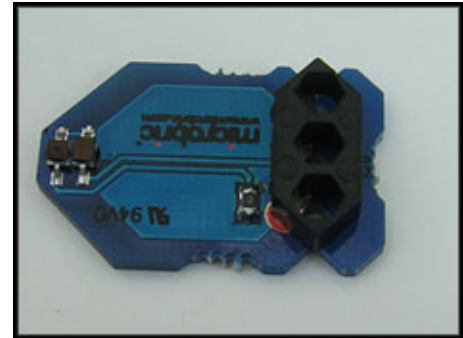


Insert the three 14mm posts into the bric.


Secure the bric and posts using three bolts from underneath the circuit board. All three bolts must be secured tightly to create the proper electrical connection or the Line Tracker will not work.




Connect the remaining bric to the posts. Note that the ends of the posts will protrude slightly through the bric.

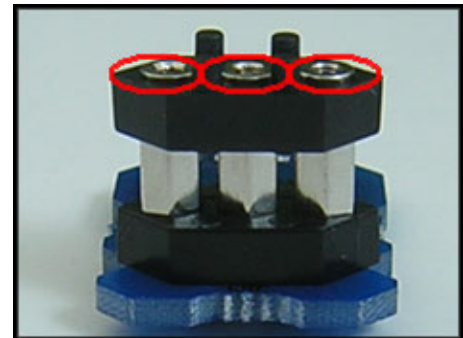

Make sure that the bric is mounted correctly (so that the located posts on the bric are the correct way around – the two posts closest together should be at the left as shown below).

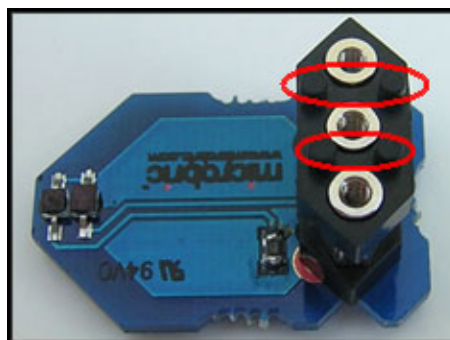

Correct - Posts closest together at left

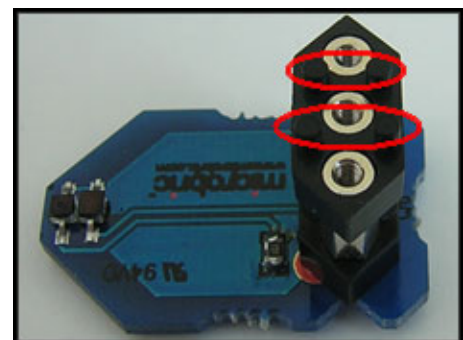


Incorrect - rotate bric 180 degrees

Attach the line tracker assembly to the underside of the motherboard.

Attach the short connecting quarter panel to the top of the bric.



Then secure with three bolts. If the bolts are not firmly tightened the line tracker will not work.

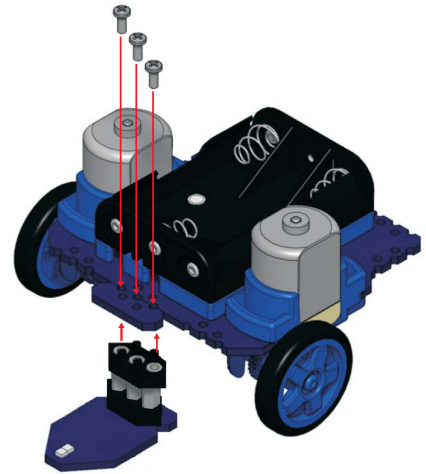

Note : If the top bric has been attached to the spacers incorrectly the line tracker assembly will not attach. If this is the case remove the top bric from the spacers and rotate it 180 degrees.



Incorrect - top bric is wrong way around and so needs to be removed and then rotated 180 degrees.

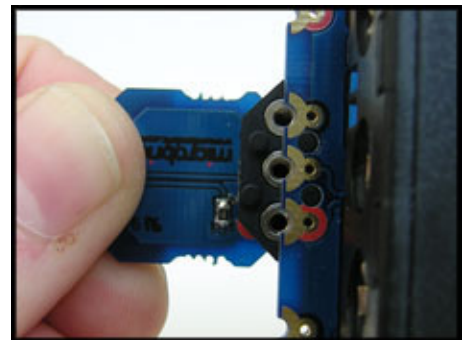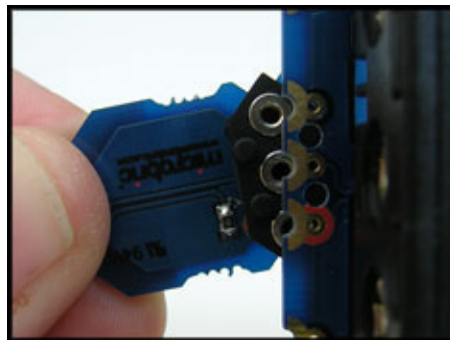

This is how your Microbot should now look.



Assembly 7 – Bumper Switches

The front bumper of the Microbot consists of a number of parts. There are two bumper switches which consist of ten parts; a switch circuit board, a conductive polymer strip, a plastic switch cover and three bolts and three nuts to secure the switch in place.

Two of these bumper switch assemblies are provided, one for each side of the Microbot, and there is a single bumper bar which sits between the two switch assemblies and holds everything together.

Insert the three nuts into the connecting bric


Lay each of the switch circuit boards on a flat surface and insert the rubber (conductive polymer) strip into each. The bumper is made from conductive polymer and when pushed against the back edge of the circuit board will complete a switch circuit.

Insert one end of the bumper into the switch circuit board by pushing the conductive polymer strip backwards and then twisting the bumper and switch circuit board so the bumper is held by the switch circuit board.







Note that the two tiny chip resistors on the switch circuit board and the bumper plastic rails are all on the top side. Note also the positioning of the red colour coded contacts.

Slide the switch cover and bumper retainer over the switch assembly. Clip the bric into the switch assembly to help hold all parts together.

NOTE ORIENTATION OF BUMP SENSOR BOARD

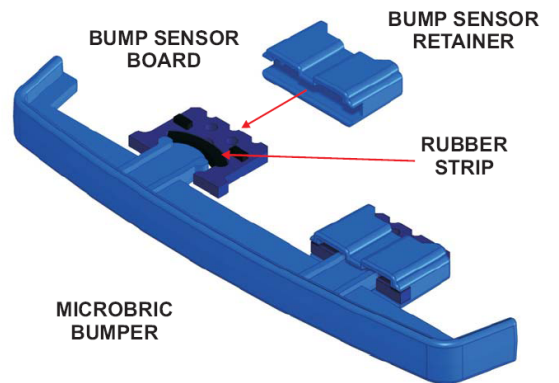


Note that the chip resistors, bumper rails and grooves on the bumper retainer are all on the top side. If you find that the bumper does not move freely once assembled it is most likely because one of these is incorrect.

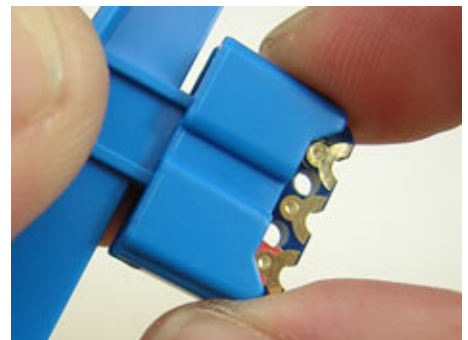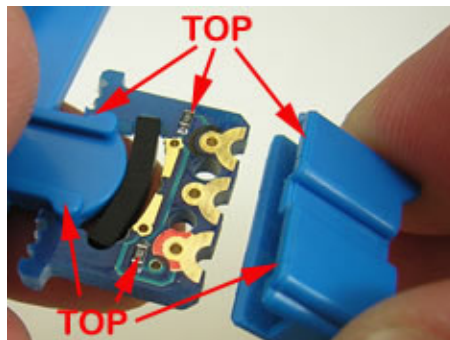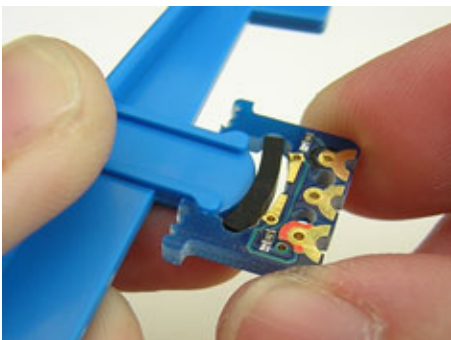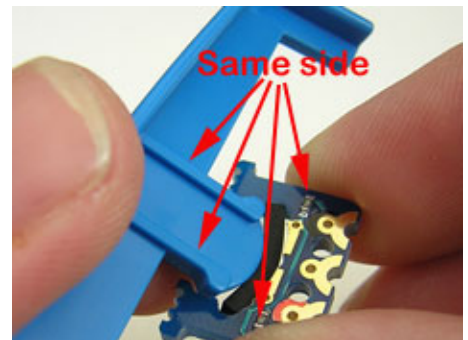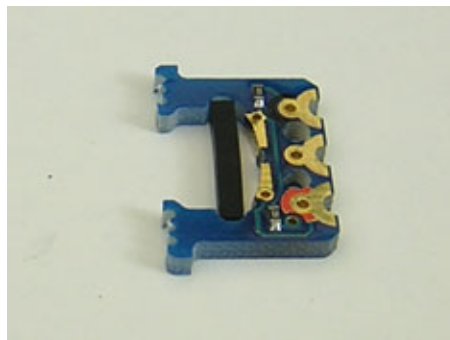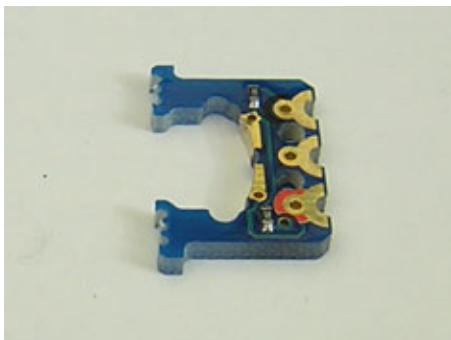


Repeat this procedure for the switch assembly on the other end of the bumper.

Once the bumper has been assembled it can be fitted to the motherboard using the connecting bric, bolts and nuts provided.

Note that the bumper assembly is fairly loose fitting when not attached to your Microbot so take care when moving it so it does not fall apart. Clipping the brics into the switch assembly first helps hold it together whilst connecting to the Microbot.

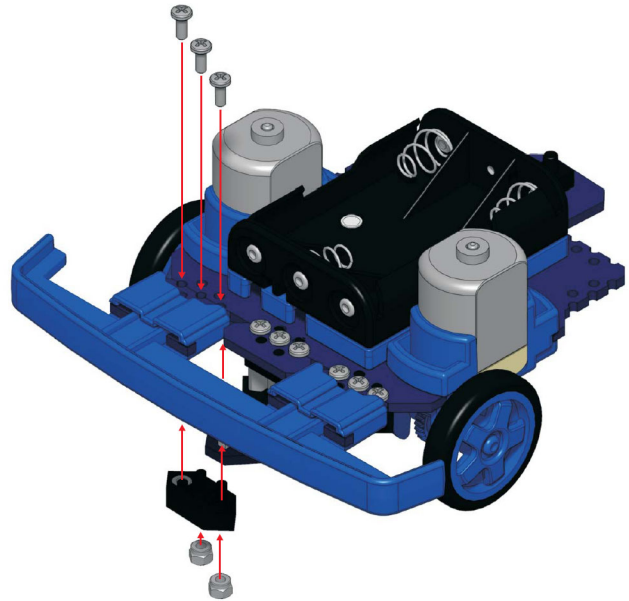

Take care to align the red contacts on the motherboard to the red contacts on the switch circuit boards and firmly bolt into place

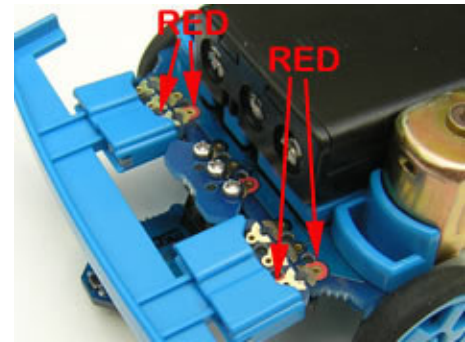

Assembly 8 - Pen Holder, Servo and SRF005 Modules

Note that the pen holder and line tracker cannot be used at the same time as they both use the centre position, and share the same 14mm posts and bricks.

The pen holder is used to hold a small pen (not supplied) between the wheels of the microbot, so that the microbot can draw patterns and leave a 'trail' on a piece of paper.

These instructions assume the line tracker is currently fitted.

Connect a brick to the pen position on the top of the pen holder module by using two nuts/bolts (do not place a nut/bolt in the centre position of the brick - this is where the pen is inserted!). Note that the text 'Pen Holder' is on the opposite side to the brick.

Remove the line tracker module from the bottom of the support posts by removing the 3 bolts.

Replace with the pen holder module, so that the pen position is mounted between the two gearboxes.

The pen (not supplied) is made by cutting down a cheap disposable 'biro' type pen. Remove the centre ink assembly from the pen and cut it to length using a pair of scissors. Then wrap a few turns of sellotape around the pen until it can be pushed securely into the centre hole of the mounting brick. The correct fit can be tested using a spare brick as shown.

Servo Module



The BOT120 motherboard panel also includes a **servo module** labelled as "Servo". This can be used (with the loose 3 pin header also supplied) to connect a servo if desired.

Please see the BOT123 section of this manual for more details.

SRF005 Module

The BOT120 motherboard panel also includes a **SRF005 module** labelled as "SRF005". This can be used to connect a SRF005 Ultrasonic range finder module if desired (purchase separately).

Please see the SRF005 section of this manual for more details.

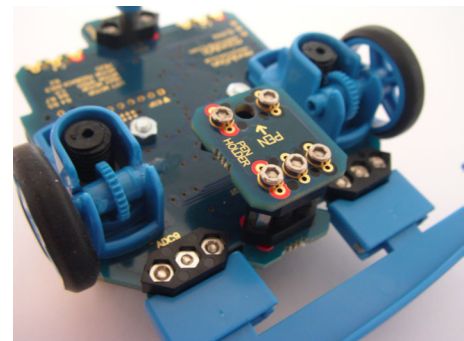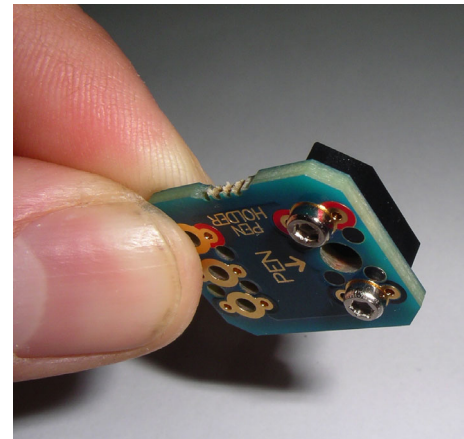


Fully Assembled Microbot

Congratulations – You should now have your Microbot fully assembled. Your Microbot has been fitted with motors to move about, a bumper to detect collisions, a line tracker so it can follow paths, two LED eyes, and a piezo sounder to make sounds.

You are now ready to start using your Microbot! Before use remember to insert 3xAAA batteries (not supplied)!

Suitable flowchart and BASIC programs are provided in the next part of this document, as are details of adding additional modules such as a servo and an ultrasound range finder for detection of objects in the way.

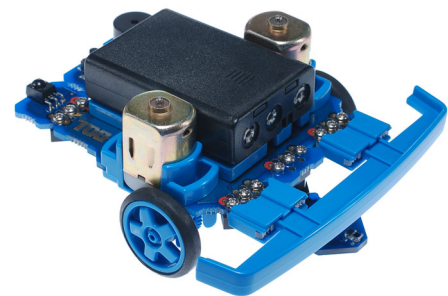


Motor Trouble Shooting



If while using your Microbot you find that it does not move in a straight line but instead turns to the left or right when it should be going straight, or one motor seems to turn faster than the other, it may be that the gearing within the motor housing is jamming.

Remember the gears also require a small drop of grease (a tube of grease is supplied in the motherboard pack). The grease makes a huge difference to performance, but only a small amount is required.

To un-jam a sticking gearbox simply push the motor in the direction shown in the picture (push the motor towards the front). This should remove pressure from the gearing and free-up the gearing.

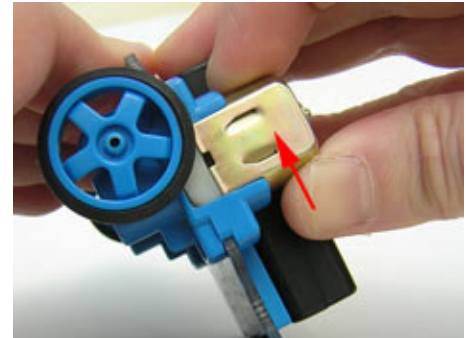


In addition to checking that the gearbox is not jamming it is advisable to check that the tyres are not rubbing against the motor mounts

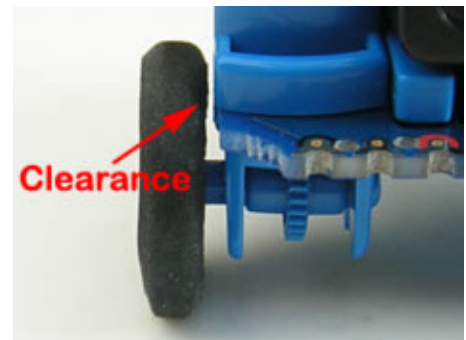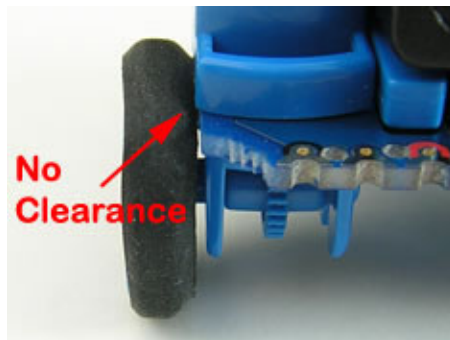

Particularly check that tyres have not become dislodged and they are evenly spread around the wheel.

If a problem remains it may sometimes be overcome by swapping the two motors. This requires removing the two motor and reassembling with the motors on the opposite side that they were removed from.

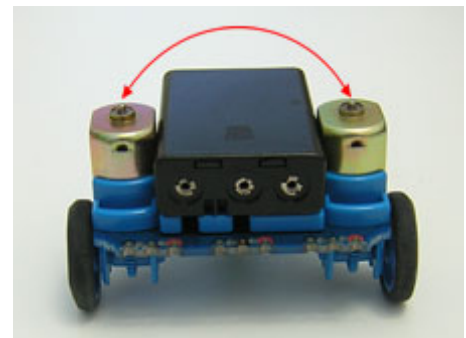

While the motor housings and motors are in pieces check the motor terminals.

Flat terminals make poor contact, so make sure the contacts are angled.



Re-assemble and test your Microbot.



Programming Software

The 'brain' of your Microbot is a PICAXE-20X2 microcontroller.

Programming of the PICAXE-20X2 microcontroller can be carried out using either flowcharts with 'Logicator for PICAXE' or using the PICAXE Basic programming language with the 'PICAXE Programming Editor' (Windows) or 'AXEpad' (Linux / Mac).

All software can be downloaded from the software pages of the PICAXE website at www.picaxe.co.uk

In addition to the Microbot and your preferred software you will also need a download cable to connect your computer to the Microbot to download your programs. We recommend the AXE027 USB download cable.

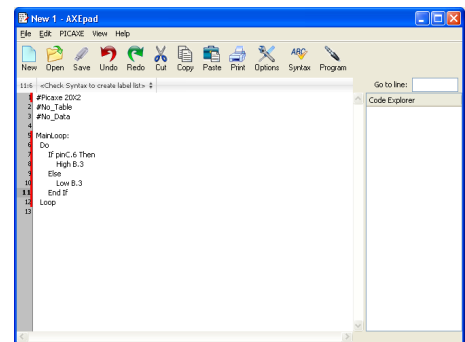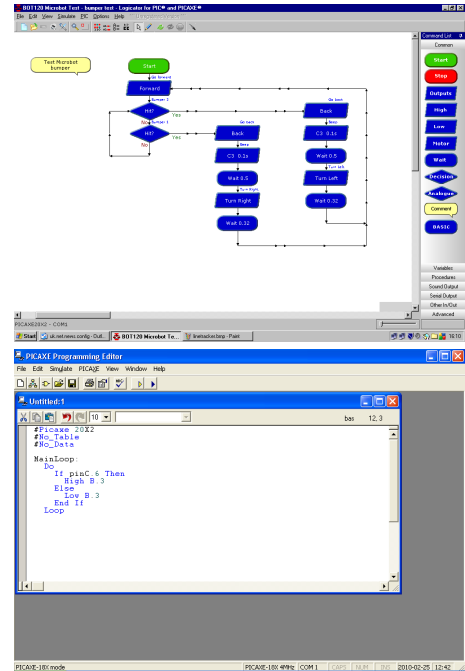

Programming Cable

Once the AXE027 USB download cable has been installed and you have drawn your flowchart or written your PICAXE BASIC program you need to connect the cable to the download socket on the Microboard motherboard. Make sure the jack plug is fully pushed into the socket.

For further detail about the AXE027 USB cable see www.rev-ed.co.uk/docs/axe027.pdf

Once you have downloaded a program your Microbot will remember that program even when it is turned off or the batteries are removed. Every time the Microbot is turned back on it will flash its LEDs and then begin running the last program downloaded.

Don't forget to turn your Microbot on to enable downloading! If you do not turn the power on you will receive a message from your programming software indicating the Microbot's PICAXE 20X2 could not be found. Also ensure the software is in the correct mode (PICAXE-20X2).

If your Microbot is spinning its motors when you wish to download a new program you can either hold the Microbot in your hand or place it on something to keep its wheels off the ground while you download a new program. Alternately simply turn it off and then turn it back on after you have clicked the download button in the software.

The Microbot will begin to run its downloaded program soon after the download completes so again you might want to hold it in your hand or place it on something to keep its wheels off the ground when you download a new program. As an alternative you can add a 'Wait' to the start of your program to give time to turn it off when download is complete (or time to unplug the download cable and place your Microbot on the floor before it runs its program).


Download Hard Reset

If your Microbot is busy doing something such as waiting for an IR Remote Control key press it may not notice you are attempting to perform a new download and the download may subsequently fail.

If this happens it is necessary to perform what is known as a 'Hard Reset'.

A Hard Reset is performed by turning your Microbot's power off using the slide switch on the motherboard, starting the download, and then turning the power back on. As the Microbot wakes-up it will always check for a download request and allow the new program to be downloaded, regardless of the program in memory.

Note that the push button on the motherboard, next to the download socket, is not a 'reset' button. To reset the Microbot it is necessary to turn the power off and then back on.

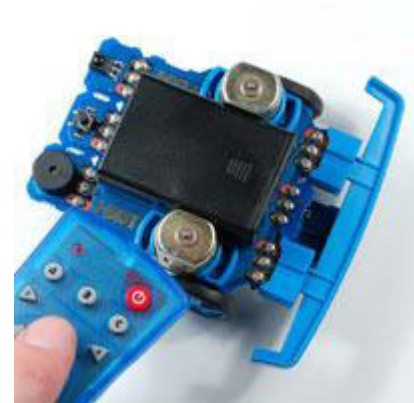

PICAXE-20X2 Pin Connections

All circuit board modules are connected via the connector bric; bolting the bric into place completes the electrical connection from one board to the other.


There are six positions on the motherboard to which the bric can be connected. Each position is connected to a particular PICAXE 20X2 pin. In addition, other PICAXE pins are used on the motherboard to interface to the motors, LEDs, Piezo Sounder and Push Button.

In order to control your Microbot you need to interact with its hardware via programming the appropriate PICAXE 20X2 pins.

For example, the left LED of your Microbot is connected to the B.1 pin and is therefore controlled by sending a 'high' command to B.1 to turn the LED on and sending a 'low' command to B.1 to turn it off.

If you were interacting with the Line Tracker module connected to the front middle position, that connection is C.2 / ADC 8, so you would use a 'readadc' command on analogue channel 8 to read the light intensity level from that sensor

Note that the 'Logicator for PICAXE' flowcharting software uses a slightly different pin naming system than the BASIC language used by Programming Editor / AXEpad. Both systems are shown in the tables overleaf.

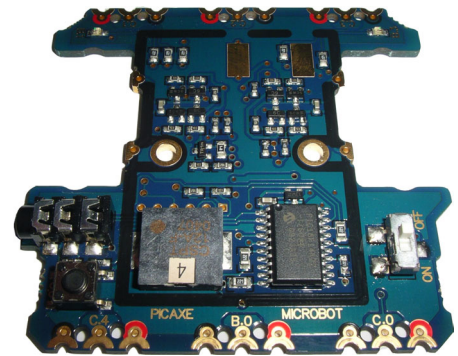


As the interaction with the PICAXE 20X2 pins is so important to programming and controlling your Microbot you may wish to print the next page and keep it as a handy reference.

PICAXE-20X2

+V	1	20	0V
Serial In	2	19	A.0 / Serial Out
ADC3 / C.7	3	18	B.0 / ADC1 / hint1
C.6	4	17	B.1 / ADC2 / hint2 / SRQ
hpwm A / pwm C.5 / C.5	5	16	B.2 / ADC4 / C2+
hpwm B / SRNQ / C.4	6	15	B.3 / ADC5 / C2-
hpwm C / ADC7 / C.3	7	14	B.4 / ADC6 / hpwm D / C1-
kb clk / ADC8 / C.2	8	13	B.5 / ADC10 / hi2c sda / hspi sdi
hspi sdo / kb data / ADC9 / C.1	9	12	B.6 / ADC11 / hserin
hserout / C.0	10	11	B.7 / hi2c scl / hspi sck


PICAXE-20X2 Microbot Pinout Table (Logicator)

Pin	Description	Modules
Serial Out	Serial Output (Diagnostics)	
Output 7	Right Motor Backward	
Output 6	Right Motor Forward	
Output 5	Left Motor Backward	
Output 4	Left Motor Forward	
Output 3	Right LED Eye	
Output 2	Piezo Sounder	
Output 1	Left LED Eye	
Output 0	Rear Centre Connector	Servo IR TX
Input 7 ADC A3	Motor Current Sense	
Input 6	Push button switch	
Input 5	Motor Speed Control	
Input 4	Rear Left Connector	
Input 3 ADC A7	Front Right Connector	Bumper LDR Right
Input 2 ADC A8	Front Centre Connector	Line Tracker SRF005 Pen Holder
Input 1 ADC A9	Front Left Connector	Bumper LDR Left
Input 0	Rear Right Connector	IR RX

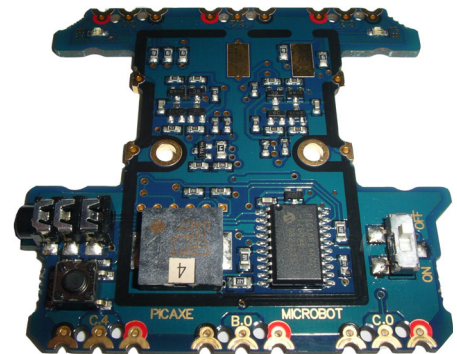

PICAXE-20X2 Microbot Pinout Table (Programming Editor / AXEpad)

Pin	Description	Modules
A.0	Serial Output (Diagnostics)	
B.7	Right Motor Backward	
B.6	Right Motor Forward	
B.5	Left Motor Backward	
B.4	Left Motor Forward	
B.3	Right LED Eye	
B.2	Piezo Sounder	
B.1	Left LED Eye	
B.0 ADC1	Rear Centre Connector	Servo IR TX
C.7 ADC3	Motor Current Sense	
C.6	Push button switch	
C.5	Motor Speed Control	
C.4	Rear Left Connector	IR TX
C.3 ADC7	Front Right Connector	Bumper LDR Right
C.2 ADC8	Front Centre Connector	Line Tracker SRF005 Pen Holder
C.1 ADC9	Front Left Connector	Bumper LDR Left
C.0	Rear Right Connector	IR RX

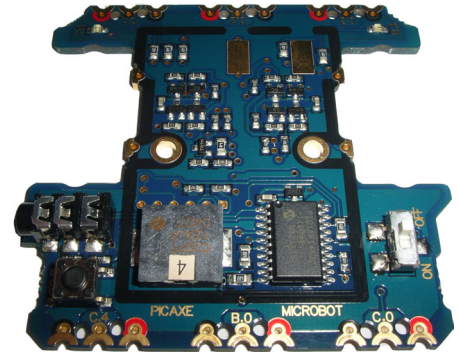

Programming Example 1 - LED Eyes

The two LED eyes of your Microbot are controlled by Output Pins B.1 and B.3 of the PICAXE-20X2.




Note that the LED eyes will always briefly flash when the Microbot is first switched on or after it is reprogrammed. This is to indicate that the Microbot is working correctly. After the eyes flash the Microbot will then start running the program that is stored in it's flash memory.

The following flowchart will turn the left LED on for half a second, turn that LED off and turn the right LED on for half a second and repeat.

Sample Logicator Flowchart File:
BOT120 LED FLASH TEST.PLF

Sample BASIC File:
BOT120 LED FLASH TEST.BAS

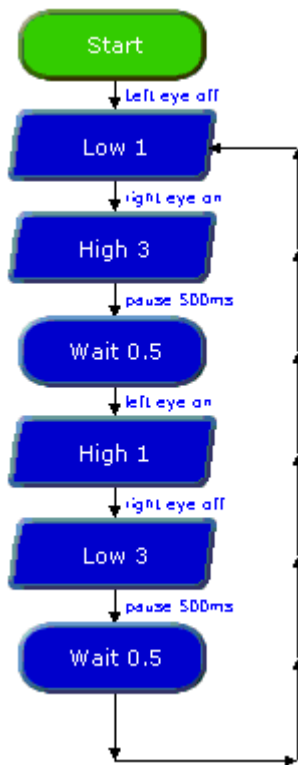

```


main:
  low B.1
  high B.3
  pause 500
  high B.1
  low B.3
  pause 500
  goto main
  
```

Programming Example 2 – Push Button Switch

The push button is pre-fitted to the Microbot motherboard and is connected to input pin C.6. Reading pin C.6 will return a reading of 1 when the button is pushed and a value of 0 when it is not pushed.

The following program tests the operation of the push button by lighting the right LED on the motherboard when the button is pushed.

Sample Logicator Flowchart File:
BOT120 PUSH SWITCH TEST.PLF

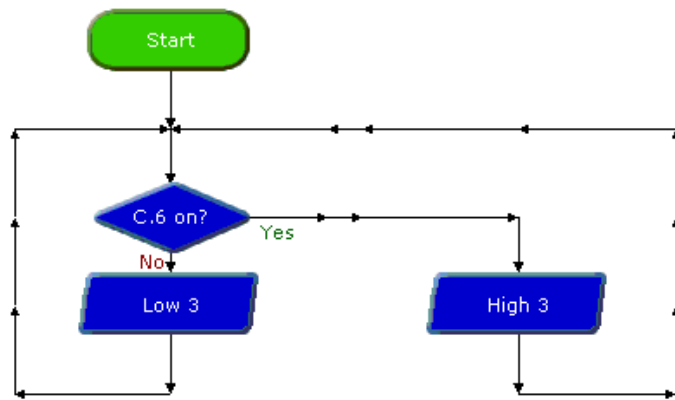

Sample BASIC File:
BOT120 PUSH SWITCH TEST.BAS

```

main:
  if pinC.6 = 1 then
    high B.3
  else
    low B.3
  end if
  goto main
  
```

Programming Example 3 – Bumper


If the front bumper has been fitted then the left bumper switch will be connected to Input Pin C.1 and the right bumper switch will be connected to Input Pin C.3.

A bump on the left will set 'Input Pin C.1' to 1, a bump on the right will set 'Input Pin C.3' to 1, a central bump will set both 'Input Pin C.1' and 'Input Pin C.3' to 1. The values of 'Input Pin C.1' and 'Input Pin C.3' can therefore be used to determine what appropriate action to take when a bump or collision occurs.

This program will light the left LED eye if the left bumper is pressed and the right LED eye if the right bumper is pressed

Sample Logicator Flowchart File:
BOT120 BUMPER SWITCH TEST.PLF

Sample BASIC File:
BOT120 BUMPER SWITCH TEST.BAS

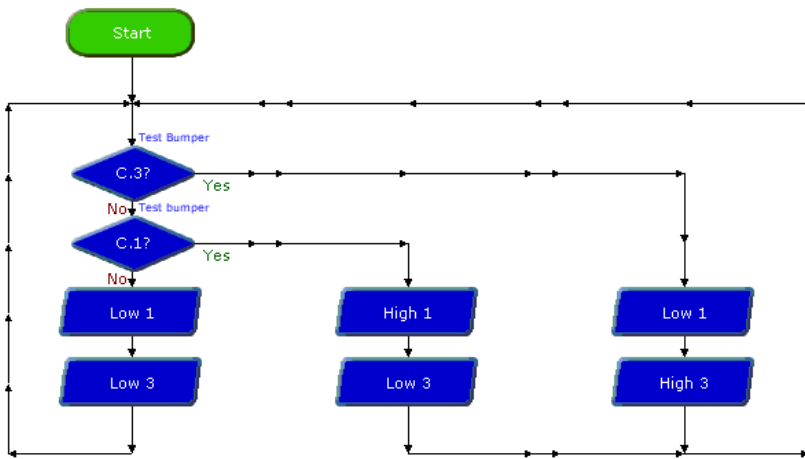

```

main:
  if pinC.1 = 1 then
    high B.1
    low B.3
  else if pinC.3 = 1 then
    low B.1
    high B.3
  else
    low B.1
    low B.3
  end if
  goto main
    
```


Programming Example 4 – Piezo Sounder

Your Microbot motherboard has a piezo sounder connected to output pin B.2 which can be used to play a variety of tunes and sounds.

The following program will play the "Happy Birthday" tune whenever the push button (input pin C.6) on the motherboard is pushed.

Sample Logicator Flowchart File:
BOT120 PIEZO TEST1.PLF

Sample BASIC File:
BOT120 PIEZO TEST1.BAS

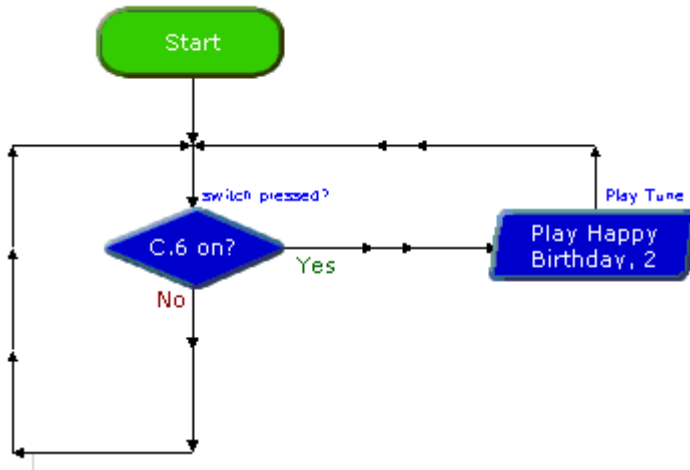


```

main:
  if pinC.6 = 1 then
    play B.2,0
  end if
  goto main
  
```

The following program will make a two-tone beep whenever the push button (input pin C.6) on the motherboard is pushed.

Sample Logicator Flowchart File:
BOT120 PIEZO TEST2.PLF

Sample BASIC File:
BOT120 PIEZO TEST2.BAS

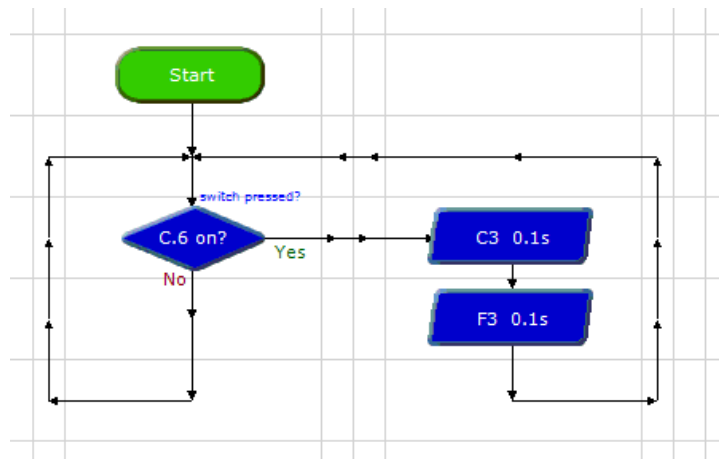

```

main:
  if pinC.6 = 1 then
    sound B.2, (50,100,100,100)
  end if
  goto main
  
```

Programming Example 5 – Motors

By controlling the two motors of your Microbot it can be made to move about.

There are four output pins used to control motor directions, left motor drive forward, left motor drive backward, right motor drive forward and right motor drive backward. Motor control pins are assigned as below:

- B.7 Right Motor Backward
- B.6 Right Motor Forward
- B.5 Left Motor Backward
- B.4 Left Motor Forward

Each output pin is individually controllable to allow selection of any of nine completely different Microbot movement combinations.

Microbot	Right Motor	Right Motor	Left Motor	Left Motor
	Backward B.7	Forward B.6	Backward B.5	Forward B.4
Halt	Low	Low	Low	Low
Forward	Low	High	Low	High
Backward	High	Low	High	Low
Turn Left	Low	High	High	Low
Turn Right	High	Low	Low	High
Veer Left Forward	Low	High	Low	Low
Veer Left Backward	Low	Low	High	Low
Veer Right Forward	Low	Low	Low	High
Veer Right Backward	High	Low	Low	Low

A 'turn' movement is an 'on the spot spin' when one motor is switched forward and the other backward.


A 'veer' movement is created by only switching one motor on at a time.

Logicator Only

When using Logicator these combinations can be very simply generated by clicking the 'movement' buttons on the Motors cell dialog.

Note also the speed selection option:

- Fast - always change to fast speed
- Slow - always change to slow speed
- No change - speed setting is not altered

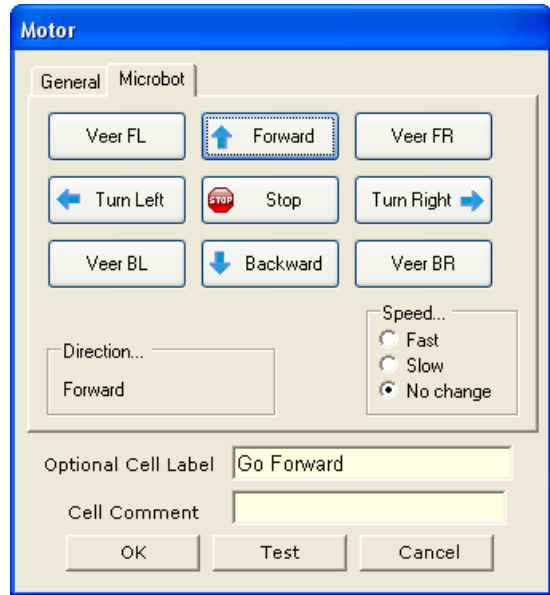

BASIC Only

When using BASIC these movement combinations can be simplified by using the 'forward', 'backward' and 'halt' commands on each of the two motors - motor B is B.7 : B.6 and motor A is B.5 : B.4

```

; Exampe to Move Microbot Forwards
forward A      ; Set Motor A Forward
forward B      ; Set Motor B Forward
    
```

Speed is controlled by the C.5 pin, when this pin is an input the speed will be fast, when the pin is an output it will be slow.

```

input C.5      ; Set Motor Speed Fast
output C.5     ; Set Motor Speed Low
    
```

When the Microbot program first starts the C.5 pin will be set as an input and the initial motor speed will be fast.

Motor Current Sense (advanced feature)

There is a Motor Current Sense input from the motor drive circuitry to the C.7 pin (ADC channel 3). Using a 'readadc' command on analogue channel 3 will return a value which is proportionate to the current drawn by the motors; the higher the current draw, the higher the reading.


In advanced programs the Motor Current Sense can be read and used to determine when the motors are struggling or have stalled. A program may then take appropriate action when that occurs.

Note that when a motor starts it will draw much higher current than when it is up to speed and running unhindered. This is known as 'in-rush current'. When starting a motor you will likely need to leave a short period before reading the Motor Current Sense level to avoid the turn-on in-rush current being misinterpreted as a motor stall.

Microbot	Right Motor (B)	Left Motor (A)
Halt	Halt B	Halt A
Forward	Forward B	Forward A
Backward	Forward B	Backward A
Turn Left	Backward B	Backward A
Turn Right	Backward B	Forward A
Veer Left Forward	Forward B	Halt A
Veer Left Backward	Halt B	Backward A
Veer Right Forward	Halt B	Forward A
Veer Right Backward	Backward B	Halt A

This program will drive your Microbot forward until it collides with something and its bumper switches are activated. When a collision is detected, your Microbot will reverse backwards for a short distance, turn left or right, and then continue on its forward path until another collision occurs.

Sample Logicator Flowchart File:
BOT120 MOTOR TEST.PLF

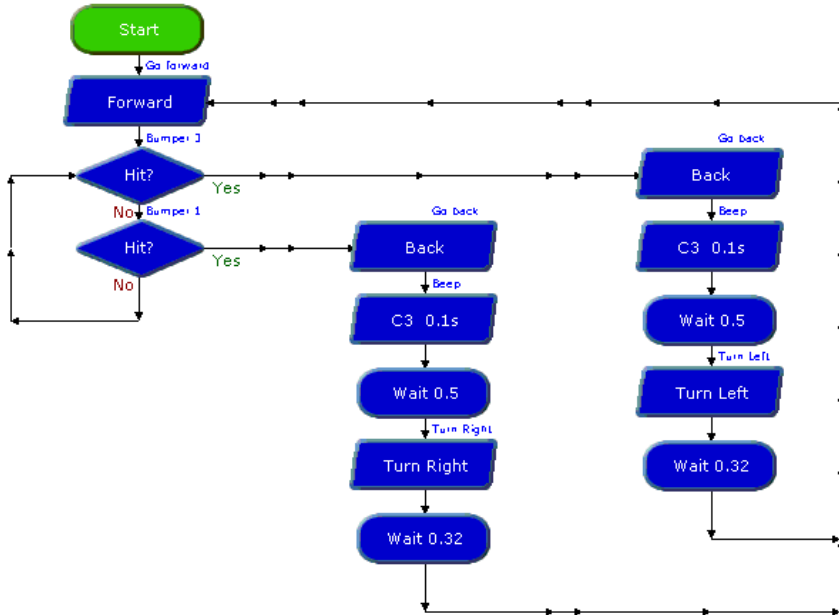

Sample BASIC File:
BOT120 MOTOR TEST.BAS

```

main:
    forward A ; go forwards
    forward B ; test bumpers
                ; to see if hit
    if pinC.3 = 1 then doLeft
    if pinC.1 = 1 then doRight
    goto main


doLeft:
    backward A ; reverse for 0.5s
    backward B
    sound B.2, (50,100) ; beep
    pause 500
    forward A ; turn for 0.32s
    backward B
    pause 320
    goto main

doRight:
    backward A ; reverse for 0.5s
    backward B
    sound B.2, (100,100) ; beep
    pause 500
    backward A ; turn for 0.32s
    forward B
    pause 320
    goto main
    
```

Programming Example 6 – Line Tracker Testing

The Line Tracker module consists of a red LED which is permanently illuminated and phototransistor detector which will detect the red light reflected off the surface below.

The infra-red sensor is used as an analogue sensor to determine the amount of light reflected back from the surface it is over, which will give a measure of how white or black it is. Pin C.2 is also analogue channel 8 so to determine the amount of reflection a 'readadc' command is used on analogue channel 8. The value returned will decrease as the amount of infra-red light reflected back increases; a low reading indicates bright light (large reflection over a white surface) a high reading indicates a small amount of reflection (over a black surface).

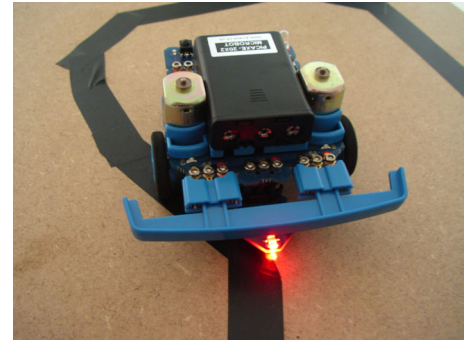

A simple line tracker will most likely zig-zag across the black line, turning when it leaves the black line, crossing over it again, then turning again in the opposite direction. The net result is that the Microrobot follows the edge of the line.


The best way to create a line to follow is to use black insulation tape stuck down onto a light surface (e.g. a piece of MDF wood). The background can be any pale colour, it does not have to be white.

A more complex line follower can be created by using two (or even three) line follower modules at the front of the robot. Additional line followers can be purchased separately as part BOT127.

The following program tests the line tracker module to see that it is operating correctly. This program can also be used to calculate the analogue threshold value (which is a number half way between the white background reading and the black line reading).

Sample Logicator Flowchart File:
BOT120 LINE TRACKER TEST.PLF

Sample BASIC File:
BOT120 LINE TRACKER TEST.BAS

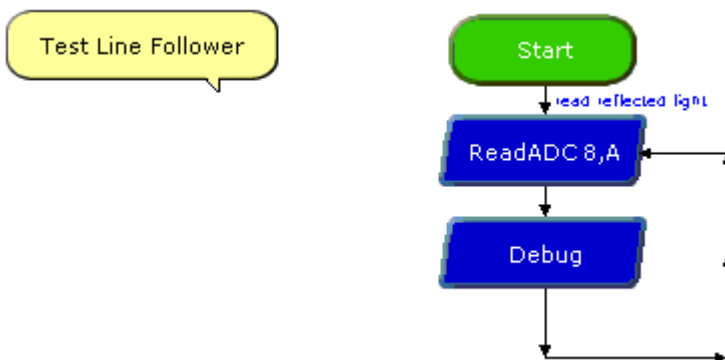

```

main:
  readadc 8,b0
  debug
  goto main
  
```


Programming Example 7 – Line Tracker Program

The following program demonstrates using your Microbot as a black line follower. A suitable line can be created by sticking black insulation tape onto a pale colour background (e.g. a piece of MDF wood).

Your Microbot should have the line tracker sensor fitted to the centre front connection of the motherboard (pin C.2 / ADC 8) and the bumper and its two bump sensors should be fitted to the left and right front connections (pin C.1 and pin C.3).


When placed on a black line your Microbot will move forward diagonally until it leaves the black line, then it will move itself forward in the opposite diagonal direction until it is back on the line. This process will repeat so your Microbot tracks the edge of the black line.

If your Microbot collides with anything one of the two bumper switches will be activated. When the bumper switches are activated your Microbot will stop until the obstacle is removed. When the bumper is free it will then begin its line following again.

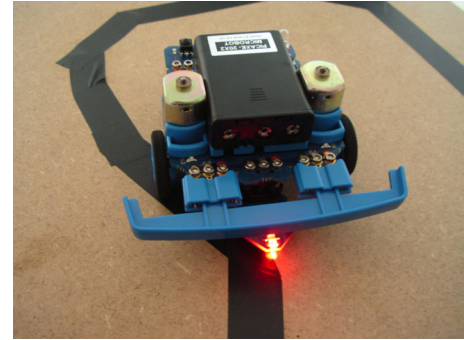

Sample Logicator Flowchart File:
BOT120 LINE FOLLOWER.PLF

Sample BASIC File:
BOT120 LINE FOLLOWER.BAS

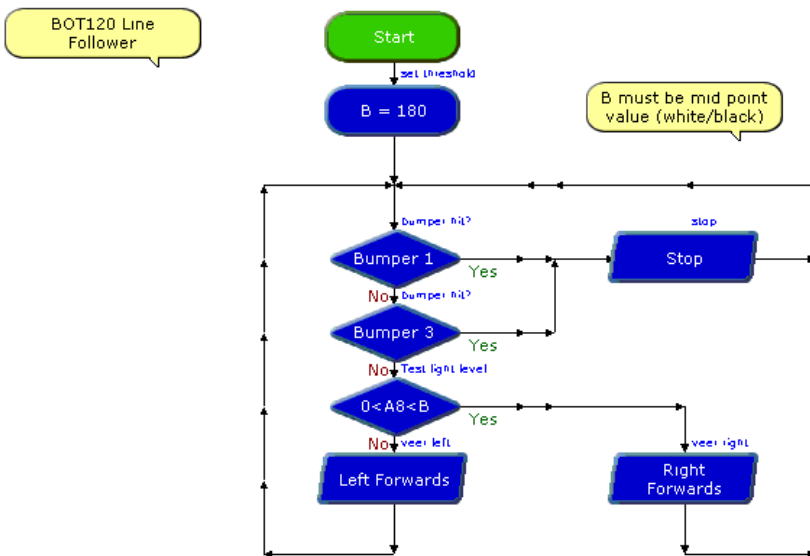


```

symbol MID_LEVEL = 180
main:
    if pinC.1 = 1 or pinC.3 = 1 then
        halt A
        halt B
    else
        readadc 8, b1
        if b1 < MID_LEVEL Then
            forward A
            halt B
        else
            halt A
            forward B
        end if
    end if
    goto main
    
```

BOT121 Microbot Sensors Pack

- BOT121 Microbot Sensors Pack (self assembly kit)
- BOT121A Microbot Sensor Pack (pre-assembled, no soldering)

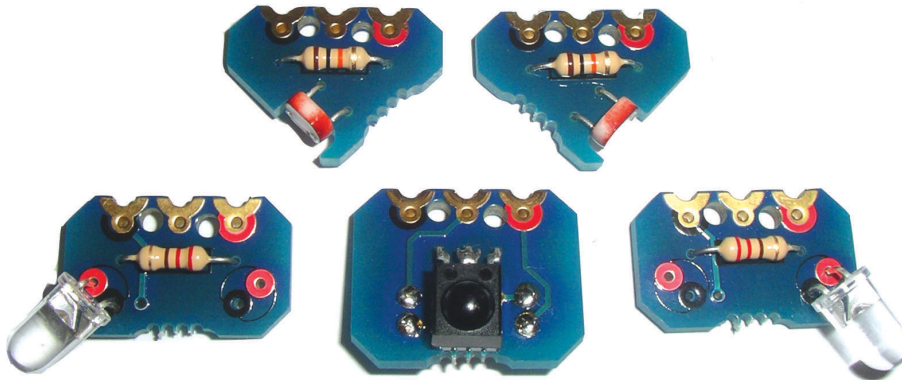

Qty	Description	Replacement order code
1	<i>PCB panel containing:</i> LDR Light Sensor (Left) LDR Light Sensor (Right) Infra-red Rceiver (IR RX) Infra-red Tranmsitter (IR TX) x 2	BOT121 BOT121 BOT121 BOT121
2	brics	BOT125
10	bolts	BOT125
7	nuts	BOT125
1	Infra-red Receiver	LED020
2	LDR light sensors	SEN002
2	Infra-red LEDs	LED021
2	10k resistors (brown black orange gold)	RES-10K
2	220 resistors (red red brown gold)	RES-220
2	33 resistors (orange orange black gold)	RES-33

Optional (not included, purchase separately)


1	Infra-red TV style remote control	TVR010A
---	-----------------------------------	---------

The circuit boards of the BOT121 Microbot Sensor Pack require a small number of components to be fitted and a small amount of simple soldering. All components required are supplied.

If you do not know how to solder a pre-sassembled kit, part BOT121A, is also available.

Assembly Instructions:

Carefully remove all PCBs from the panels by applying a gentle rocking motion to the PCBs until they snap out of the panel. Note that in each case the bottom of the PCB is marked with the gold text label (e.g. IR RX).

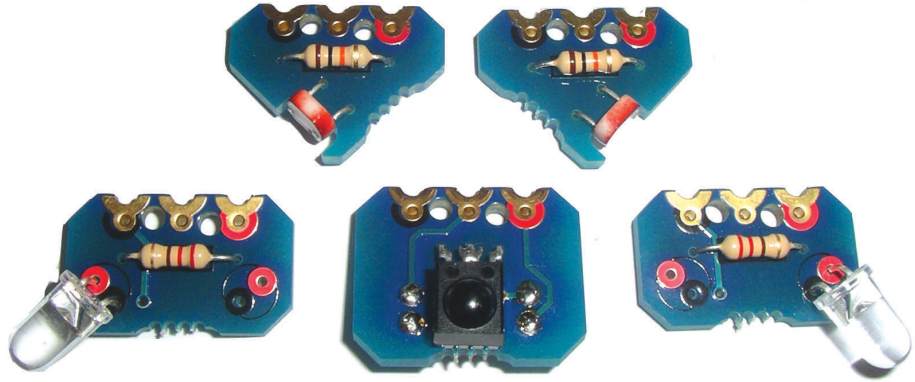**Infra-red Receiver (IR RX)**

Important - please note the resistors and infra-red receiver are physically mounted on opposite sides of the module.

Place the two 220 resistors (red red brown gold) over the black text on the bottom of the board so that the legs come out the solder pads on the top of the board. Resistors can be placed either way around. Solder in position and cut the legs short.

Bend the infra-red receiver legs at 90 degrees so that it can lie flat on the top of the PCB between the resistor solder joints. Solder the 3 receiver legs on the other side of the PCB and cut the legs short.

LDR Left and LDR Right

Place the 10k resistor (brown black orange gold) over the black text on the top of the board so that the legs come out the solder pads on the bottom of the board. Resistors can be placed either way around. Solder in position and cut the legs short.

Carefully bend the legs of the LDRs so that it lies in the slot on the PCB with the legs lying over the rectangular gold pads and then through the holes. LDRs can be placed either way around. Solder in position and cut the legs short.

Infra-red Transmitter (IR TX)

Note you may only require one IR TX (although two are provided). In this case you may decide to use a coloured LED (not supplied) instead of the infra-red LED on the second board to make a different 'home made' output module.

In this case always use the IR LED in the position nearest the black terminal on the bric connector. This is so that it fits correctly on rear connectors C.4 or B.0

Place the 33 resistor (orange orange black gold) over the black text on the top of the board so that the legs come out the solder pads on the bottom of the board. Resistors can be placed either way around. Solder in position and cut the legs short.

Carefully bend the legs of the LED so that it points out at 45 degrees to the PCB. The IR LED on the first board should always be in the position nearest the black terminal on the bric connector point. If using two IR LEDs make sure they point in opposite directions on the two boards. The long leg (anode) of the LED must be placed in the red hole. Solder in position and cut the legs short.



The full assembly instructions and program examples are found in the Microbot manual which is a free download from:

www.rev-ed.co.uk/docs/bot120.pdf

Assembly 9 - Infra-red Receiver (IR RX) Module

The infra-red (IR RX) receiver module consists of eight parts, an IR circuit board which has an infra-red receiving sensor mounted upon it, a connecting bric, plus three bolts and three nuts to hold it in place.

Insert the three nuts into the connecting bric

Align the IR receiver circuit board with the right connector at the rear of your Microbot motherboard (position C.0), fit the connecting bric and bolt into place.




Assembly 10 - Infra-red Transmitter (IR TX) Module

The infra-red (IR TX) transmitter module consists of eight parts, an IR circuit board which has an infra-red transmitting LED mounted upon it, a connecting bric, plus three bolts and three nuts to hold it in place.

Insert the three nuts into the connecting bric

Align the IR transmitter circuit board with the connector at the rear of your Microbot motherboard, fit the connecting bric and bolt into place.

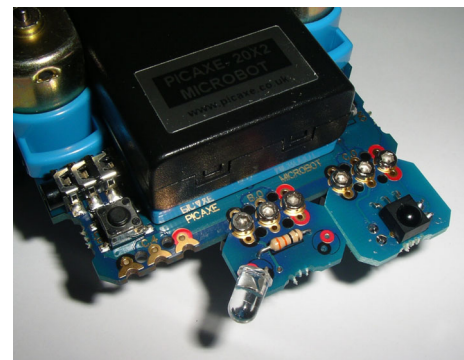

For Logicator the transmitter (IR TX) must be placed in the centre (B.0) position.
 For BASIC the transmitter (IR TX) can be placed in either position (B.0 or C.4).

The IR TX cannot be used to send infra-red signals to itself - it is only used to send signals to another Microbot, so that a group of Microbots can communicate between each other - e.g. to develop 'swarming' behaviours.

If you only have one Microbot you must use a TV style remote control (e.g. part TVR010A) to send the infra-red signals.



Using the TVR010A Infra-red TV Style Remote

Before use, the universal remote control must be programmed with the special 'Sony' transmit code.

1. Insert 2 AAA size batteries, preferably alkaline.
2. Press 'S' and 'B' at the same time. 'S' is in the centre of the arrows.
The top left red LED should light.
3. Press '0'. The LED should flash.
4. Press '1'. The LED should flash.
5. Press '3'. The LED should go out.
6. Press the red power button (top right).

Note that buttons A, C, D, E, F and G are for setting the remote control into different modes which are not required for using the Microbot - the Microbot only ever uses mode B. We recommend always pressing 'B' before use.

Avoid pressing these other letter buttons as this will accidentally set your remote into another mode. You can always return to the 'B' mode by pressing the B button.




Note that it is quite easy to accidentally press the F and G keys when using the arrow keys. If this happens you will need to press B again before the arrow keys will work as expected.

When a key is pressed on the remote control the red LED in its top left corner will light and flash and a number will be sent to the Microbot IR receiver. These numbers will correspond to keys pressed as follows:

Symbol KEY_POWER	= 21
Symbol KEY_UP	= 16
Symbol KEY_DOWN	= 17
Symbol KEY_RIGHT	= 18
Symbol KEY_LEFT	= 19
Symbol KEY_1	= 0
Symbol KEY_2	= 1
Symbol KEY_3	= 2
Symbol KEY_4	= 3
Symbol KEY_5	= 4
Symbol KEY_6	= 5
Symbol KEY_7	= 6
Symbol KEY_8	= 7
Symbol KEY_9	= 8
Symbol KEY_MINUS	= 98
Symbol KEY_0	= 9
Symbol KEY_PLUS	= 11
Symbol KEY_BAR	= 96
Symbol KEY_TENT	= 54
Symbol KEY_VERT_CROSS	= 37
Symbol KEY_DIAG_CROSS	= 20


NB: The six keys at the bottom of the remote are not used.

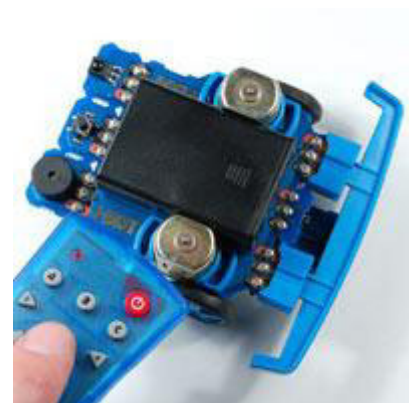

Programming Example 8 – Infra-red Receiver

The following program demonstrates waiting for an IR Remote Control key press and reporting what the key code value is of the key pressed.

Sample Logicator Flowchart File:
BOT120 INFRARED TEST.PLF

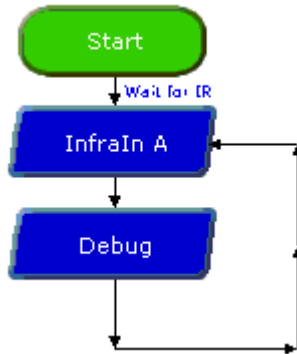


Sample BASIC File:
BOT120 INFRARED TEST.BAS

```

main:
  irin C.0,b1
  debug
  goto main
  
```

The following flowchart waits for a Remote Control key press and then selects what to do based upon the key pressed. The Microbot will continue to do as instructed until another key is pressed.

Sample Logicator Flowchart File:
BOT120 INFRARED.PLF

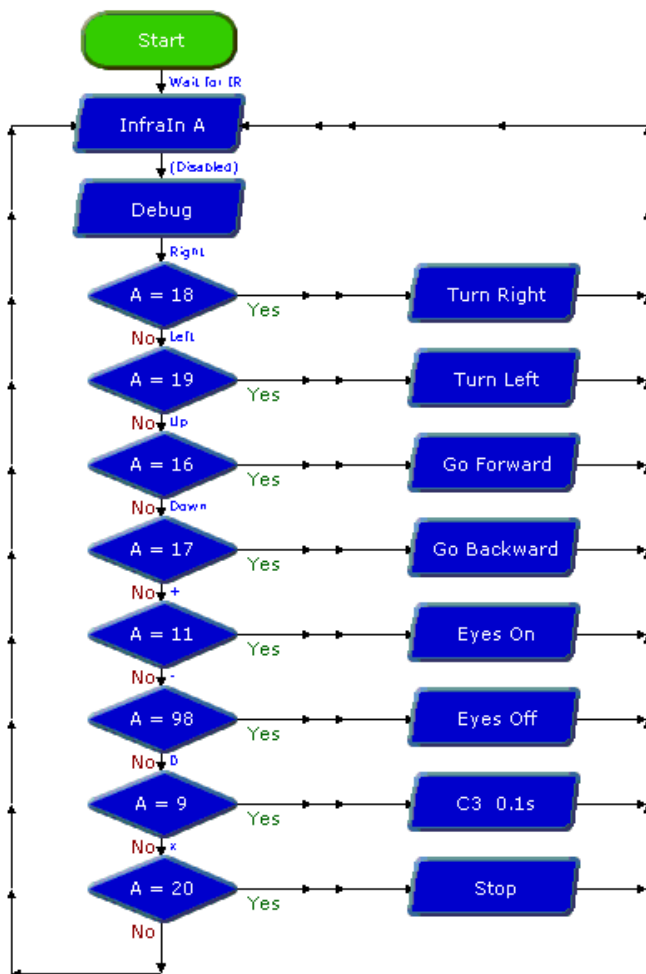

Sample BASIC File:
BOT120 INFRARED.BAS

```

symbol KEY_UP = 16
symbol KEY_DOWN = 17
symbol KEY_LEFT = 19
symbol KEY_RIGHT = 18
symbol KEY_MINUS = 98
symbol KEY_PLUS = 11
symbol KEY_DIAG_CROSS = 20


main:
  irin C.0, b1
  select case b1
    case KEY_UP
      forward A
      forward B
    case KEY_DOWN
      backward A
      backward B
    case KEY_LEFT
      backward A
      forward B
    case KEY_RIGHT
      forward A
      backward B
    case KEY_MINUS
      low B.1, B.3
    case KEY_PLUS
      high B.1, B.3
    case KEY_DIAG_CROSS
      halt A
      halt B
  end select
  goto main
  
```

Programming Example 9 – Infra-red Transmitter

By using the IR Transmitters it is possible for one Microbot to act like a Remote Control for another. By using the appropriate command it is possible to send what looks like a particular key press to every Microbot waiting to receive a Remote Control key press.

Note that each IR Transmitter is controlled independently (if two transmitters are used). To send a key press from both IR Transmitters it is necessary to send the appropriate command twice, once to one transmitter, a second time to the other.

To check the IR Transmitters are working fully you will need two Microbots, one sending and one receiving and reporting what it has received. The operation of the IR transmitters is invisible to the human eye but can usually be observed by using a PC webcam, mobile phone camera or camcorder.

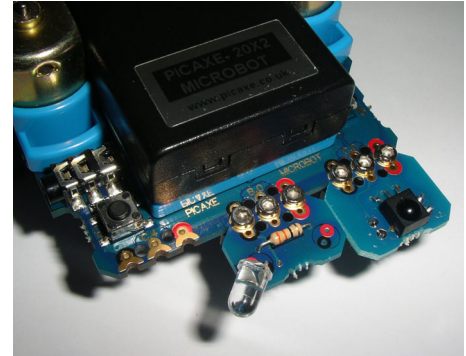


Take care not to place any webcam, digital camera or camcorder too close to the IR LEDs to view their operation as this may permanently damage the image sensors. Observing the IR LEDs in this manner is undertaken entirely at your own risk.

The following flowchart will use an IR transmitter connected to the centre rear connector of the motherboard (B.0) to act as an automated remote control which can control one (or more) other Microbot which has been programmed to respond to remote control key presses as in the previous infra-red receiving program.

The program repeatedly sends out a simulated up arrow press followed by a down arrow press every five seconds. The receiving Microbot will therefore move forwards for 5 seconds and then backwards for 5 seconds.

Sample Logicator Flowchart File:
BOT120 INFRA TRANSMIT.PLF

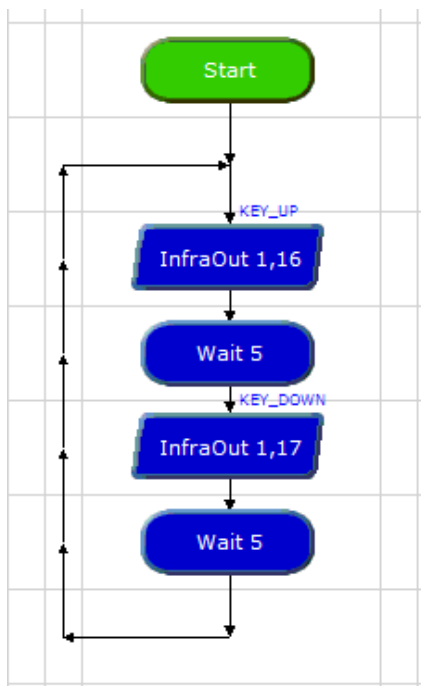

Sample BASIC File:
BOT120 INFRA TRANSMIT.BAS

```

symbol KEY_UP = 16
symbol KEY_DOWN = 17


main:
  irout B.0, 1, KEY_UP
  pause 5000
  irout B.0, 1, KEY_DOWN
  pause 5000
  goto main
  
```

Assembly 11 - LDR Light Sensor Modules

Each LDR Light Sensor module consists of eight parts, an LDR circuit board which has a LDR light sensor mounted upon it, a connecting bric, plus three bolts and three nuts to hold it in place.

Remove the front bumper if currently fitted. Take care to carefully store the small components of the bumper so they are not lost.

Connect the two LDRs to the front left and front right positions.

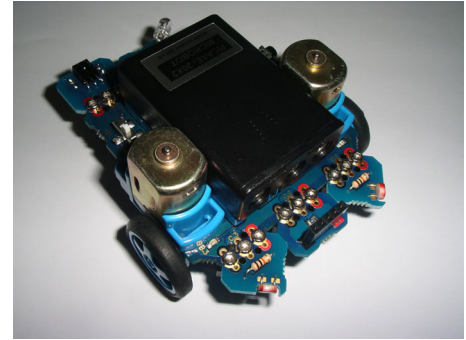


Programming Example 10 – Testing LDR Light Sensors

If the two light-sensitive LDR sensors have been fitted in their normal positions, connected to the front left connection and front right connection and facing out from the Microbot, the left LDR sensor will be connected to pin C.1 which is analogue channel 9, and the right LDR sensor will be connected to pin C.3 which is analogue channel 7.

To determine the light intensity on each LDR perform an analogue read of the appropriate analogue channel; channel 9 for the left LDR, channel 7 for the right LDR. The LDR sensors will give a higher reading for a higher light intensity.

Sample Logicator Flowchart File:
BOT120 LDR TEST.PLF

Sample BASIC File:
BOT120 LDR TEST.BAS

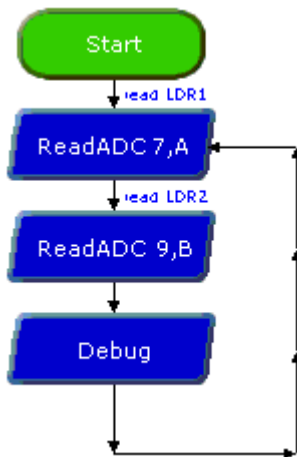


```

main:
    readadc 7,b7
    readadc 9,b9
    debug
    goto main
    
```

Programming Example 11 – Light Follower

The following program demonstrates using your Microbot as a light following robot.

The left LDR sensor should be fitted to the front left connection point of the motherboard (Pin C.1 / ADC 7) and the right LDR sensor should be fitted to the right connection point (pin C.3 / ADC 9). To do this you will need to remove the bumper if it was previously connected.

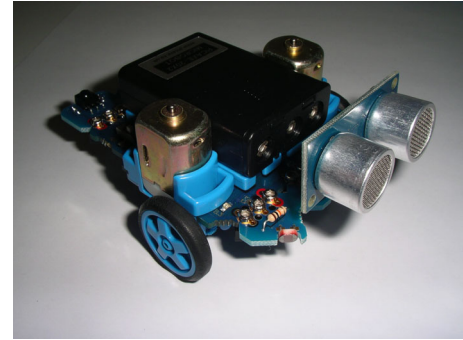


An optional SRF05 Ultrasound Module may also be connected to the centre front connection point of the motherboard (pin C.2)

Your Microbot will read the light intensity on each of its LDRs then check to see if there is any obstacle in front of itself. When there is an obstacle, your Microbot will stop the motors and it will wait until the obstacle is removed.

When there is no obstacle, your Microbot will determine which of the left or right LDR sensors has the greatest level of light shining on them and determine how much greater the light is in one LDR than the other. When there is a significant difference in light level your Microbot will turn in the direction of the brightest, when there is no significant difference between the light levels it will move forwards towards the light.

Being attracted to light is also very similar to being repulsed by darkness. If one LDR enters shade and the light level on one LDR is significantly less than the other then this is the same as the other LDR is brighter. Your Microbot will turn towards the brighter light and away from the darkness.

Sample Logicator Flowchart File:
BOT120 LIGHT FOLLOWER.PLF

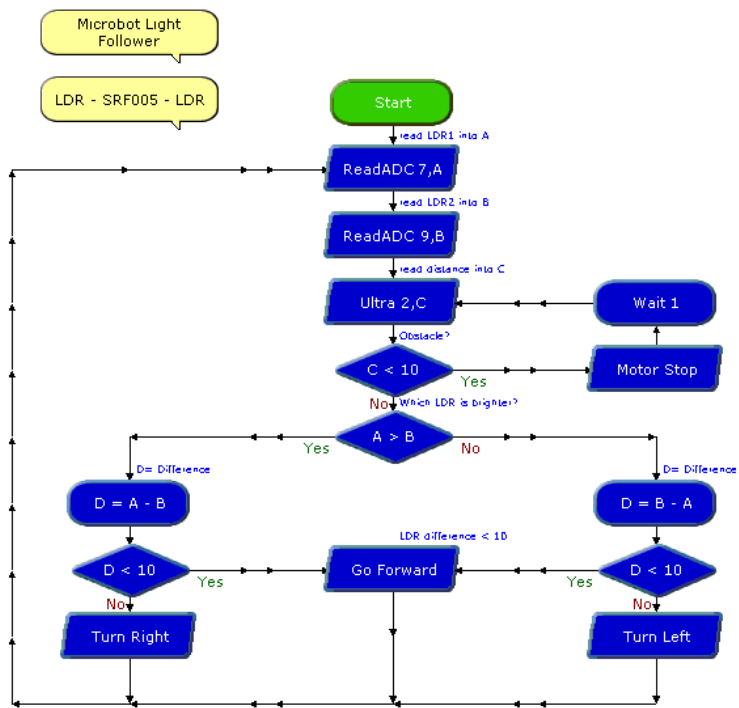

Sample BASIC File:

BOT120 LIGHT FOLLOWER.BAS

```

symbol distance          = w0 ` b1:b0
symbol leftEyeLevel      = b2
symbol rightEyeLevel     = b3
symbol brightnessDifference = b4

` Configure eye sensors as analogue inputs
adcsetup = %1010000000

main:
` Read the eye sensor brightness levels
readadc 7, leftEyeLevel
readadc 9, rightEyeLevel

` Determine if there is an obstruction. Stop and wait if
` there is an obstruction. This uses the SRF005 (if fitted).
do
  pause 10
  pulsout C.2, 2
  pulsinc C.2, 1, distance
  distance = distance * 5 / 58
  ff distance < 10 then
    halt A
    halt B
    pause 1000
  end if
loop until distance >= 10

` Determine which eye has the greatest level of light on it
if leftEyeLevel > rightEyeLevel then
  brightnessDifference = leftEyeLevel - rightEyeLevel
  if brightnessDifference >= 10 then ` Turn left
    halt A
    forward B
  else ` Go forward
    forward A
    forward B
  end if
else
  brightnessDifference = rightEyeLevel - leftEyeLevel
  if brightnessDifference >= 10 then ` Turn right
    forward A
    halt B
  else ` Go forward
    forward A
    forward B
  end if
end if

` Repeat this forever
goto main

```

SRF005 Ultrasonic Range Finder

Qty	Description	Replacement order code
1	Ultrasonic Range Finder	SRF005
1	5 way right angle header	CON042
1	5 way straight socket	CON041

Also required (supplied in starter pack on motherboard panel)



1	SRF005 module PCB	BOT120
---	-------------------	--------

Assembly:

Note that the bottom of the PCB is marked with the gold text 'SRF005'.

Place the straight socket onto the top of the PCB, so that the metal pins come out the bottom. Solder in position.

Place the short legs of the right angle header through the SRF005 from the rear. Solder in position (the solder joints should be on the same side as the big silver ultrasonic transceivers).

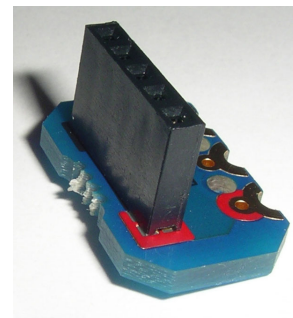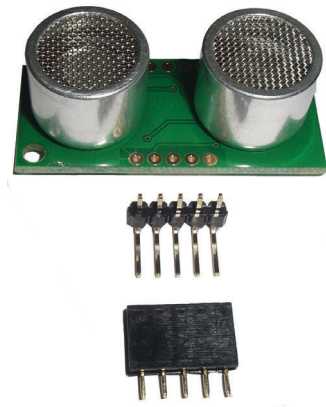

Assembly 12 - SRF005 Ultrasonic Range Finder


The SRF005 module is normally connected to the centre position at the front of the microbot (pin C.2). However it could be used on any of the front positions.



The SRF005 module **MUST NOT** be used at the rear of the microbot with the sensor facing forwards, as this would reverse the electrical connection to the sensor, causing permanent damage. However the SRF005 module may be used at the rear of the module with the sensor facing backwards.

The SRF005 module **MUST NOT** be used at the same time as the line tracker module. However it is possible to use both the SRF005 (via the adapter PCB) and the line tracker at the same time by using the BOT123 Servo upgrade pack. See the BOT123 section for more details.


The SRF005 module may be used at the same time as the pen holder module.

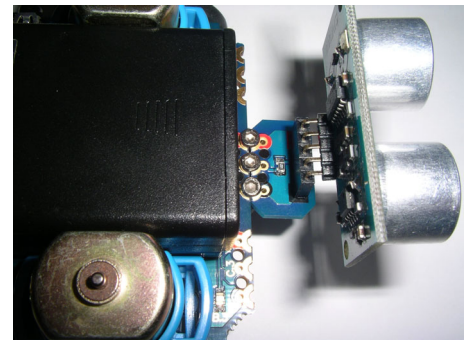

Programming Example 12 – Testing SRF005

The following program will repeatedly initiate a triggering of the ultrasound module and return the distance to an object in front of your Microbot which will be shown in the variable on the Debug screen.

Sample Logicator Flowchart File:
BOT120 SRF005 TEST.PLF

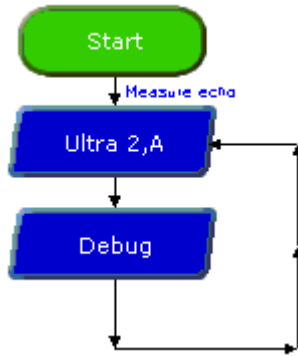

Sample BASIC File:
BOT120 SRF005 TEST.BAS

```

#terminal 9600
main:
  pause 10
  pulsout C.2, 2
  pulsln C.2, 1, w0
  w1 = w0 * 5 / 58 ; Convert to cm
  w2 = w0 * 5 / 148 ; Convert to inches
  sertxd("Distance is ", #w1, "cm",CR,LF)
  sertxd("Distance is ", #w2, "inch",CR,LF)
  goto main
  
```

Understanding how the SRF005 sensor works.

For Logicator flowcharts use of the SRF005 is very simple, as all the 'hard work' is carried out automatically via the 'ultra' command cell. The BASIC program is slightly more complex.

The Ultrasound Module is controlled by a single pin which both initiates an ultrasonic 'ping' and receives an echoed 'pong'. The length of the returned pulse corresponds to the distance to the object.

The millisecond pulse length value returned by the SRF005 command can be converted to centimetres by dividing by 58 and converted to inches by dividing by 148. As the base unit of the PICAXE-20X2 'pulsin' command is actually 5ms, the pulsln value also needs to be multiplied by 5 prior to dividing.


Note that there should be at least a 10ms pause between each triggering of the SRF005 Ultrasound Module.

Programming Example 13 – Using the SRF005

The following program will move the Microbot forwards until it detects an obstacle 5 cm in front of it. It will then stop until the obstacle is removed.

Sample Logicator Flowchart File:
BOT120 SRF005.PLF

Sample BASIC File:
BOT120 SRF005.BAS

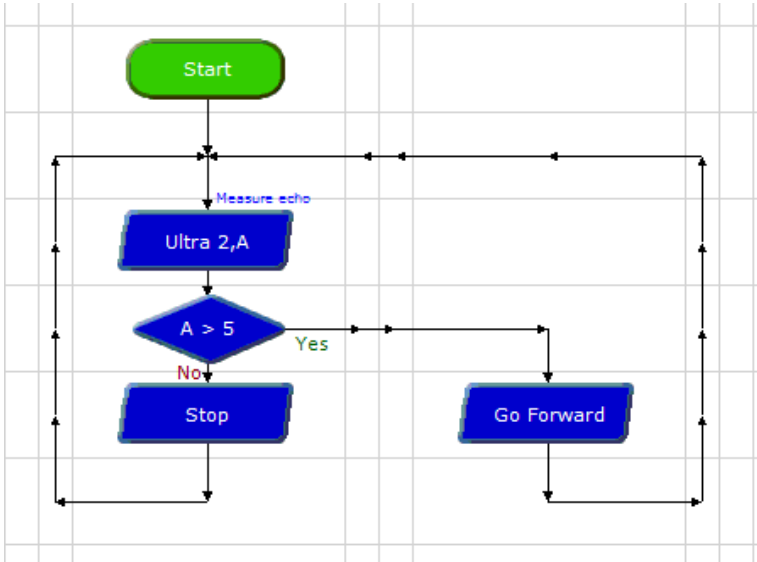

```

main:
  pause 10
  pulsout C.2, 2
  pulsins C.2, 1, w0
  w1 = w0 * 5 / 58 ; Convert to cm
  if w1 > 5 then
    forward A
    forward B
  else
    halt A
    halt B
  end if
  goto main
  
```


BOT123 Servo Upgrade Pack

BOT123	Microbot Servo Pack (self assembly kit)
BOT123A	Microbot Servo Pack (pre-assembled, no soldering)
BOT123N	Microbot Servo Pack (self assembly kit, no servo included)

Qty	Description	Replacement order code
1	<i>PCB panel containing:</i>	
	Servo module PCB x 2	BOT123
	SRF005 servo adapter PCB	BOT123
3	3 way straight header *	CON035
1	5 way straight socket	CON041
1	220 resistor (red red brown gold)	RES-220
1	100mm servo cable	CAB103
2	bricks	BOT125
10	bolts	BOT125
7	nuts	BOT125
1	miniature servo (not included in part BOT123N)	GBX013

Also available (supplied in starter pack on motherboard panel)

1	Servo module PCB	BOT123
1	3 way straight header	CON035

** Please note that the 3 x 3 way headers may sometimes be supplied as 1x10 way header which needs to be simply snapped into 3 x 3 way lengths.*

Assembly:

Carefully remove all PCBs from the panels by applying a gentle rocking motion to the PCBs until they snap out of the panel. Note that in each case the bottom of the PCB is marked with the gold text label (e.g. SERVO).

Servo Module PCB

Place the 3 way header onto the top of the PCB, so that the pins come out the bottom. Solder in position.

SRF005 Servo Adapter

Place the 220 resistor (red red brown gold) over the black text on the top of the board so that the legs come out the solder pads on the bottom of the board. Resistors can be placed either way around. Solder in position and cut the legs short.

Place the 3 way header onto the top of the PCB, so that the pins come out the bottom. Solder in position.

Place the 5 way socket onto the top of the PCB, so that the pins come out the bottom. Solder in position.

Assembly 13 - BOT123 Servo / SRF005 Servo Adapter

The SRF005 adapter is generally used in two ways:

- 1) mounted on top of the GBX013 servo, which is in turn stuck (e.g. using a sticky pad) to the top of the battery box.
- 2) Mounted directly on top of the battery box without a servo. This is generally to allow the SRF005 to connect to a rear connection point but still face forwards – e.g. to allow the SRF005 and the line follower modules to be used at the same time.


The servo modules can be used on any of the motherboard connection positions. However the 'servo' command can only be used on the centre rear position B.0 (pulsout commands can be used on any other position). Therefore it is recommended to normally use the servo in the centre rear position and the SRF005 adapter PCB, connected via the cable, to either of the two outer rear connectors.

Programming Example 14 – Using Servos

With the servo connected to the centre rear connector of the motherboard it will be controlled by output Pin B.0.

The following program will turn a connected servo from left to right switching every two seconds.

Sample Logicator Flowchart File:
BOT120 SERVO TEST.PLF

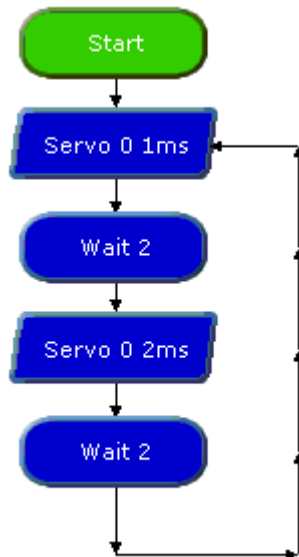

Sample BASIC File:
BOT120 SERVO TEST.BAS

```

main:
servo B.0, 100
pause 2000
servo B.0, 200
pause 2000
goto main
    
```


The full assembly instructions and program examples are found in the Microbot manual which is a free download from:

www.rev-ed.co.uk/docs/bot120.pdf

The following program uses the 'pulsout' command to generate the servo pulse required to position it and the 20ms frame repeat rate the servo requires. This program also controls a servo connected to Output Pin B.0 - and it would normally be recommended to use the 'servo' command to accomplish that! However this program is useful as it demonstrates how to control a servo when it is connected to any of the six connection positions on the Microbot (servo command only works in position B.0).

Sample Logicator Flowchart File:
BOT120 SERVO TEST2.PLF

Sample BASIC File:
BOT120 SERVO TEST2.BAS

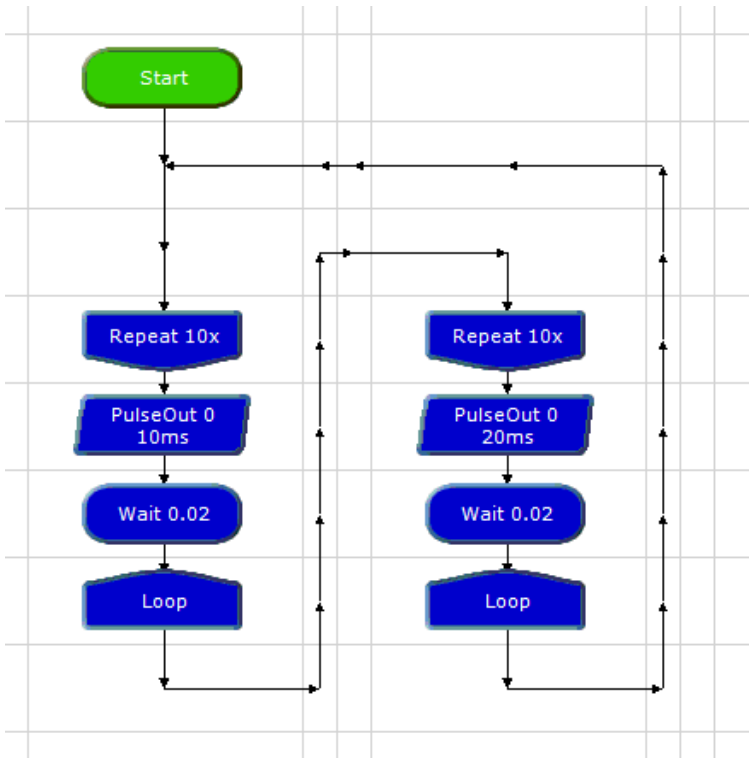

```

main:
  for b1 = 0 to 10
    pulsout B.0, 100
    pause 20
  next
  for b1 = 0 to 10
    pulsout B.0, 200
    pause 20
  next
  goto main
  
```

BOT127 Line Tracker / LED Upgrade Pack

Qty	Description	Replacement order code
1	<i>PCB panel containing:</i> Line Tracker Module Quarter Panel Adapter Module LED module	BOT127 BOT127 BOT127
3	14mm posts	BOT126
2	brics	BOT125
10	bolts	BOT125
7	nuts	BOT125



Assembly:

Carefully remove all PCBs from the panels by applying a gentle rocking motion to the PCBs until they snap out of the panel. Note that in each case the bottom of the PCB is marked with the gold text label (e.g. LED).

Please see the Line Follower section of the main Microbot manual for assembly information and programming details for the Line Tracker Module.



The LED module provides an additional LED for connection to your microbot – for instance as a ‘reversing’ light. It may be connected to any of the motherboard connection points. The LED module is switched on and off in the same way as the main motherboard LEDs – see the ‘LED Eye’ section of the Microbot manual for more details.



The full assembly instructions and program examples are found in the Microbot manual which is a free download from:

www.rev-ed.co.uk/docs/bot120.pdf

Appendix 1 - Home Made Sensors

For advanced roboteers with appropriate electronics experience it is possible to build your own sensors for your Microbot. The easiest way to do this is to use the servo connector circuit board provided with the BOT120 motherboard which has a three pin header which provides direct links to the connection points on the motherboard.

One servo connector is provided within the BOT120 starter pack. Two further servo connectors are also available within the BOT123 servo 'add-on' pack.


Note the order of the connection point contacts on the servo header:

Pin 1 (Gold)	Signal	Input or Output
Pin 2 (Red)	+V	Power from motherboard (4.5V)
Pin 3 (Black)	0V	0V from motherboard


Alternately a bric/support post combination may be used as shown. This is basically a reverse (facing up rather than down) copy of the Line Tracker mounting arrangement. This will provide 3 posts on a 5mm pitch that can be used to connect to your own PCB. On your PCB use three 3mm diameter pads (with a 2.1mm hole) spaced at 5mm centres.

Note that the motherboard has 220 ohm series protection resistors on all signal lines on the motherboard (see the circuit diagram in the appendix 2). This must be accounted for when designing home made circuits.


The maximum output sink/source current of any i/o pin is 20mA, with a maximum total load of 90mA for all output devices. Exceeding these values may permanently damage your Microbot.

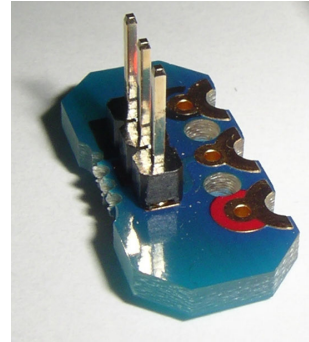


Appendix 2 - BOT120 Microbot Motherboard Schematic

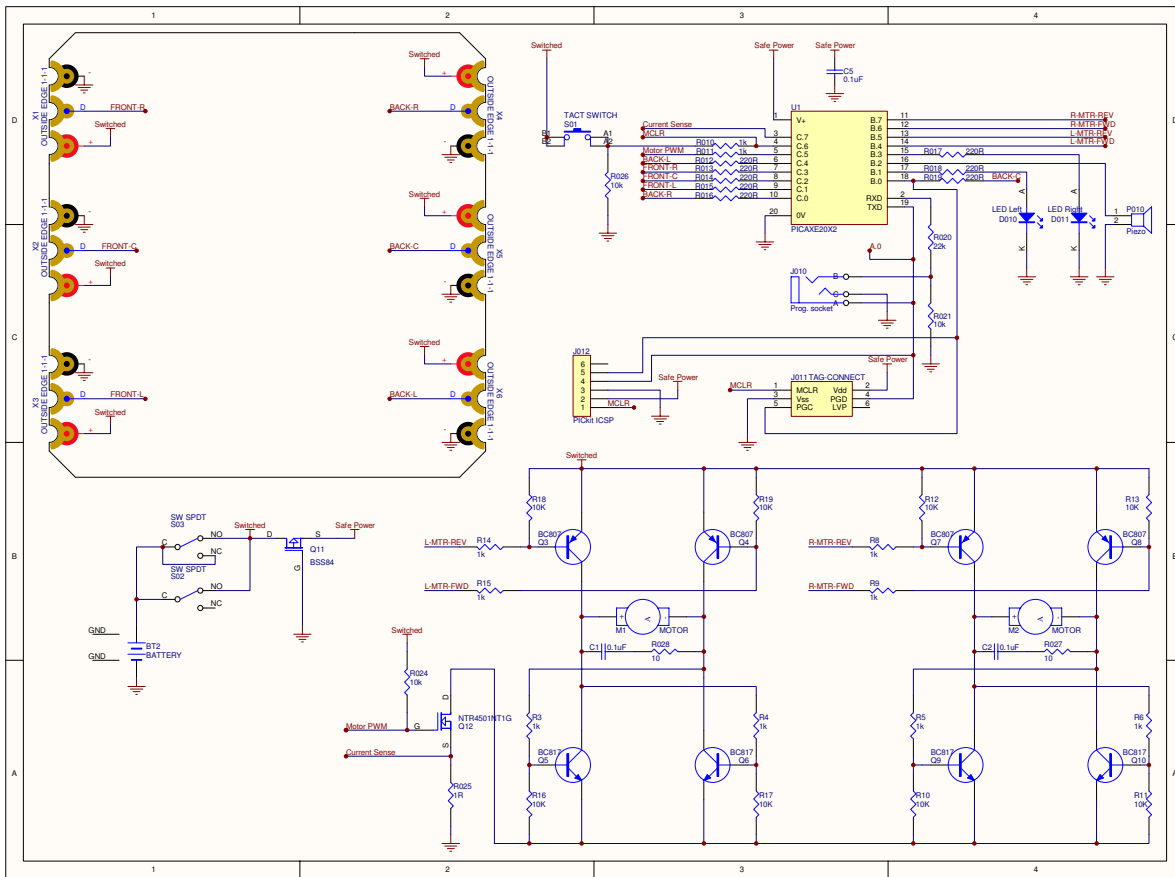


Appendix 3 - BOT120 Sensors Schematic

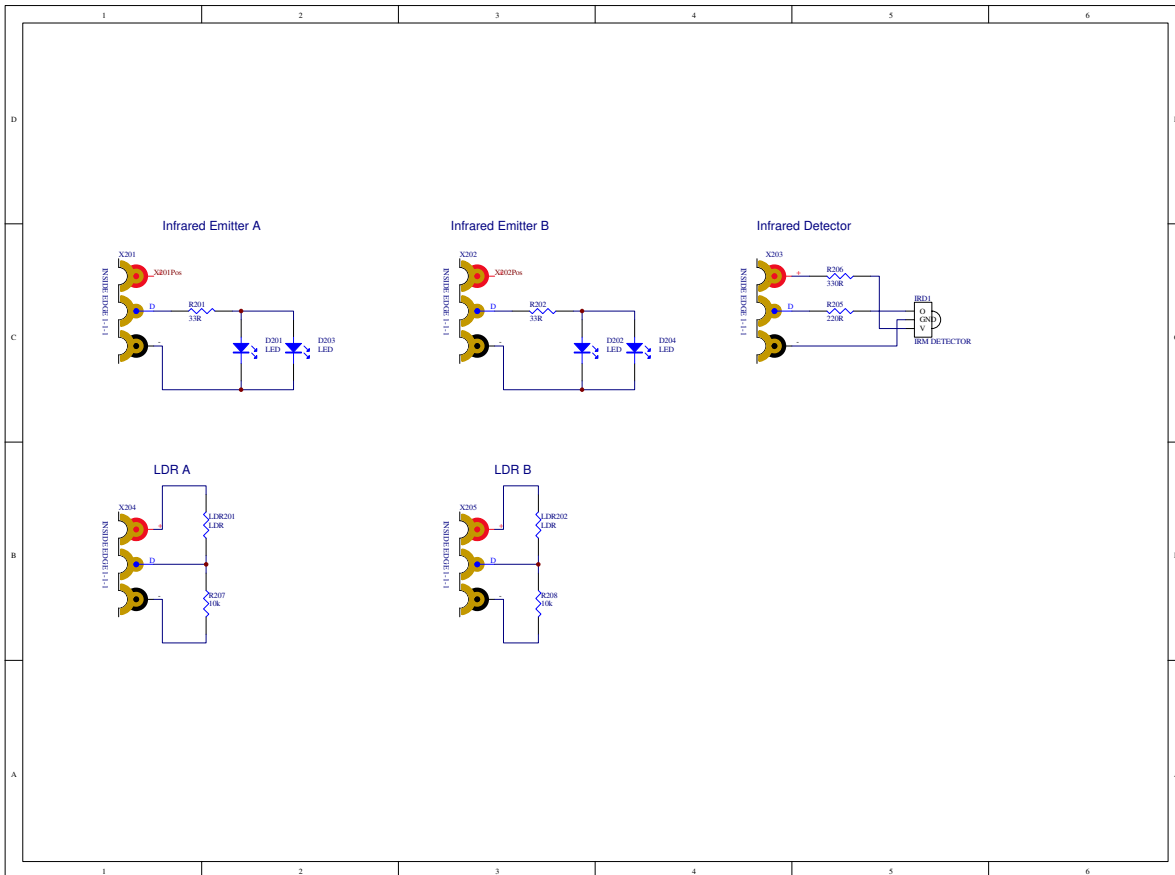

Appendix 4 - BOT121 Sensors Pack Schematic

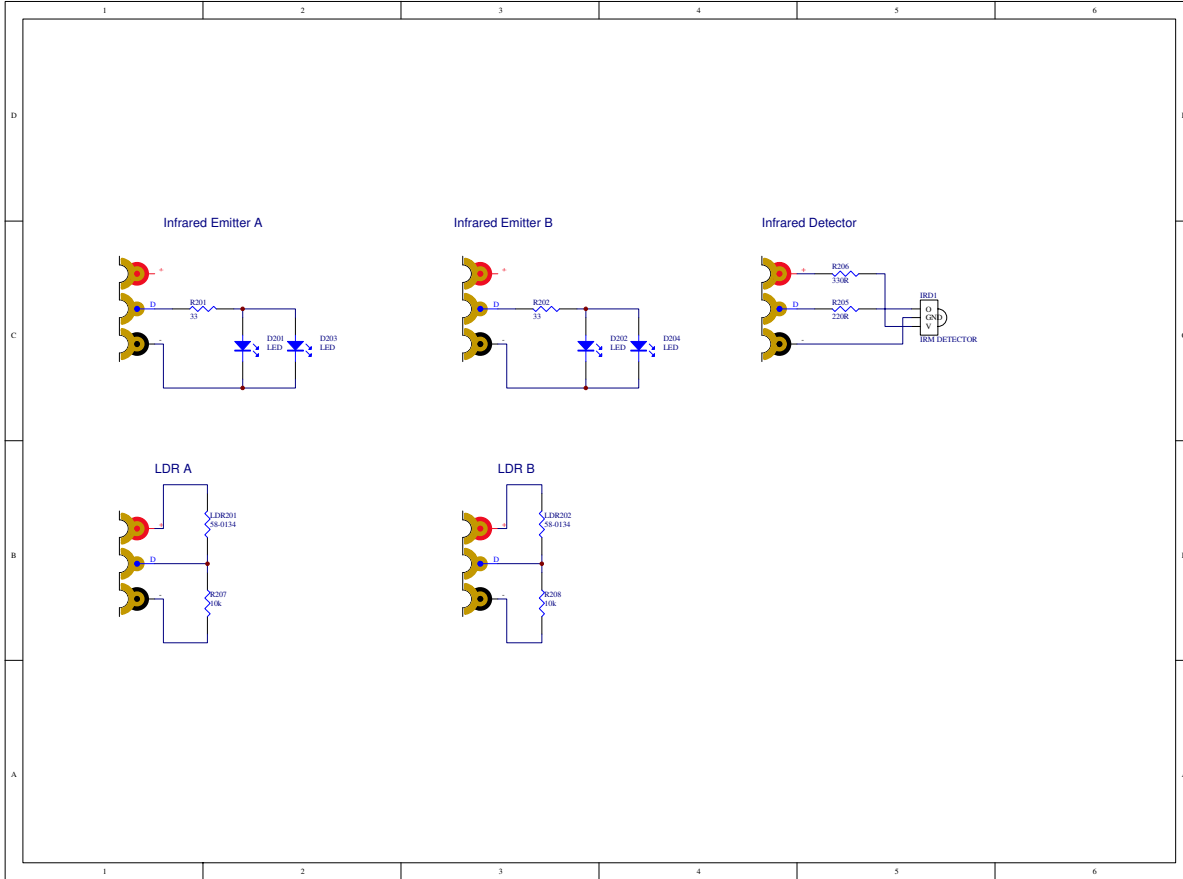

Appendix 5 - BOT123 Servo Pack Schematic

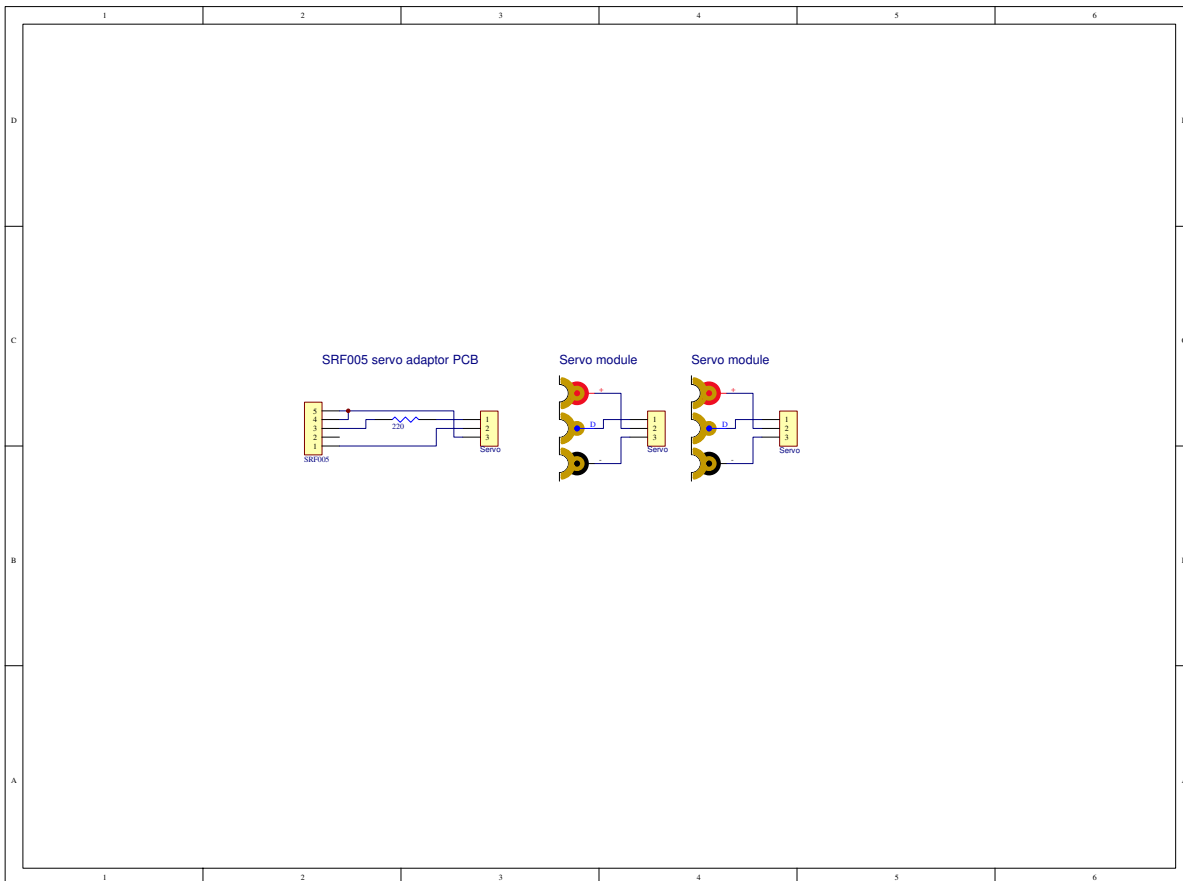

Appendix 6 - Advanced PIC (Non-PICAXE) Programming

For more advanced roboters, the Microbot has a Microchip PIC compatible ICSP connector which allows the PIC microcontroller to be programmed directly in assembly code or C.



Note that if the ICSP programming capability is used, the PIC18F14K22 which the PICAXE 20X2 is based upon will have its PICAXE firmware permanently erased and it cannot be restored later. This will mean the ability to program from Logicator for PICAXE and use of the BASIC programming language of the PICAXE Programming Editor and AXEpad will be PERMANENTLY lost – forever!

Therefore only use this system if you wish to exclusively use assembler or C programming with your Microbot.

To use the ICSP programming capability it is necessary to remove the battery box assembly and solder a six pin 0.1" header towards the rear of the Microbot. The header pins should be exposed beneath the Microbot to still be accessible when the battery box assembly is re-fitted.



Alternately a 'tag-connect' (www.tag-connect.com) style programming probe may be used with a compatible PIC ICSP programmer.

ICSP programming will also require a Microchip compatible ICSP programmer such as the PICKit2 or PICKit3, any additional ICSP connecting cables, plus the development tools to produce loadable .HEX files and to control the ICSP programmer itself.

Please note that Revolution Education Limited only provides support for the BOT120 Microbot PICAXE product and does not provide any development support for Assembly Language or C nor provide technical support for any third-party development tools, software or hardware.

PIC18F14K22 Input/Output Pin Connections

RA0	PGD	Serial Output (Download)
RA1 / AN1	PGC	Rear Centre Connector
RA2		Left LED
RA3	VPP / MCLR	Push Button
RA4 / AN3		Motor Current Sense
RA5		Serial Input (Download)
RB4		Left Motor Reverse (active low)
RB5		Right Motor Forward (active low)
RB6		Right Motor Reverse (active low)
RB7		Rear Right Connector
RC0		Piezo Sounder
RC1		Right LED
RC2		Left Motor Forward (active low)
RC3 / AN7		Front Right Connector
RC4		Rear Left Connector
RC5 / CCP1		Motor PWM (speed control)
RC6 / AN8		Front Left Connector
RC7 / AN9		Front Centre Connector

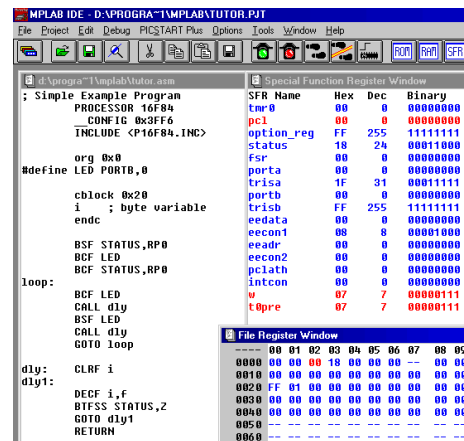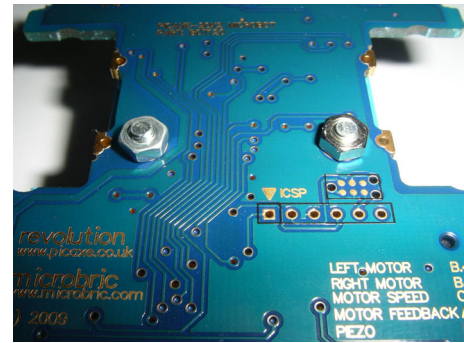

Appendix 7 - Copyright and Trademarks

The PICAXE system, BOT120 Microbot and BOT120 manual is
(c) Copyright 2010.

This manual may be duplicated for non-profit, educational use in
registered schools, colleges and universities.

PICAXE® products are developed and distributed by
Revolution Education Ltd
Unit 2, Bath Business Park, Foxcote Ave, Bath, BA2 8SF, UK
www.picaxe.co.uk

BOT120 PICAXE Microbot is a joint venture between Revolution
Education Ltd and Microbric Pty Ltd.
Microbric Pty Ltd
PO Box 8052, Grange, SA 5022, Australia
www.microbric.com

PICAXE® is a registered trademark licensed by Microchip Technology Inc.
Revolution Education is not an agent or representative of Microchip
and has no authority to bind Microchip in any way.

BOT110 Versabot - Microbot's 'big brother!'

If you enjoyed Microbot you may also be interested in Versabot -
Microbot's more powerful big brother! Versabot has a larger PICAXE-
28X2 motherboard to allow use of more modules and features larger
wheels and more powerful motors for added speed and power!

Modules are interchangeable between the two models so you can
combine kits for more interesting creations!

Fore more details visit www.picaxe.co.uk or contact your local reseller,
asking for part 'BOT110 PICAXE-28X2 Versabot'.

