
Kraftform Kompakt 60, 62



ANTI ROLL-OF



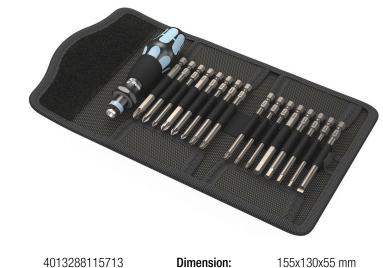

4013288115713
05071116001
KK 60 Stainless

3288115713 Dimension: 171116001 Weight: 60 Stainless Country of origin: Customs tariff number:

Solution to the	extraneous rust	· nrohlem·	facton	etainless	SULANO	with	stainless tools
	0/11/01/00/03 10/03		laston	314111033	0010100	VVILII	314111033 10013

- Vacuum ice-hardening provides the required hardness and strength
- Handle/Interchangeable blade system for rapid exchange of the blade
- Rapidaptor technology for rapid bit change
- Storage and transport in a robust belt pouch

Pouch with bits in a length of 89 mm. Includes Kraftform holder 3816 R with Rapidaptor quick-release chuck and multi-component Kraftform handle for low-fatigue working. Stainless design to prevent the formation of extraneous rust.


534 g

82079030

CZ

Kraftform Kompakt 60, 62

Content:

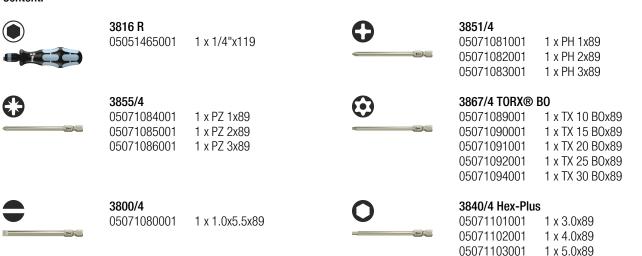

Screw stainless steel together with stainless steel!

Vacuum ice-hardened



Solution to the rust problem: screw stainless steel together with stainless steel! Wera stainless steel tools are manufactured out of stainless steel so unsightly rust can be avoided.



The stainless steel tools from Wera are vacuum ice-hardened and have the hardness and strength needed for screw connections. There are no limitations to the industrial applications they are suitable for. Handle/interchangeable blade system

05071104001



The handle/interchangeable blade system allows rapid exchange of the blades required for a wide range of applications.

Chuck-all

1 x 6.0x89



The Rapidaptor quick-release chucks hold $\frac{1}{4}$ " DIN ISO 1173-C 6,3 and E 6,3 as well as Wera series 1 and 4 bits.

Kraftform Kompakt 60, 62




Rapid-in and self-lock

Rapid-out



The bit can be pushed into the adaptor without moving the sleeve. The lock is activated automatically as soon as the bit is applied to the screw. Bits are held securely and wobble-free.

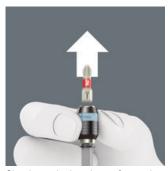

Simply push the sleeve forward to change the bit. The spring mechanism lifts the bit off the magnet and unlocks the tool. The bit can be easily removed. The rapid-out function makes it easy to remove even the smallest bits without extra tools.



Prevents hand injuries

The outstanding design of the Kraftform handle that fits perfectly into the hand prevents hand injuries such as blisters and calluses.

Storage and transport



The tools can be stored and carried in a robust belt pouch, keeping them always to hand.